
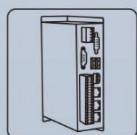



Network Motion Control Card

ECI3808


This Manual is Mainly for ECI3600, ECI3602, ECI3606, ECI3608,
ECI3800, ECI3802, ECI3806, ECI3808.

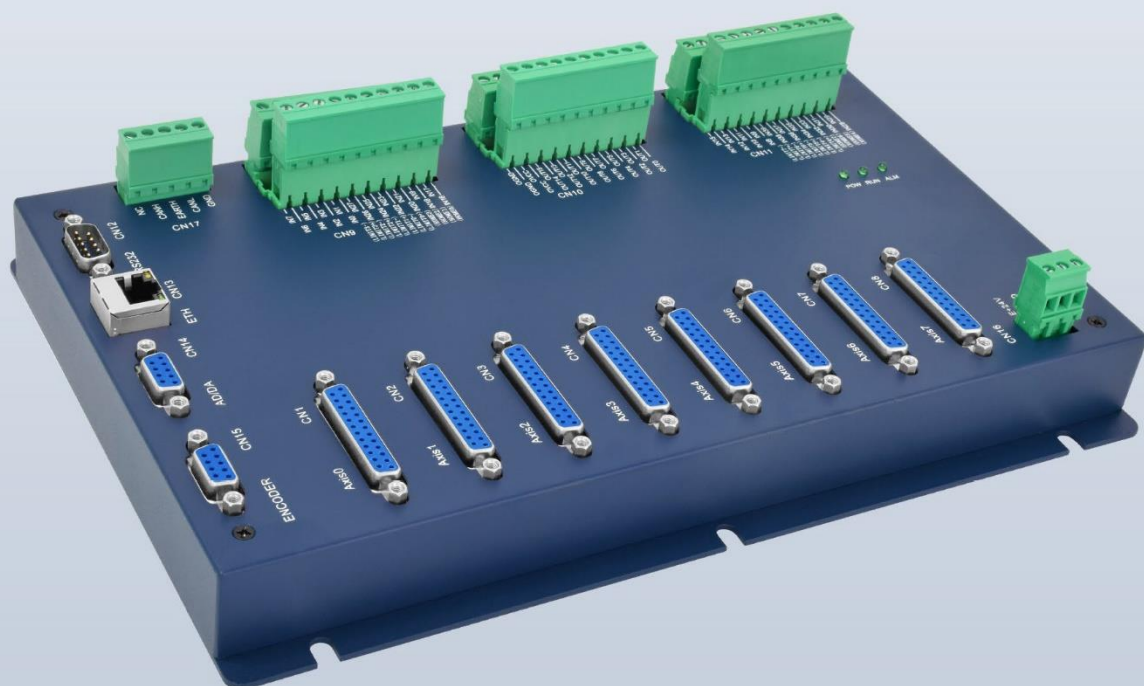


Vision Motion
Controller

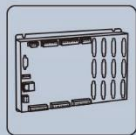

Motion
Controller

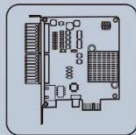

Motion
Control Card

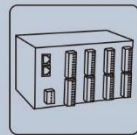

IO Expansion
Module



HMI

Statement

Thank you for choosing our Zmotion products. Please be sure to read this manual carefully before use so that you can use this product correctly and safely. Zmotion is not responsible for any direct or indirect losses caused by the use of this product.

The copyright of this manual belongs to Shenzhen Zmotion Technology Co., Ltd. And reproduction, translation, and plagiarism of any content in this manual in any form is strictly prohibited without the written permission of Zmotion.

The information in this manual is for reference only. Due to design improvements and other reasons, Zmotion reserves the right of final interpretation of this information! Contents are subject to change without prior notice!

➤ Notes

In order to prevent possible harm and damage caused by incorrect use of this product, the following instructions are given on matters that must be observed.

■ Danger

| | |
|--|--|
| Do not use it in places with water, corrosive or flammable gases, or near flammable substances. | May cause electric shock, fire, damage, etc. |
| When installing or disassembling, make sure the product is powered off. | |
| Cables should be connected securely, and exposed parts that are energized must be insulated by insulators. | |
| Wiring work must be performed by professionals. | |

■ Notes

| | |
|---|---------------------------------------|
| It should be installed within the specified environmental range. | May cause damage, mis-operation, etc. |
| Make sure there are no foreign objects on the product hardware circuit board. | |
| After installation, the product and the mounting bracket should be tight and firm. | |
| After installation, at least 2-3cm should be left between the product and surrounding components for ventilation and replacement. | |
| Never disassemble, modify, or repair it by yourself. | |

Content

| | |
|--|----|
| Chapter I Production Information..... | 5 |
| 1.1. Product Information | 5 |
| 1.2. Function Features..... | 5 |
| 1.3. System Frame..... | 6 |
| 1.4. Hardware Installment..... | 6 |
| Chapter II Product Specification | 9 |
| 2.1. Basic Specification..... | 9 |
| 2.2. Nameplate & Models | 10 |
| 2.3. Interface Definition..... | 11 |
| 2.4. Work Environment | 12 |
| Chapter III Wiring & Communication | 13 |
| 3.1. Power Input Interface..... | 13 |
| 3.1.1. Power Supply Specification | 13 |
| 3.2. CAN Interface..... | 13 |
| 3.2.1. CAN Communication Specification & Wiring..... | 14 |
| 3.2.2. Basic Usage Method | 16 |
| 3.3. RS232 Serial Port..... | 17 |
| 3.3.1. RS232/RS422 Interface Specification & Wiring..... | 17 |
| 3.3.2. Basic Usage Method | 18 |
| 3.4. IN Digital Input & High-Speed Latch Port | 19 |
| 3.4.1. Digital Input Specification & Wiring | 20 |
| 3.4.2. Basic Usage Method | 21 |
| 3.5. OUT: Digital Output & PWM Terminal | 22 |
| 3.5.1. Digital Output Specification & Wiring | 23 |
| 3.5.2. Basic Usage Method | 24 |
| 3.6. AD/DA: Analog Input / Output | 25 |
| 3.6.1. Analog Input / Output Specification & Wiring..... | 25 |
| 3.6.2. Basic Usage Method | 26 |
| 3.7. ETHERNET | 26 |
| 3.8. ENCODER Auxiliary Encoder..... | 29 |
| 3.9. Axis Interface..... | 29 |

| | | |
|------------|---|----|
| 3.9.1. | AXIS Interface Signal Specification & Wiring..... | 31 |
| 3.9.2. | Basic Usage Method | 34 |
| Chapter IV | Expansion Module | 35 |
| 4.1. | CAN Bus Expansion Wiring..... | 35 |
| 4.2. | CAN Bus Expansion Resource Mapping | 36 |
| Chapter V | Programming..... | 42 |
| 5.1. | Program in RTSys Software | 42 |
| 5.2. | Upgrade Controller Firmware | 47 |
| 5.3. | Program in Host-Computer by PC Languages | 48 |
| Chapter VI | Operation and Maintain..... | 51 |
| 6.1. | Regular Inspection and Maintenance | 51 |
| 6.2. | Common Problems & Solutions | 52 |

Chapter I Production Information

1.1. Product Information

ECI is the abbreviation of the network motion control card model launched by Zmotion Technology.

ECI3808 supports up to 12 axes of linear interpolation, any circular interpolation, space arc, helical interpolation, electronic cam, electronic gear, synchronization follow, virtual axes setting, etc.

ECI3000 series **economical multi-axis motion control card** can be used in those pulse applications within 12 axes, such as, electronic semiconductor equipment (testing equipment, assembly equipment, locking equipment, soldering machine), dispensing equipment, assembly line, etc.


1.2. Function Features

- ◆ Up to 12 axes motion control (8-12 axes)
- ◆ Pulse output mode: pulse / direction or dual pulses.
- ◆ AXIS interface supports encoder position measurement, which can be configured as handwheel input mode.
- ◆ Maximum pulse output frequency of each axis: 10MHZ.
- ◆ 256 isolated inputs and 256 isolated outputs can be extended at most through CAN.
- ◆ Axis position limit signal / origin signal port can be configured as any input at will.
- ◆ The maximum output current of general digital outputs can reach 300mA, which can directly drive some kinds of solenoid valves.
- ◆ Support linear interpolation, any circular interpolation, helical interpolation of 12 axes

at most.


- ◆ Support electronic cam, electronic gear, position latch, synchronization follow, virtual axis setting, etc.
- ◆ A variety of program encryption methods to protect the intellectual property rights of customers.
- ◆ Support power failure detection and power failure storage.

1.3. System Frame

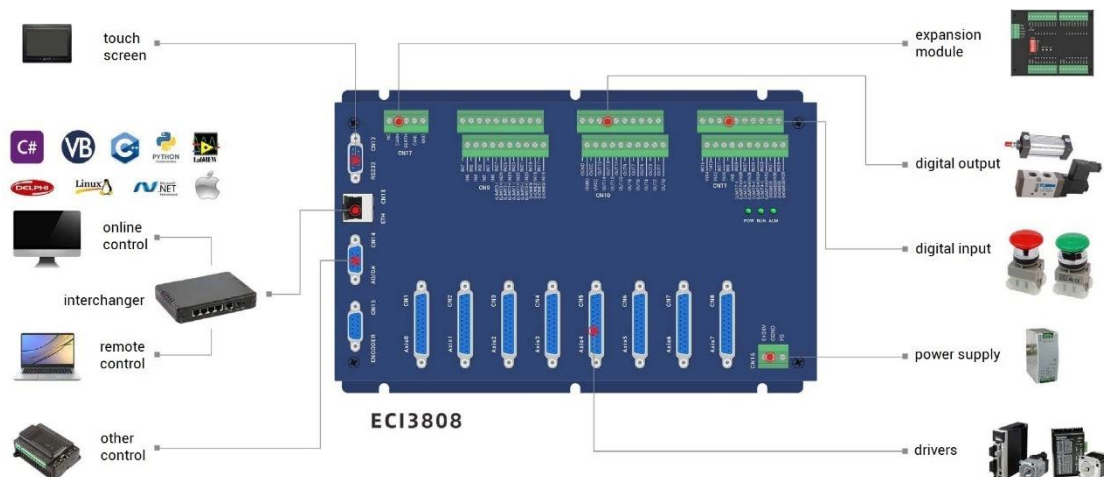

1.4. Hardware Installment

ECI3808 motion control card adopts the horizontal installation method of screw fixing, and each controller should be installed with 6 screws for fastening.

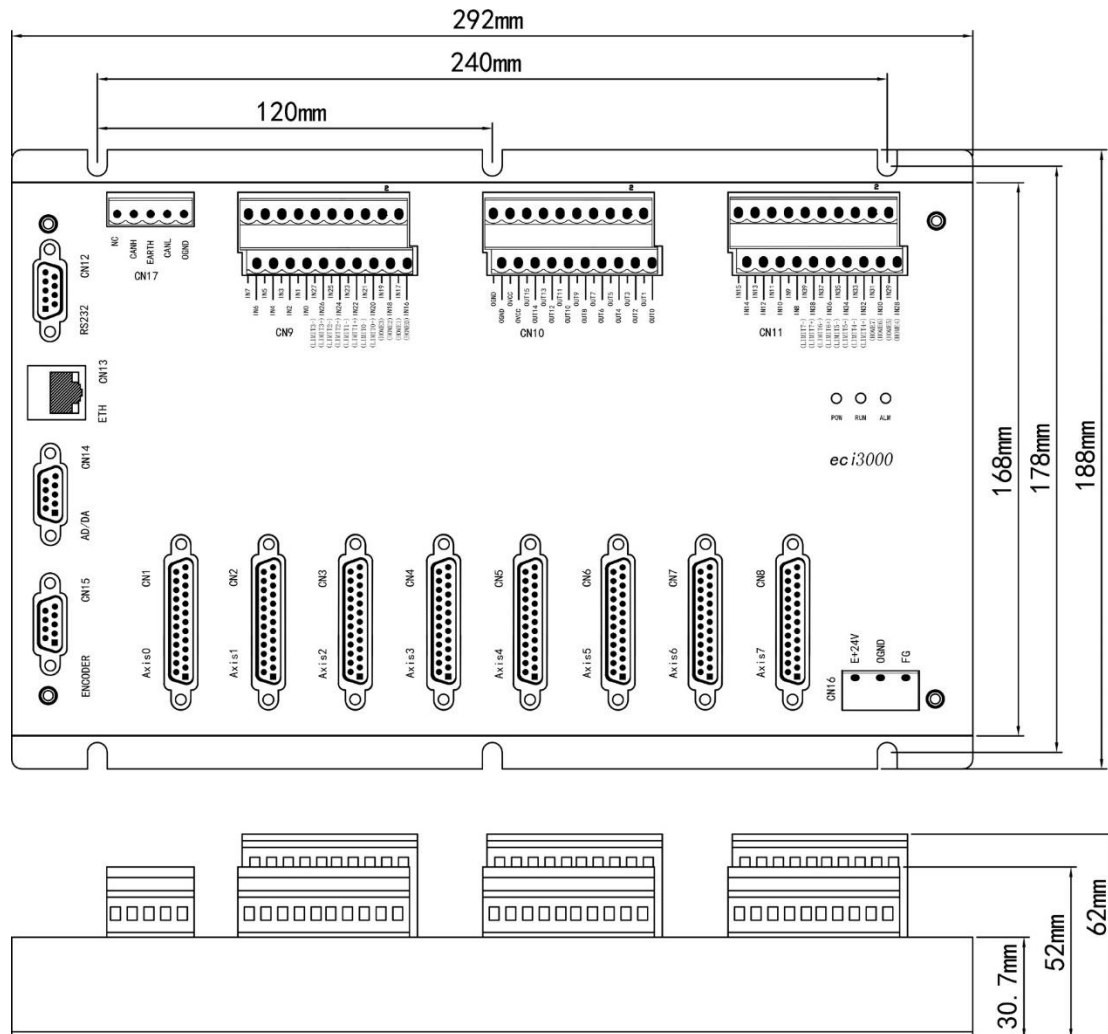

→ Unit: mm

→ Installment Hole Diameter: 5.5mm



Installation attention

- Non-professionals are strictly prohibited to operate. Specifically, professionals who had been trained related electrical equipment, or who master electrical knowledge.
- Please be sure to read the product instruction manual and safety precautions carefully before installation.
- Before installation, please ensure that the product is powered off.
- Do not disassemble the module, otherwise the machine may be damaged.
- Avoid direct sunlight installation.
- In order to facilitate ventilation and controller replacement, 2-3cm should be left between the upper and lower parts of the controller and the installation environment and surrounding components.


| | |
|--|---|
| | <ul style="list-style-type: none">● Considering the convenient operation and maintenance of the controller, please do not install the controller in the following places:<ul style="list-style-type: none">a) places where the surrounding ambient temperature exceeds the range of -10°C-55°Cb) places where the ambient humidity exceeds the range of 10%-95% (non-condensing)c) places with corrosive gases and flammable gasesd) places with many conductive powders such as dust and iron powder, oil mist, salt, and organic solvents |
|--|---|

Chapter II Product Specification

2.1. Basic Specification


| Item | Description |
|--------------------------|---|
| Model | ECI3808 |
| Basic Axes | 8 |
| Max Extended Axes | 12 |
| Basic Axes Type | Pulse/encoder (there is one specialized auxiliary encoder, the auxiliary encoder axis No. is 8) |
| Digital IO | 40 inputs and 16 outputs. |
| Max Extended IO | 256 inputs and 256 outputs |
| AD/DA | 4 general ADs and 2 general DAs (0-5V) |
| Max Extended AD/DA | 128 ADs and 64 DAs |
| Pulse Bit | 32 |
| Encoder Bit | 32 |
| Speed Acceleration Bit | 32 |
| Pulse Max Frequency | 10MHz |
| Motion Axis Buffer | 128 |
| Array Space | 1600 |
| Program Space | 4KByte |
| Flash Space | 128KByte |
| Power Supply Input | 24V DC input |
| Communication Interfaces | RS232, Ethernet, CAN |
| Dimensions | 292mm*188mm*30.7mm |

2.2. Nameplate & Models

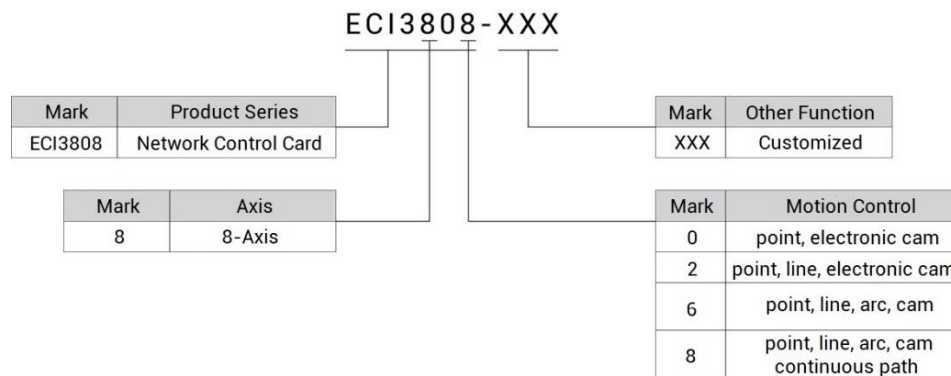

| Model | Description |
|---------|--|
| ECI3600 | 6 axes, point to point, electronic cam, it doesn't support interpolation. |
| ECI3602 | 6 axes, point to point, electronic cam, linear interpolation. |
| ECI3606 | 6 axes, point to point, electronic cam, linear interpolation, circular interpolation. |
| ECI3608 | 6 axes, point to point, electronic cam, linear interpolation, circular interpolation, continuous interpolation, robotic arm. |
| ECI3800 | 8 axes, point to point, electronic cam, it doesn't support interpolation. |
| ECI3802 | 8 axes, point to point, electronic cam, linear interpolation. |
| ECI3806 | 8 axes, point to point, electronic cam, linear interpolation, circular interpolation. |
| ECI3808 | 8 axes, point to point, electronic cam, linear interpolation, circular interpolation, continuous interpolation, robotic arm. |

2.3. Interface Definition

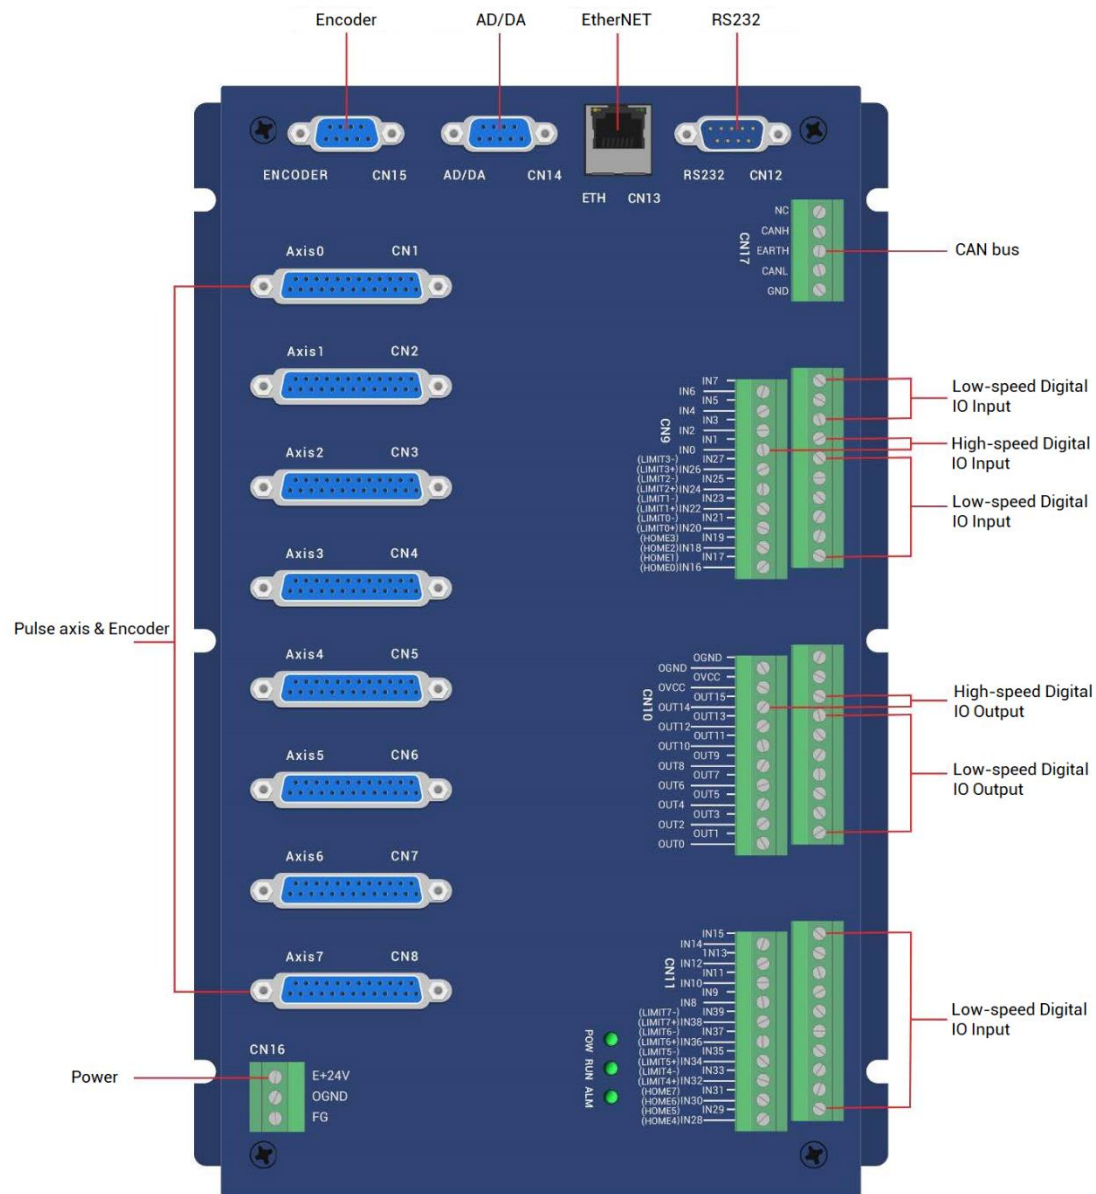

→ Interface Description

| Mark | Interface | Number | Description |
|----------|--------------------------|--------|---|
| POW | Status Indication Led | 1 | Power indicator: it lights when power is conducted. |
| RUN | | 1 | Run indicator: it lights when runs normally |
| ALM | | 1 | Error indicator: it lights when runs abnormally |
| RS232 | RS232 serial port | 1 | Use MODBUS_RTU protocol |
| ETHERNET | Net port | 1 | Use MODBUS_TCP protocol, expand Ethernet |

| | | | |
|---------|---------------------|----|---|
| | | | through interchanger, the number of net port channels can be checked through "?*port", default IP address id 192.168.0.11 |
| E+24V | Main power | 1 | 24V DC power supplies for controller |
| CAN | CAN bus interface | 1 | Connect to CAN expansion module and other standard CAN devices. |
| IN | Digital IO input | 40 | NPN type, IN0-1 support latch function. |
| OUT | Digital IO output | 16 | NPN type, OUT14-15 support PWM function. |
| AD/DA | Analog input/output | 1 | Resolution: 12 bits, 0-5V |
| ENCODER | Auxiliary encoder | 1 | Include differential encoder input. |
| AXIS | Pulse axis | 8 | It includes differential pulse output and differential encoder input |


2.4. Work Environment

| Item | | Parameters |
|------------------------|--------------|---|
| Work Temperature | | -10℃-55℃ |
| Work relative Humidity | | 10%-95% non-condensing |
| Storage Temperature | | -40℃ ~ 80℃ (not frozen) |
| Storage Humidity | | Below 90%RH (no frost) |
| vibration | Frequency | 5-150Hz |
| | Displacement | 3.5mm(directly install)(<9Hz) |
| | Acceleration | 1g(directly install)(>9Hz) |
| | Direction | 3 axial direction |
| Shock (collide) | | 15g, 11ms, half sinusoid, 3 axial direction |
| Degree of Protection | | IP20 |

Chapter III Wiring & Communication

3.1. Power Input Interface

→ Terminal Definition:
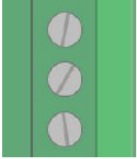
| Terminal | Name | Type | Function |
|---|-------|-----------|----------------------------|
|  E+24V OGND FG | E+24V | Input | Input for power supply 24V |
| | OGND | Input | Power supply ground |
| | FG | Grounding | Shield/Protection |

3.1.1. Power Supply Specification

→ Specification

| Item | Description |
|-------------------------|----------------|
| Voltage | DC24V (-5%~5%) |
| Current to open | ≤0.8A |
| Current to work | ≤0.7A |
| Anti-reverse connection | YES |
| Overcurrent Protection | YES |

3.2. CAN Interface

This interface adopts 5Pin screw-type pluggable terminal with a spacing of 5.08mm. CAN interface of this controller uses standard CAN communication protocol, and expansion modules or other standard CAN devices can be connected.

→ Terminal Definition

| Terminal | Name | Function |
|----------|-------|--------------------------|
| NC | NC | Spare |
| CANH | CANH | CAN communication side H |
| EARTH | EARTH | Case protection |
| CANL | CANL | CAN communication side L |
| GND | GND | Negative of DC input |


3.2.1. CAN Communication Specification & Wiring

→ Specification

| Item | CAN |
|-------------------------------------|--|
| Max Communication Rate (bps) | 1M |
| Terminal Resistor | 120Ω |
| Topology | Daisy chain connection structure |
| The number of nodes can be extended | Up to 16 |
| Communication Distance | Longer communication distance, lower communication rate, max 30m is recommended. |

→ Wiring Reference

Connect the CANL and CANH of the standard CAN module to the CANL and CANH of the other side correspondingly. And public ends of the CAN bus communication both parties are connected to together. In CAN bus left and right sides, connect a 120Ω resistor respectively (please see below graphic).

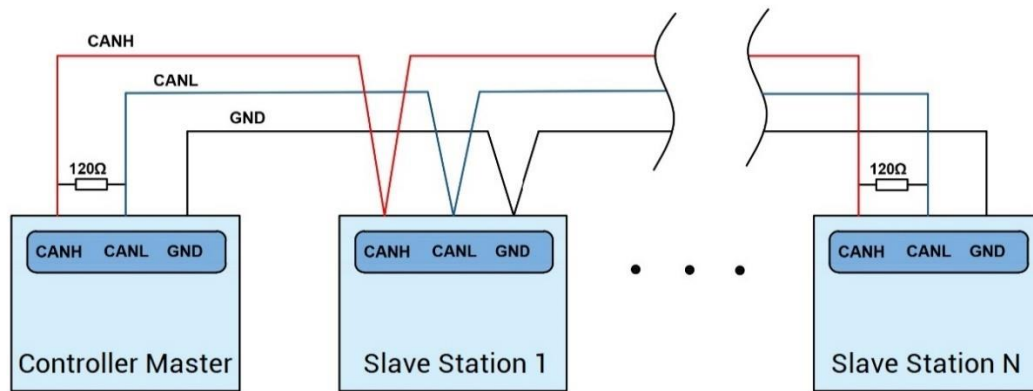


→ Wiring Notes:

- As above, the daisy chain topology is used for wiring (the star topology structure cannot be used). When the use environment is ideal and there are no many nodes, the branch structure also can be used.
- The communication interface of ECI3808 adopts external 24V power supply, please pay attention to connect other controllers or HMI.
- Please connect a 120Ω terminal resistor in parallel to each end of the CAN bus for matching the circuit impedance and ensuring communication stability.
- Please be sure to connect the public ends of each node on the CAN bus to prevent the CAN chip from burning out.
- Please use STP (Shielded Twisted Pair), especially in bad environments, and make sure the shielding layer is fully grounded.
- When on-site wiring, pay attention to make the distance between strong current and weak current, it is recommended for the distance to be more than 20cm.
- It should be noted that the equipment grounding (chassis) on the entire line must be good, and the grounding of the chassis should be connected to the standard factory ground pile.

→ Cable Requirements:

Shielded Twisted Pair, and the shielded cable is grounded.

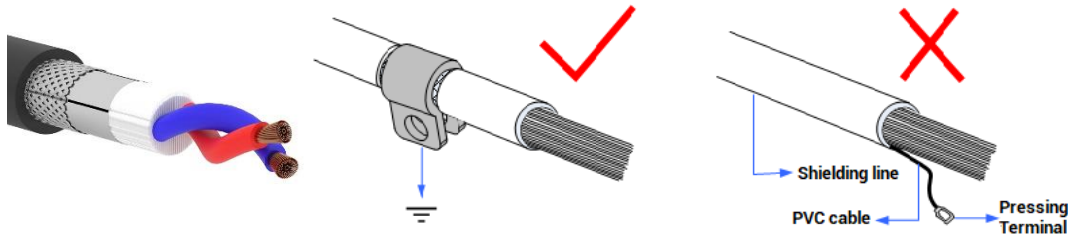

3.2.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use ETHERNET or RS232 (default parameter, which can be connected directly) to connect to [RTSys](#).
- (3) Please use the "CANIO_ADDRESS" command to set the master's "address" and "speed" according to the needs, and use the "CANIO_ENABLE" command to enable or disable the internal CAN master function, or through "RTSys/Controller/State the Controller/Communication Info" to view the CAN status intuitively, and refer to the "[Basic Programming Manual](#)" for details.

```
CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON

Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address:1, variable:2
Baud:38400
DataBits:8
StopBits:1
Parity:0
```


- (4) Correctly set the "address" and "speed" of the slave station expansion module according to the manual of the slave station.

- (5) After all the settings are completed, restart the power supply of all stations to establish communication.
- (6) Note that the "speed" settings of each node on the CAN bus must be consistent, and the "address" settings cannot cause conflicts, otherwise the "ALM" alarm light will be on, and the communication establishment will fail or the communication will be disordered.

3.3. RS232 Serial Port

RS232 is in one standard DB9 male socket and supports MODBUS_RTU protocol and custom communication.

→ Interface Definition
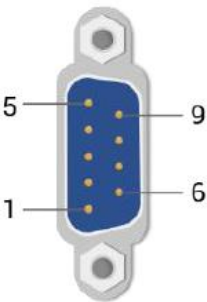
| Terminal | PIN | Name | Type | Function |
|---|---------------|------|--------|---|
|  | 1, 4, 6, 7, 8 | NC | Spare | Reserved |
| | 2 | RXD | Input | RS232 signal receiving |
| | 3 | TXD | Output | RS232 signal sending |
| | 5 | GND | Output | Negative pole of 5V power output and public end |
| | 9 | E5V | Output | Positive pole of 5V power, max is 300mA. |


3.3.1. RS232/RS422 Interface Specification & Wiring

→ Specification:

| Item | RS232 |
|------------------------|----------------------------------|
| Max Communication Rate | 115200 (bps) |
| Terminal Resistor | No |
| Topology Structure | Connect correspondingly (1 to 1) |

| | |
|-------------------------------------|---|
| The number of nodes can be extended | 1 |
| Communication Distance | The Longer communication distance is, the lower communication rate is, maximum 5m is recommended. |

→ Wiring Reference

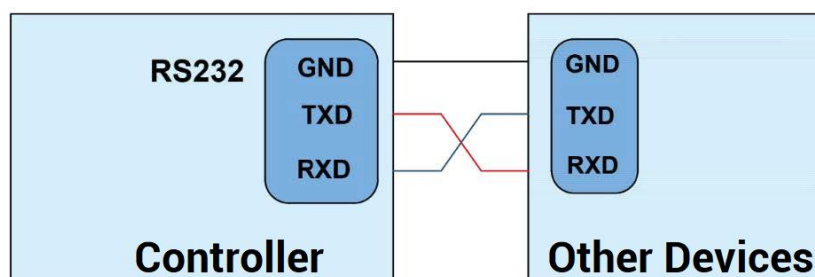

→ Wiring Notes:

- The wiring of RS232 is as above, it needs to cross-wiring for sending and receiving signals, and it is recommended to use a double-female head cross line when connecting to a computer.
- Please be sure to connect the public ends of each communication node to prevent the communication chip from burning out.
- Please use STP, especially in bad environments, and make sure the shielding layer is fully grounded.

3.3.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use any ETHERNET or RS232 (there is default parameter, which can be connected directly) to connect to RTSys.
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station number and configured parameters, see "Basic Programming Manual" for


details.

- (4) According to their respectively instructions, correctly set the relevant parameters of the third-party equipment to match the parameters of each node.
- (5) When all is configured, it can start to do communicating.
- (6) Communication data of RS232 can be directly viewed through "ZDevelop / Controller / State the Controller / CommunicationInfo".

3.4. IN Digital Input & High-Speed Latch Port

The digital input adopts 4 groups of 10Pin screw-type pluggable terminals, and the gap distance between terminals should be 5.08mm. In addition, **the latch function** and encoder function are integrated in digital input signals.

→ Wiring Definition
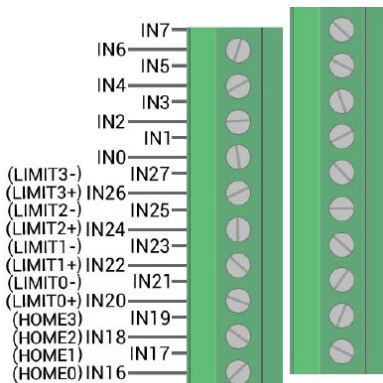
| Terminal | Name | Type | Function 1 | Function 2 |
|---|------|-----------------------|------------|------------|
|  | IN6 | NPN, low-speed input | Input 6 | / |
| | IN4 | | Input 4 | / |
| | IN2 | | Input 2 | / |
| | IN0 | NPN, high-speed input | Input 0 | Latch A |
| | IN26 | NPN, low-speed input | Input 26 | Limit3+ |
| | IN24 | | Input 24 | Limit2+ |
| | IN22 | | Input 22 | Limit1+ |
| | IN20 | | Input 20 | Limit0+ |
| | IN18 | | Input 18 | Home2 |
| | IN16 | | Input 16 | Home0 |
| | IN7 | NPN, low-speed input | Input 7 | / |
| | IN5 | | Input 5 | / |
| | IN3 | | Input 3 | / |
| | IN1 | NPN, high-speed input | Input 1 | Latch B |
| | IN27 | NPN, low-speed input | Input 27 | Limit3- |
| | IN25 | | Input 25 | Limit2- |

| | | | | |
|--|------|----------------------|----------|---------|
| | IN23 | | Input 23 | Limit1- |
| | IN21 | | Input 21 | Limit0- |
| | IN19 | | Input 19 | Home3 |
| | IN17 | | Input 17 | Home1 |
| | IN14 | NPN, low-speed input | Input 14 | / |
| | IN12 | | Input 12 | / |
| | IN10 | | Input 10 | / |
| | IN8 | | Input 8 | / |
| | IN38 | | Input 38 | Limit7+ |
| | IN36 | | Input 36 | Limit6+ |
| | IN34 | | Input 34 | Limit5+ |
| | IN32 | | Input 32 | Limit4+ |
| | IN30 | NPN, low-speed input | Input 30 | Home6 |
| | IN28 | | Input 28 | Home4 |
| | IN15 | | Input 15 | / |
| | IN13 | | Input 13 | / |
| | IN11 | | Input 11 | / |
| | IN9 | | Input 9 | / |
| | IN39 | | Input 39 | Limit7- |
| | IN37 | | Input 37 | Limit6- |
| | IN35 | | Input 35 | Limit5- |
| | IN33 | | Input 33 | Limit4- |
| | IN31 | | Input 31 | Home7 |
| | IN29 | | Input 29 | Home5 |

Notes:

- IN 0 supports latching A, IN 1 supports latching B.
- Origin position limit function is configured by default, but can be modified.


3.4.1. Digital Input Specification & Wiring

→ Specification

| Item | High-Speed Input (IN0-1) | Low-Speed Input (IN2-39) |
|---------------------|--|--------------------------|
| Input mode | NPN type, the input is triggered by low-electric level | |
| Frequency | < 100kHz | < 5kHz |
| Impedance | 3.3KΩ | 4.7KΩ |
| Voltage level | DC24V | DC24V |
| The voltage to open | <15V | <14.5V |

| | | |
|--|--------------------------|--------------------------|
| The voltage to close | >15.1V | >14.7V |
| Minimal current | -2.3mA (negative) | -1.8mA (negative) |
| Max current | -7.5mA (negative) | -6mA (negative) |
| Isolation mode | optoelectronic isolation | optoelectronic isolation |
| Note: the above parameters are standard values when the voltage of controller power supply (E+24V port) is 24V. | | |

→ Wiring Reference

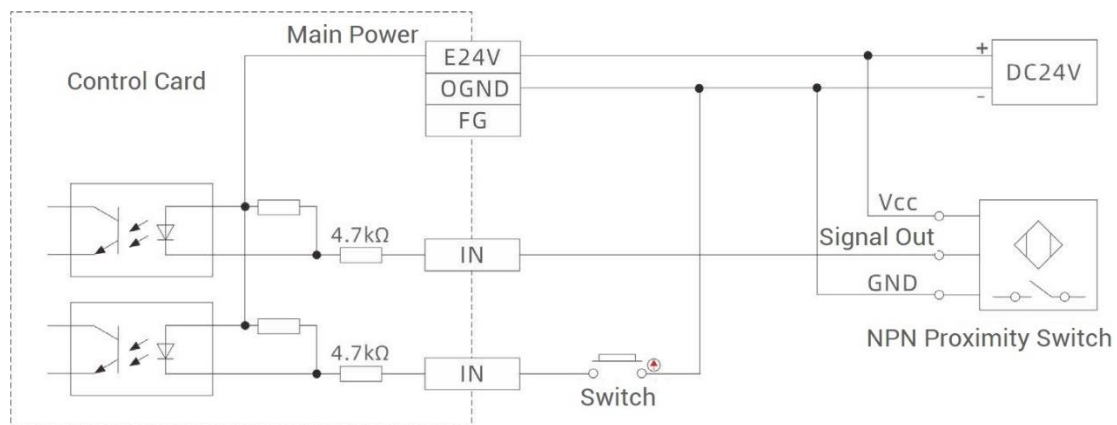

→ Wiring Note:

- For the public end, please connect the "OGND" port on the power supply to the "COM" terminal of the external input device. If the signal area power supply of the external device and the power supply of the controller are in the same power supply system, this connection also can be omitted.

3.4.2. Basic Usage Method


- Please follow the above wiring instructions to wiring correctly.
- After powered on, please select ETHERNET or RS232 (default parameter, which can be connected directly) to connect to RTSys.
- State values of relative input ports can be read directly through "IN" command, also, it can be read through "RTSys/Tool/In". Please refer to "ZBasic" for details.

- (4) Latch function can be set and triggered through "REGIST" instruction, in software, use REG_INPUTS to configure. Please refer to "Basic" for details.

3.5.OUT: Digital Output & PWM Terminal

The digital output adopts 2 sets of 10Pin screw-type pluggable terminals with a spacing of 5.08mm, and the **PWM function** is integrated in digital output signals.

→ Wiring Definition
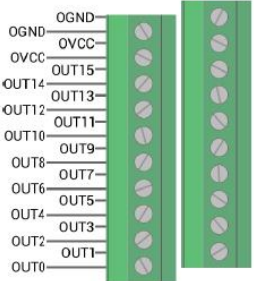
| Terminal | Name | Type | Function 1 | Function 2 |
|---|-------|-----------------------------|--|------------|
|  | OGND | / | 24V power ground / IO public end | / |
| | OVCC | / | 24V power output, max output current is 0.3A | / |
| | OUT14 | NPN type, high-speed output | Output 14 | PWM0 |
| | OUT12 | NPN type, low-speed output | Output 12 | / |
| | OUT10 | | Output 10 | / |
| | OUT8 | | Output 8 | / |
| | OUT6 | | Output 6 | / |
| | OUT4 | | Output 4 | / |
| | OUT2 | | Output 2 | / |
| | OUT0 | | Output 0 | / |
| | OGND | / | 24V power ground / IO public end | / |
| | OVCC | / | 24V power output, max output current is 0.3A | / |
| | OUT15 | NPN type, high-speed output | Output 15 | PWM1 |
| | OUT13 | NPN type, low-speed output | Output 13 | / |
| | OUT11 | | Output 11 | / |

| | | | | |
|--|------|--|----------|---|
| | OUT9 | | Output 9 | / |
| | OUT7 | | Output 7 | / |
| | OUT5 | | Output 5 | / |
| | OUT3 | | Output 3 | / |
| | OUT1 | | Output 1 | / |
| Note: OUT14 and OUT15 support PWM function, when PWM is off, they are general outputs. | | | | |

3.5.1. Digital Output Specification & Wiring


→ Specification

| Item | High Speed Output (OUT14-15) | Low Speed Output (OUT0-13) |
|------------------------------|--|----------------------------|
| Output mode | NPN type, it is 0V when there is output. | |
| Frequency | < 400kHz | < 8kHz |
| Voltage level | DC24V | DC24V |
| Max output current | +300mA | +300mA |
| Max leakage current when off | 25μA | 25μA |
| Respond time to conduct | 1μs (resistive load typical value) | 12μs |
| Respond time to close | 3μs | 80μs |
| Overcurrent protection | Support | Support |
| Isolation method | optoelectronic isolation | optoelectronic isolation |

Note:

- ✧ The times in the form are typical based on the resistive load, and may change when the load circuit changes.
- ✧ Due to the NPN output, the shutdown of the output will be obviously affected by the external load circuit, and the output frequency should not be set too high in the application. For high-speed output, it is recommended to be lower than 400KHz, for low-speed output, it is recommended to be lower than 8HKz. If there needs higher speed, please contact us to adjust parameter or custom hardware.

→ Wiring Reference

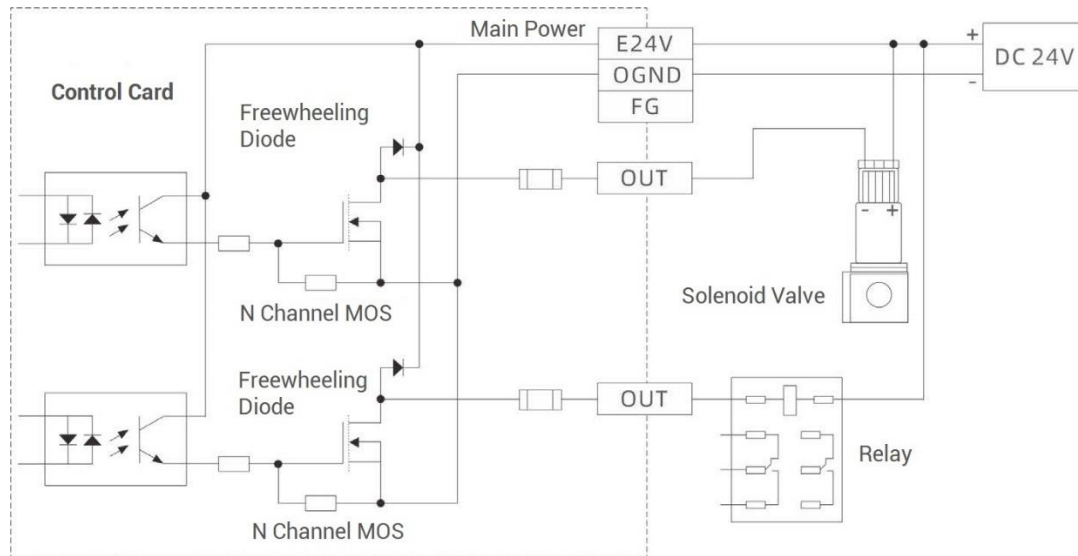

→ Wiring Note:

- For the connection of the public end, please connect the "OGND" port on the power supply terminal / IO terminal to the negative pole of the DC power supply of the external input device. If the DC power supply of the external device and the controller power supply are in the same power supply system, this connection can also be omitted.


3.5.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use ETHERNET, RS232 or RS485 to connect to RTSys.
- (3) Open or close output port directly through "OP" command, also, it can be opened or closed through "RTSys /Tool/Op". Please refer to "Basic" for details.
- (4) The PWM function, set the frequency and duty cycle through "PWM_FREQ" and "PWM_DUTY". Please refer to Basic for details.

3.6. AD/DA: Analog Input / Output

The control card provides one analog input / output, which includes 4 ADs and 2 DAs, each interface is standard DB9 female socket.

→ Wiring Definition

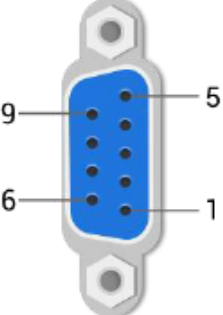
| Terminal | PIN | Signal | Function |
|---|-----|--------|--------------------------------|
|  | 1 | AIN0 | Analog input terminal AIN(0) |
| | 2 | AIN2 | Analog input terminal AIN(2) |
| | 3 | AOUT0 | Analog output terminal AOUT(0) |
| | 4 | AGND | Analog public end |
| | 5 | NC | Spare |
| | 6 | AIN1 | Analog input terminal AIN(1) |
| | 7 | AIN3 | Analog input terminal AIN(3) |
| | 8 | AOUT1 | Analog output terminal AOUT(1) |
| | 9 | AGND | Analog public end |
| Note: ECI3808 inner AD and DA use internal power supply. | | | |

3.6.1. Analog Input / Output Specification & Wiring

→ Specification

| Item | AD (0-3) | DA (0-1) |
|--|-------------------------------------|-------------------------------|
| Resolution | 12-bit | 12-bit |
| Data range | 0-4095 | 0-4095 |
| Signal range | 0-5V input | 0-5V output |
| Data refresh ratio | 1KHz | 1KHz |
| Power input impedance / output load | >300KΩ (voltage input impedance) | >1MΩ (voltage output load) |

→ Wiring Reference

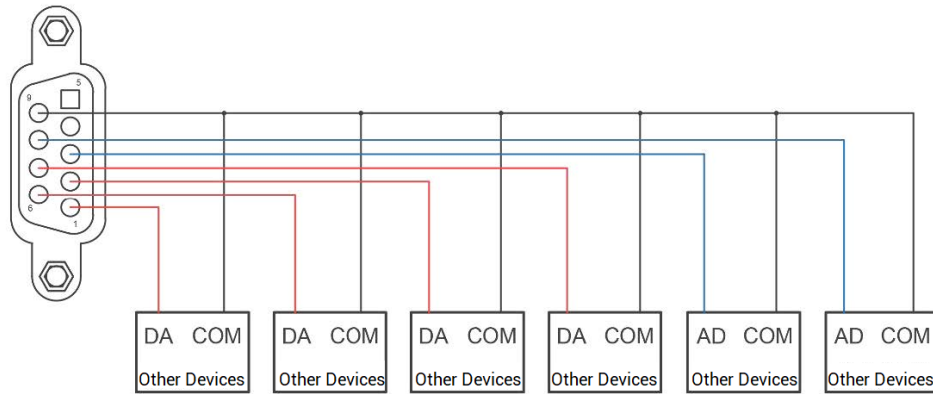

→ Wiring Note:


- The analog input/output wiring method is as shown in the figure above, and the external load signal range must match with this signal range.
- Please use STP, especially in bad environments, and make sure the shielding layer is fully grounded.

3.6.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After powered on, please use ETHERNET or RS232 to connect to RTSys.
- (3) Analog input voltage can be read through "AIN" command and corresponding analog voltage can be output through "AOUT" command, also, data of each channel can be checked through "RTSys/AD/DA". Please refer to "Basic" for details.


3.7.ETHERNET

ECI3808 network motion control card has an Ethernet port, and it supports MODBUS_TCP protocol and custom communication, and the default IP address is 192.168.0.11. The pin definition is as follows:

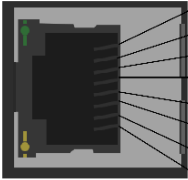


| PIN | Signal | Description |
|-----|--------|--------------------|
| 1 | TX+ | Send signal (+) |
| 2 | TX- | Send signal (-) |
| 3 | RX+ | Receive signal (+) |
| 4 | NC | Reserved |
| 5 | NC | Reserved |
| 6 | RX- | Receive signal (-) |
| 7 | NC | Reserved |
| 8 | NC | Reserved |

The Ethernet port of the controller can be connected to a computer, HMI, etc. through an Ethernet cable, and using point to point connection method. The schematic diagram is as follows:

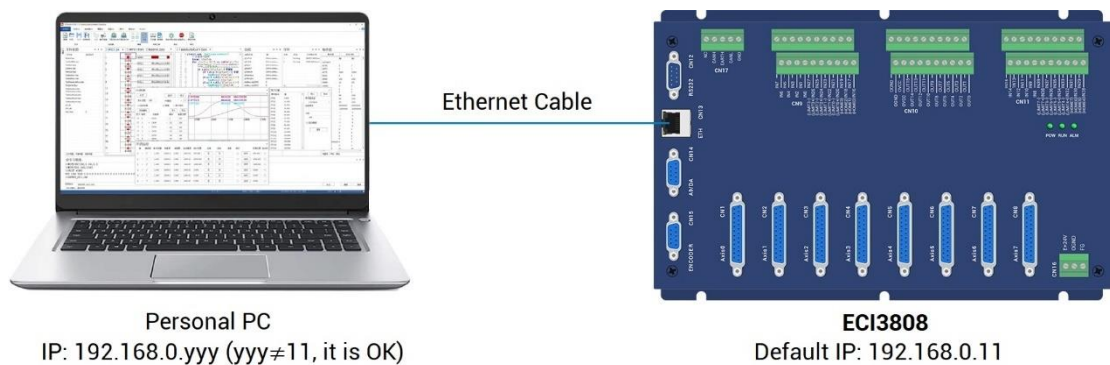


The controller can also be connected to the interchanger through an Ethernet cable, and then use interchanger to connect to other devices, then multi-point connection can be achieved. The schematic diagram is as follows:

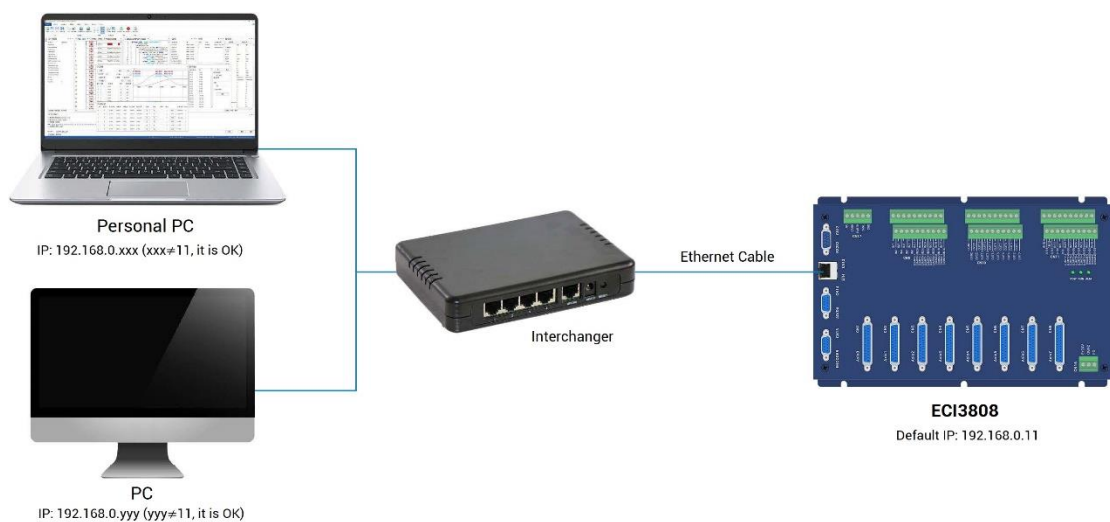

→ Communication Cable Requirements

ETHERNET communication interface adopts standard Ethernet RJ45 interface.

The network cable adopts Category 5e STP, and the crystal head has a metal shell to reduce interference and to prevent information from being eavesdropped. As shown below:

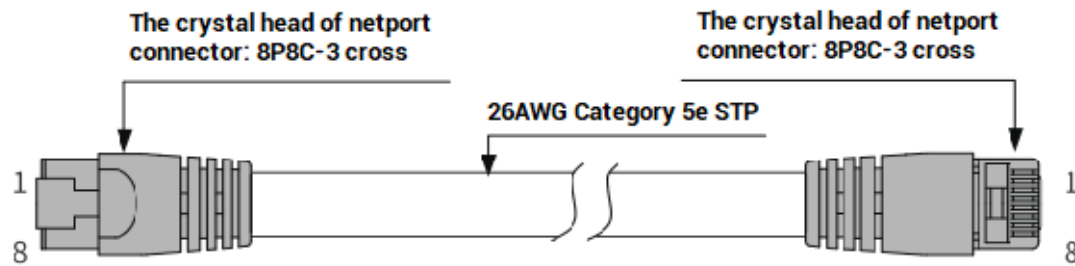

| Item | Specification |
|----------------|---------------------------------------|
| Cable type | Flexible crossover cable, Category 5e |
| traverse | twisted pair |
| Line pairs | 4 |
| Isolation | cross skeleton |
| Connector | Crystal head with iron shell |
| Cable material | PVC |
| Cable length | Less than 100m |

Use RJ45 network cable connection method:


- When installing, hold the crystal head that is with the cable and insert it into the RJ45 interface until it makes a "click" sound (kada).
- In order to ensure the stability of communication, please fix the cables with cable ties.
- When disassembling, press the tail mechanism of the crystal head, and pull out the connector and the module in a horizontal direction.

Please use tube-type pre-insulated terminals and cables with appropriate wire diameters to connect the user terminals.

3.8. ENCODER Auxiliary Encoder

This product provides one auxiliary encoder interface, each interface is a standard DB9 female socket.

→ Interface Definition
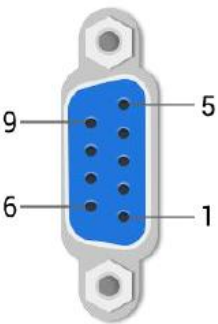
| Interface | Pin | Signal | Description |
|---|-----|--------|---|
|  | 1 | EA- | Encoder differential input signal A- |
| | 2 | EB- | Encoder differential input signal B- |
| | 3 | EZ- | Encoder differential input signal Z- |
| | 4 | Spare | Reserved |
| | 5 | +5V | 5V power positive of pulse/encoder signal |
| | 6 | EA+ | Encoder differential input signal A+ |
| | 7 | EB+ | Encoder differential input signal B+ |
| | 8 | EZ+ | Encoder differential input signal Z+ |
| | 9 | GND | 5V power negative of pulse/encoder signal |

→ Specification:

| Signal | Item | Description |
|----------|-------------------------------|---------------------------|
| EA/EB/EZ | Signal type | Differential input signal |
| | Voltage range | 0-5V |
| | Maximum frequency | 5MHz |
| +5V, GND | Maximum output current for 5V | 50mA |

- For auxiliary encoder wiring, please refer to wiring of EA/EB/EZ in axis interface.

3.9. Axis Interface

This product provides 8 local differential pulse axis interfaces, each interface is a standard DB25 female socket. Each terminal provides 0V and +5V output, which can provide 5V power for the encoder.

Before the axis is used, axis type must be configured through the ATYPE.

→ Interface Definition

| Interface | Pin | Signal | Description |
|--|-----|---------------------------------------|--|
| | 1 | EGND | Negative pole of 24V digital IO power |
| | 2 | IN40-47/ALM | General input (recommended as driver alarm) |
| | 3 | OUT16.18.20.22.24 .26.28.30/ENBALE | General output (recommended as driver enable) |
| | 4 | EA- | Encoder differential input signal A- |
| | 5 | EB- | Encoder differential input signal B- |
| | 6 | EZ- | Encoder differential input signal Z- |
| | 7 | +5V | 5V power (+) of pulse/encoder signal |
| | 8 | Reserved | Reserved |
| | 9 | DIR+ | Servo or step directional output + (differential signal) |
| | 10 | GND | 5V power (-) of pulse/encoder signal |
| | 11 | PUL- | Servo or step pulse output - (differential signal) |
| | 12 | Reserved | Reserved |
| | 13 | GND | 5V power (-) of pulse/encoder signal |
| | 14 | OVCC | Positive pole of IO 24V power |
| | 15 | OUT17.19.21.23.25 .27.31/CLR | General output (recommended as driver alarm clear) |
| | 16 | Reserved | Reserved |
| | 17 | EA+ | Encoder differential input signal A+ |
| | 18 | EB+ | Encoder differential input signal B+ |
| | 19 | EZ+ | Encoder differential input signal Z+ |
| | 20 | GND | 5V power (-) of pulse/encoder signal |
| | 21 | GND | |
| | 22 | DIR- | Servo or step direction output - (differential signal) |
| | 23 | PUL+ | Servo or step pulse output + (differential signal) |
| | 24 | GND | 5V power (-) of pulse/encoder signal |
| | 25 | Reserved | Reserved |
| Note: <ul style="list-style-type: none"> ✧ Due to ALM, ENABLE and CLR are with small drive ability, recommended as axis IO. ✧ OVCC and +5V are only used for controller and servo drive communication, please don't use | | | |

for others.

➤ Pulse Axis No. & IO Relation:

| Pulse Axis No. | IN (PIN 2) | OUT (PIN 3) | OUT (PIN 15) |
|----------------|------------|-------------|--------------|
| AXIS0 | IN40 | OUT16 | OUT17 |
| AXIS1 | IN41 | OUT18 | OUT19 |
| AXIS2 | IN42 | OUT20 | OUT21 |
| AXIS3 | IN43 | OUT22 | OUT23 |
| AXIS4 | IN44 | OUT24 | OUT25 |
| AXIS5 | IN45 | OUT26 | OUT27 |
| AXIS6 | IN46 | OUT28 | OUT29 |
| AXIS7 | IN47 | OUT30 | OUT31 |

3.9.1. AXIS Interface Signal Specification & Wiring


→ **Specification:**

| Signal | Item | Description |
|----------|----------------------|---|
| PUL/DIR | Signal type | Differential output signal |
| | Voltage range | 0-5V |
| | Maximum frequency | 10MHz |
| EA/EB/EZ | Signal type | Differential input signal |
| | Voltage range | 0-5V |
| | Maximum frequency | 5MHz |
| IN40-47 | Input method | NPN type, it is triggered when low electric level is input. |
| | Frequency | < 5kHz |
| | Impedance | 6.8KΩ |
| | Voltage level | DC24V |
| | The voltage to open | <10.5V |
| | The voltage to close | >10.7V |
| | Minimal current | -1.8mA (negative) |
| | Maximum current | -4mA (negative) |


| | Isolation | optoelectronic isolation |
|------------|--------------------------------|---------------------------------|
| OUT16-31 | Output method | NPN type, it is 0V when outputs |
| | Frequency | < 8kHz |
| | Voltage level | DC24V |
| | Maximum current | +50mA |
| | Overcurrent protection | No |
| | Isolation | optoelectronic isolation |
| +5V, GND | Maximum output current for 5V | 50mA |
| OVCC, EGND | Maximum output current for 24V | 50mA |

→ Wiring Reference:


➤ Reference example of wiring with Panasonic A5/A6 servo driver:

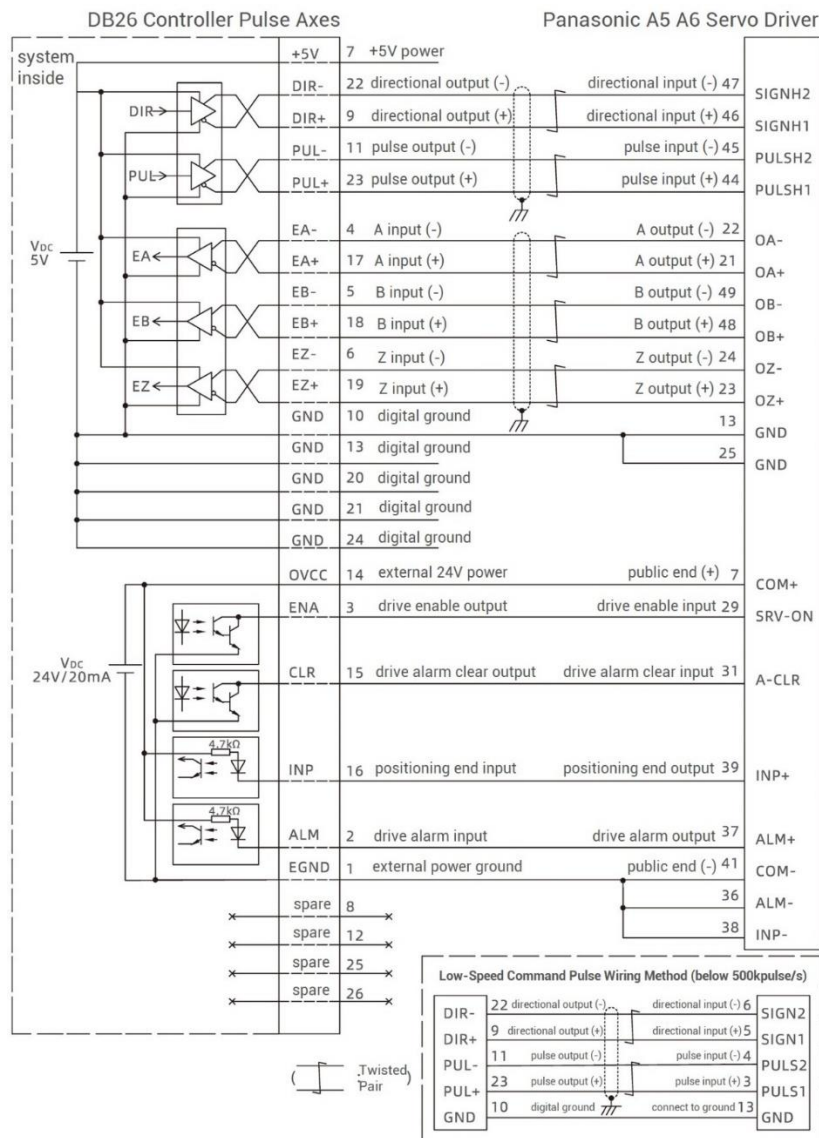

➤ Single-Ended Pulse Axis Output Wiring

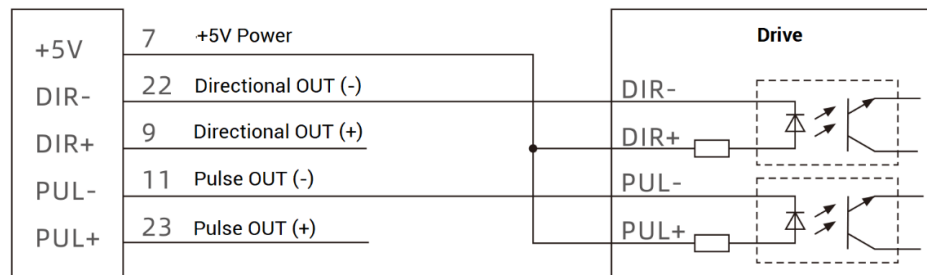

➤ Single-Ended Encoder Input Wiring

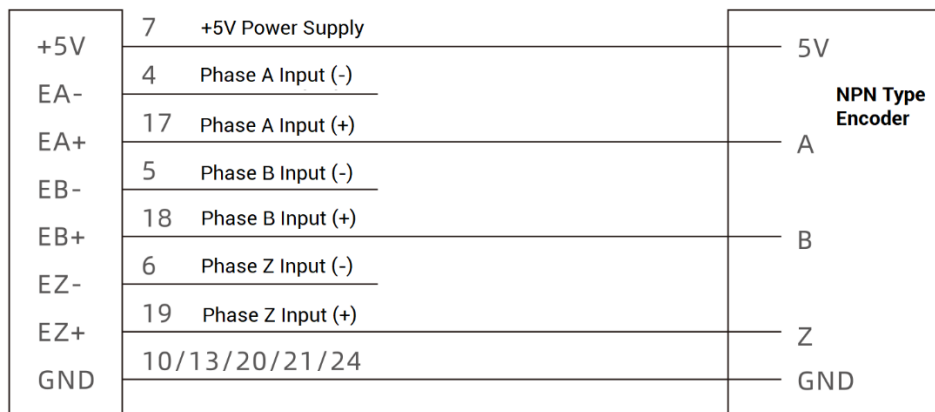

→ Wiring Note:

- ✧ The wiring principle of the differential pulse axis interface is shown in the figure above, and the wiring methods of different types of drivers are different, please connect carefully.
- ✧ If the speed can meet the requirements, use low-speed differential pulse port preferentially. When high-speed differential pulse interface is used, controller internal digital ground must be connected to drive high-speed pulse reference ground.
- ✧ Please use STP, especially there is bad environment, make sure shield layer is fully grounded.
- ✧ Some servo drives are not isolated by optocoupler. At this time, the GND must be connected to the GND of the driver. Most of the drive encoders are not isolated by optocoupler. When connecting the encoder, GND must be connected.

3.9.2. Basic Usage Method

- (1) Please follow the above wiring instructions to wiring correctly.
- (2) After power on, please use ETHERNET or RS232 (default parameter, it can be connected directly) to connect to RTSys.
- (3) Set axis parameters, such as, ATYPE, UNITS, SPEED, ACCEL, FWD_IN, REV_IN, etc.
- (4) There are many parameters related to pulse axis, they can be set and checked through relative instructions, please see "axis parameter and axis status" of "Basic", or see "RTSys/Tool/Axis parameter".
- (5) Control corresponding motion through "View – Manual".

Refer to BASIC Routine:

| | |
|-------------------|---|
| BASE(0,1) | 'select axis 0 and axis 1 |
| ATYPE = 1,1 | 'set axis 0 and axis 1 as pulse axes |
| UNITS = 1000,1000 | 'set pulse amount as 1000 pulses |
| SPEED = 10,10 | 'set axis speed as 100*1000 pulse/s |
| ACCEL = 1000,1000 | 'set axis acceleration as 1000*1000 pulse/s/s |
| FWD_IN = -1,-1 | 'prohibit using axis positive hardware position limit |
| REV_IN = -1,-1 | 'prohibit using axis negative hardware position limit |
| MOVE(10) AXIS(0) | 'axis 0 moves distance of 10*1000 pulses in positive |
| MOVE(-20) AXIS(0) | 'axis 0 moves distance of 20*1000 pulses in negative |

Chapter IV Expansion Module

Control card can expand resources through CAN bus, including digital IO and analog AD/DA resources. ZIO series expansion modules or ZMIO310-CAN coupler with sub modules can be used. Please refer to corresponding expansion module manuals.


4.1. CAN Bus Expansion Wiring


The ZIO expansion module is powered by the dual power supply. Except the main power supply, an additional IO power supply is required to supply independent power for IO. Both the main power supply and the IO power supply use 24V DC power supply. For ZAI0, it only needs to connect to the main power supply.

To prevent interference, separate the IO power supply from the main power supply.

Please select the expansion module according to the requirements, and select IO mapping or axis mapping according to the resources of the expansion module.

Wiring reference of connection between ZIO expansion module and control card and standard wiring of CAN bus are shown as below (take ZMC408SCAN and ZIO1616 as the example):

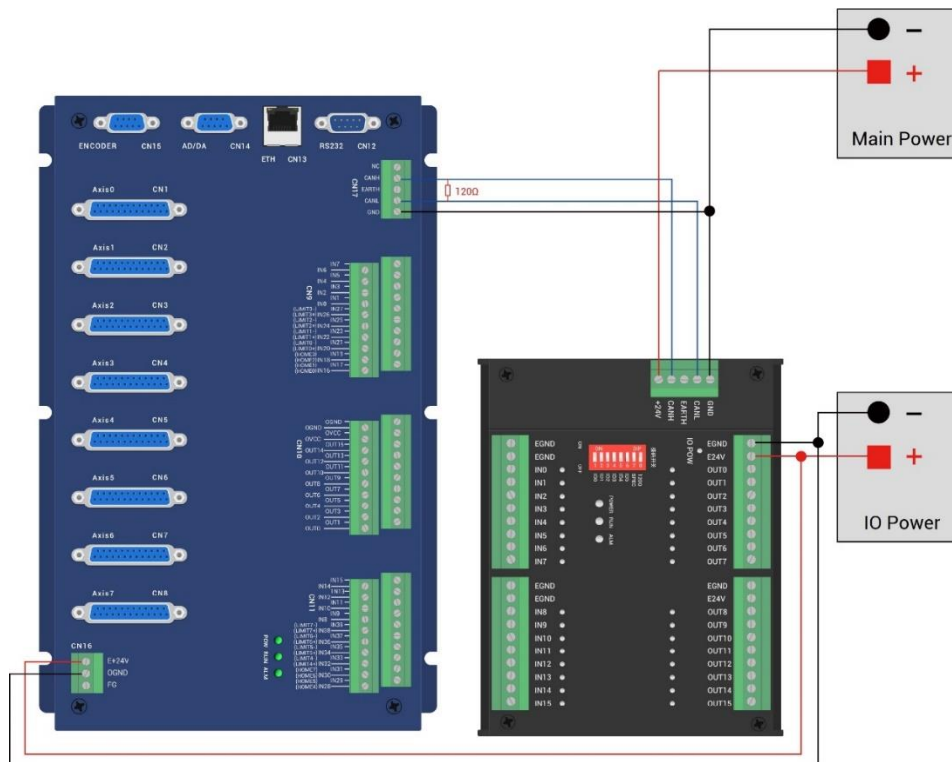

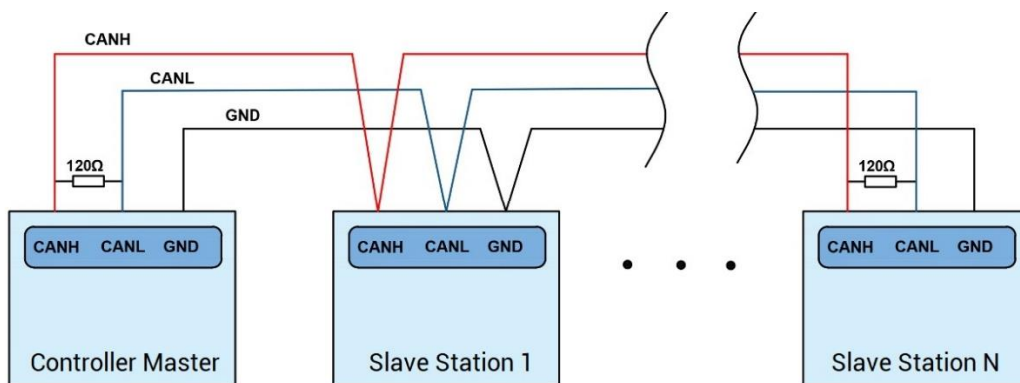

→ Wiring Note:

- ✧ ECI3808 control card uses the single power, and ZIO expansion module uses dual-power. When using, main power supply of expansion module and main power supply of controller can share one power. When they use different power supplies, controller power EGND needs to connect to expansion module power GND, otherwise CAN may be burnt out.
- ✧ When connecting multiple ZIO expansion modules on the CAN bus, a 120-ohm resistor needs to be connected in parallel between the CANL and CANH terminals, for the ZIO expansion module that is with 8-digit dialing codes, the terminal resistor can be realized by dialing the code (DIP).

4.2. CAN Bus Expansion Resource Mapping



The ZCAN expansion module generally has an 8-bit DIP switch, dial ON to take effect, and the meaning of the DIP is as follows:

1-4: they are used for ZCAN expansion module IO address mapping, the corresponding value is 0-15.

5-6: CAN communication speed, corresponding value is 0-3, four different speeds are optional.

7: reserved.

8: 120 ohm resistor, dial ON means a 120 ohm resistor is connected between CANL and CANH.

The IO numbers of the entire control system cannot be repeated, and existed numbers must be avoided when mapping resources. And the DIP switch must be dialed before power-on, if re-dial after power-on, it is invalid. It needs to be powered on again to take effect.

Dial 1-4 to select the CAN address, and the controller sets the IO number range of the corresponding expansion module according to the CAN DIP address. When each is dialed as OFF, the corresponding value is 0, when it is ON, it corresponds to a value of 1, and the address combination value = dial 4 \times 8 + dial code 3 \times 4 + dial code 2 \times 2 + dial code 1.

Dial code 5-6 to select CAN bus communication speed, speed combination value = dial code 6 \times 2 + dial code 5 \times 1, the combined value range is 0-3.

The corresponding speeds are as follows:

| DIP 5-6 combination value | CANIO_ADDRESS high 8-bit value | CAN communication speed |
|---------------------------|----------------------------------|-------------------------|
| 0 | 0 (corresponds to decimal 128) | 500KBPS (default value) |
| 1 | 1 (corresponds to decimal 256) | 250KBPS |
| 2 | 2 (corresponding to decimal 512) | 125KBPS |
| 3 | 3 (corresponding to decimal 768) | 1MBPS |

The controller side sets the CAN communication speed through the CANIO_ADDRESS command. There are also four speed parameters that can be selected. The communication speed must be consistent with the communication speed of the expansion module that corresponds to the combination value, then they can communicate with each other.

The factory default communication speed is 500 KBPS on both sides, there is no need to set this, unless you need to change the speed.

The CANIO_ADDRESS command is a system parameter, and it can set the master-slave end of CAN communication. The default value of the controller is 32, that is,

CANIO_ADDRESS=32 is the master end, and the slave end is set between 0-31.

The CAN communication configuration can be viewed in the "State the Controller" window.

→ IO Mapping:

the CAN expansion module uses bit1-4 of the DIP switch. According to the number of currently included IO points (the largest number in IN and OP must include IO point in the axis interface), use the bit 1-4 to set the ID, so as to determine the number range of IO to be expanded.

If the controller itself contains 28 INs and 16 OPs, then the starting address set by the first extended board should exceed the maximum value of 28. According to below rule, the dial code should be set to the combination value 1 (binary combination value 0001, from right to left, dial code 1-4, at this time dial 1 is set to ON, and the others are set to OFF), the IO number on the expansion board = the expansion board number value + the initial IO number value, among them, the IOs that are vacant from 29-31 Numbers are not used. Subsequent extended boards continue to confirm the dial settings according to the IO points in turn.

The initial digital IO mapping number starts from 16 and increases in multiples of 16. The distribution of digital IO numbers corresponding to different dial IDs is as follows (ECI3808 motion control card expansion board DIP ID starts from 2 at least, therefore, starting IO Number starts from 48 at least).

| DIP 1-4 combination value | Starting IO number | Ending IO number |
|---------------------------|--------------------|------------------|
| 0 | 16 | 31 |
| 1 | 32 | 47 |
| 2 | 48 | 63 |
| 3 | 64 | 79 |
| 4 | 80 | 95 |
| 5 | 96 | 111 |
| 6 | 112 | 127 |
| 7 | 128 | 143 |
| 8 | 144 | 159 |
| 9 | 160 | 175 |
| 10 | 176 | 191 |

| | | |
|----|-----|-----|
| 11 | 192 | 207 |
| 12 | 208 | 223 |
| 13 | 224 | 239 |
| 14 | 240 | 255 |
| 15 | 256 | 271 |

The initial IO mapping number of the analog AD starts from 8 and increases in multiples of 8. The initial IO mapping number of the analog DA starts from 4 and increases in multiples of 4. The allocation of digital IO numbers corresponding to different dial code IDs is as follows:

| DIP 1-4 combination value | Starting AD number | End AD number | Starting DA number | End DA number |
|------------------------------|-----------------------|------------------|-----------------------|------------------|
| 0 | 8 | 15 | 4 | 7 |
| 1 | 16 | 23 | 8 | 11 |
| 2 | 24 | 31 | 12 | 15 |
| 3 | 32 | 39 | 16 | 19 |
| 4 | 40 | 47 | 20 | 23 |
| 5 | 48 | 55 | 24 | 27 |
| 6 | 56 | 63 | 28 | 31 |
| 7 | 64 | 71 | 32 | 35 |
| 8 | 72 | 79 | 36 | 39 |
| 9 | 80 | 87 | 40 | 43 |
| 10 | 88 | 95 | 44 | 47 |
| 11 | 96 | 103 | 48 | 51 |
| 12 | 104 | 111 | 52 | 55 |
| 13 | 112 | 119 | 56 | 59 |
| 14 | 120 | 127 | 60 | 63 |
| 15 | 128 | 135 | 64 | 67 |

→ Axis Mapping:

When the CAN bus expansion mode is used to expand the pulse axis, 2 pulses axes are extended. These two pulse axes need to be mapped and bound with the axis No., then access.

Extended axes need to perform axis mapping operations, using the AXIS_ADDRESS command to map, and the mapping rules are as follows:

$\text{AXIS_ADDRESS}(\text{axis No.}) = (32 \times 0) + \text{ID}$

'the local axis interface of the expansion module AXIS 0

$\text{AXIS_ADDRESS}(\text{axis No.}) = (32 \times 1) + \text{ID}$

'the local axis interface of the expansion module AXIS 1

The ID is the combined value of the DIP bit1-4 of the expansion module. After the mapping is completed and the axis parameters such as ATYPE are set, the expansion axis can be used.

Example:

$\text{ATYPE}(6) = 0$ 'set as virtual axis

$\text{AXIS_ADDRESS}(6) = 1 + (32 \times 0)$

'ZCAN expansion module ID 1 axis 0 is mapped to axis 6

$\text{ATYPE}(6) = 8$ 'ZCAN extended axis type, pulse direction stepping or servo

$\text{UNITS}(6) = 1000$ 'pulse equivalent 1000

$\text{SPEED}(6) = 100$ 'speed 100units/s

$\text{ACCEL}(6) = 1000$ 'acceleration 1000units/s²

$\text{MOVE}(100) \text{ AXIS}(6)$ 'extended axis movement 100units

Extended resource viewing:

According to the CAN connection, after the power is turned on, and the wiring resistance dial code is set correctly, the power indication led (POWER) and the running indication led (RUN), the IO power indication led (IO POWER) are on, and the alarm indication led (ALM) is off. At the same time, the "Controller" - "State the controller" - "ZCanNodes" in the RTSys software displays the expansion module information and the extended IO number range.

The dial ID and the corresponding resource number when connecting multiple expansion modules are as follows:

| | | | | | | | |
|-------|---------------|----|-----------|-----------|----------|----------|--|
| Local | 432-0(ZMC432) | 32 | 30(0-29) | 18(0-17) | 0 | 2(0-1) | |
| 1 | 48(ZIO1632) | 0 | 16(32-47) | 32(32-63) | 0 | 0 | |
| 3 | 26(ZIO16082) | 2 | 16(64-79) | 8(64-71) | 0 | 0 | |
| 4 | 10(ZAIO0802) | 0 | 0 | 0 | 8(40-47) | 2(20-21) | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

ALM indicator light is on, please check whether the wiring, resistor and dial setting are correct, and whether the CANIO_ADDRESS command of the controller is set as the master end (32), and whether the CAN communication speed is consistent.

Chapter V Programming

5.1. Program in RTSys Software

RTSys is a PC-side program development, debugging and diagnostic software for the Zmotion motion controllers. Through it, users can easily edit and configure the controller program, quickly develop applications, diagnose system operating parameters in real time, and debug the running program in real time. What's more, it supports Chinese and English bilingual environments.

In RTSys, there are 4 programming languages for motion control development, Basic, PLC, HMI and C language, they can run multi-tasks among them, especially for Basic, multi-task running can be achieved separately, hybrid programming is also OK with PLC, HMI and C language.

RTSys Downloading Address: https://www.zmotionglobal.com/pro_info_282.html

And related manuals can be found in "Download":


Features



Parameters



System Architecture



Download

| Name | Version No | Format | Size | Download |
|---|--------------|--------|--------|--------------------------|
| RTSys Development Software | V1.2.02 | RAR | 148MB | Download |
| RTSys User Manual V1.2.0 | V1.2.0 | PDF | 5.33MB | Download |
| RTBasic Programming Manual | V1.1.0 | PDF | 18.3MB | Download |
| RTHMI Programming Manual | V1.2.0 | PDF | 7.23MB | Download |
| Quick Start | VQuick Start | ZIP | 16.1MB | Download |
| ZVision Basic Programming Manual V1.3.0 | V1.3.0 | PDF | 10.6MB | Download |
| ZPLC | V1.0 | PDF | 1.7M | Download |
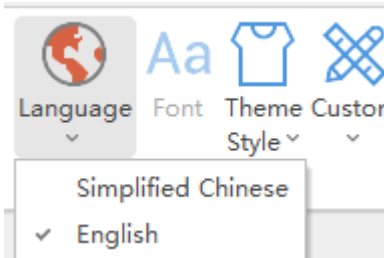
| Step | Operations | Display Interface |
|------|--|--|
| 1 | Switch the Language: "Language" – "English", then there will pop |  |
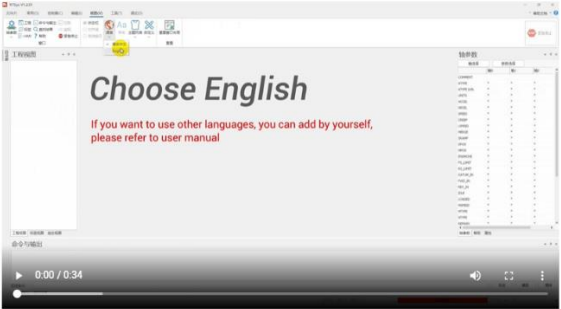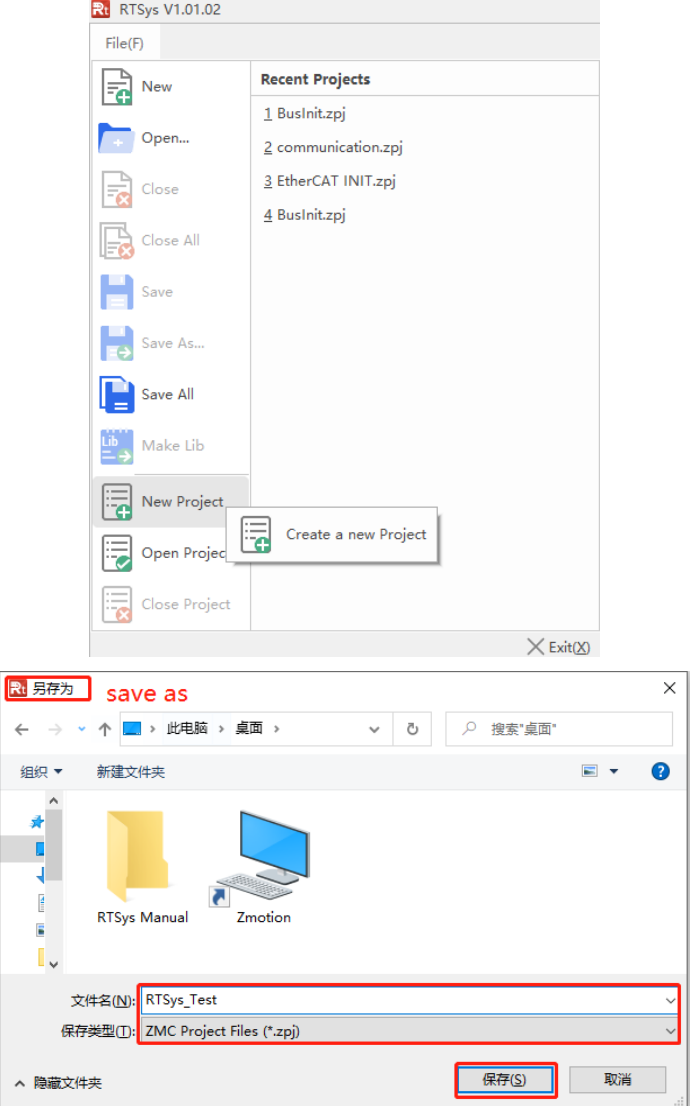
| | | |
|---|---|---|
| | <p>up one window, click OK, and restart it.</p> | <p><u>Language Switch Video Showing:</u></p> <p>E. How to Switch the Language</p> <p>Find “视图” (the fourth one in the above menu), then find the “语言”, choose English, restart RTSys. English RTSys will take effect when opened again.</p>  |
| 2 | <p>New Project:</p> <p>“File” – “New Project”, Save as window will pop up, then enter file name, save the project file with suffix “zpj.”.</p> |  |
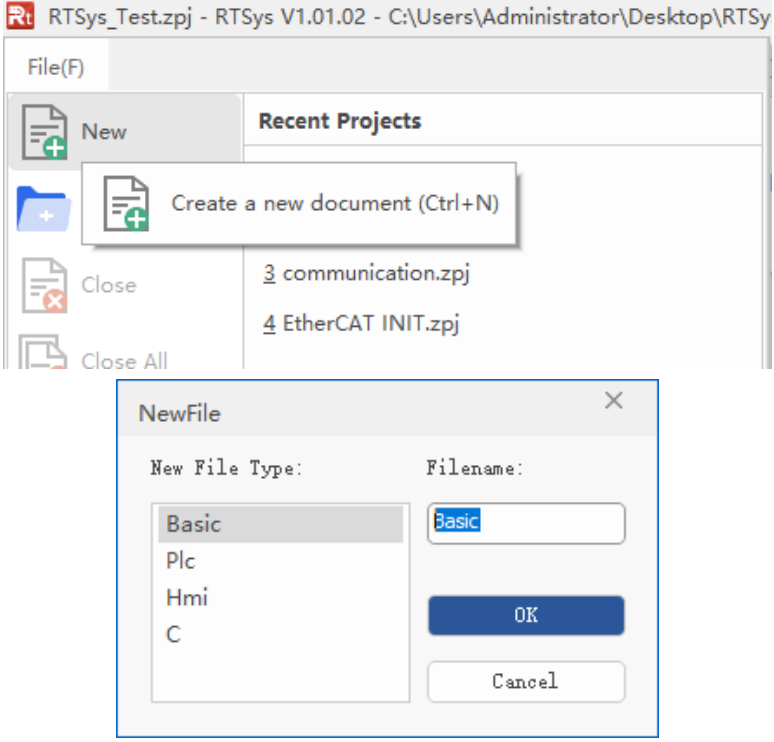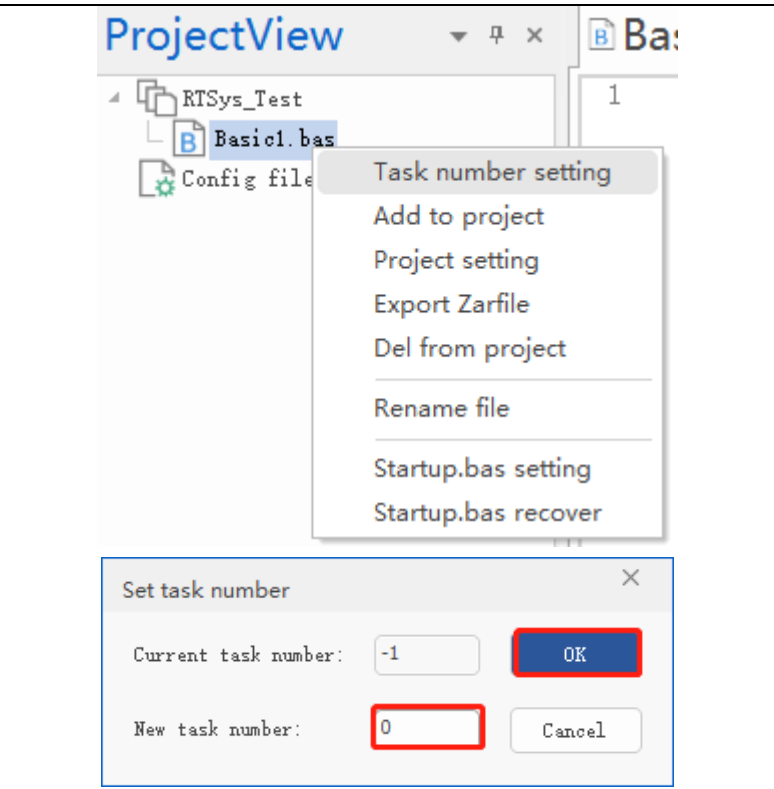
| | | |
|---|---|---|
| 3 | <p>New File: "File" – "New File", select file type to build, here select Basic, click "OK".</p> |  |
| 4 | <p>Set Auto Run No.: right click the file, open task number setting window, enter task No., which can be any + value, no priority, but not the same.</p> |  |
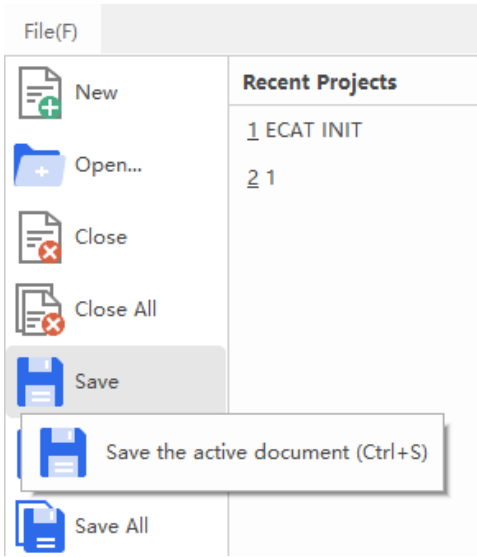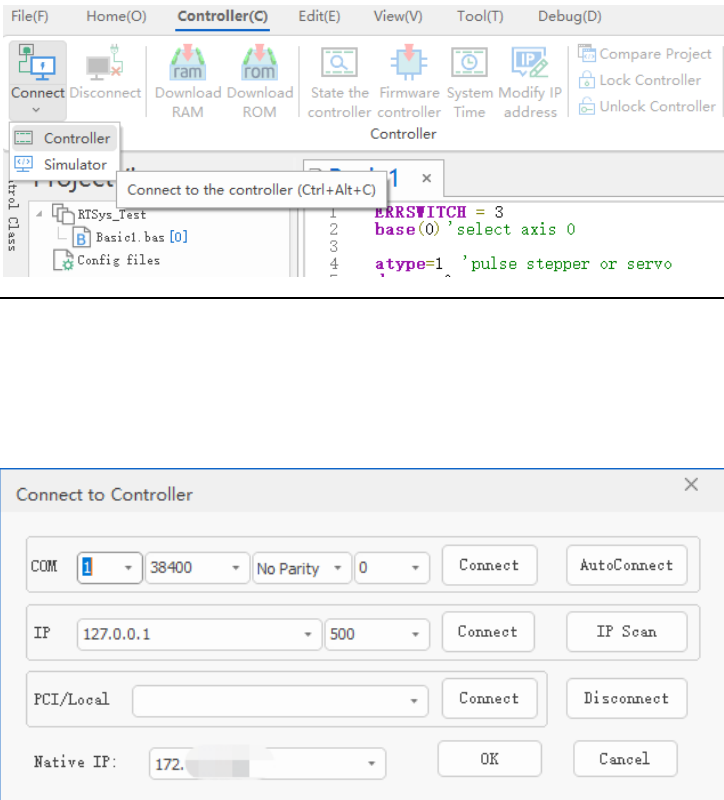
| | | |
|---|---|--|
| 5 | <p>Save File: edit the program in program editing window, click "save", new built file will be saved under "zpj." project automatically.</p> <p>"Save all" means all files under this project will be saved.</p> |  |
| 6 | <p>Connection:</p> <p>Click "controller – connect", if no controller, select connect to simulator.</p> <p>Then, "connect to controller" window will pop up, you can select serial port or net port to connect, select matched serial port parameters or net port IP address, then click "connect".</p> |  |
| 7 | <p>Download Program into</p> | <ul style="list-style-type: none"> ● RAM: it will not save when power off. ● ROM: it will save data when power off, and when the program |

| | <p>Controller:</p> <p>“Ram/Rom” – “download RAM / download ROM”, if it is successful, there is print indication, at the same time, program is downloaded into controller and runs automatically.</p> | <p>is connected to controller again, running according to task No.</p> <div><div><div>File(F)Home(O)Controller(C)</div><div><div><div><div>ram</div><div>rom</div></div><div>Download Download</div><div>RAM ROM</div></div><div>Connect Disconnect</div></div></div></div> <div><div>Output</div><div>Connected to Controller:VPLC5xx-Simu Version:5.20-20240426. Down to Controller Ram Success, 2024-08-15 11:16:29, Elapsed time: 94ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div> <div><div>Output</div><div>Down to Controller Rom Success, 2024-08-15 11:17:02, Elapsed time: 93ms.</div><div>Command: <input type="text"/> Send Capture Clear</div><div>OutputFind Results</div></div> | | | | | | | | | | | | | | | |
|-------------------------------------|---|--|--------|------------|--------|--------|-------|-------------------------------------|---|------|-----|-----------|-------------------------------------|---|------|---|------------|
| 8 | <p>Debug: “Debug” – “Start/Stop Debug” to call “Task” and “Watch” window, because it was downloaded before, here select “Attach the current”.</p> | <div><div><div>File(F)Home(O)Controller(C)Edit(E)View(V)Tool(T)Debug(D)</div><div><div><div><div>ram</div><div>rom</div></div><div>Download Download</div><div>RAM ROM</div></div><div><div><div>bug</div><div>Start/Stop Debug</div></div></div><div><div><div>Go</div><div>Pause</div><div>Run to Cursor</div></div><div>Step IntoStep OverStep Out</div></div><div><div><div>Breakpoint</div></div></div></div><div>Debug</div></div></div> <div><div>Enter Debug</div><div><div>Select enter mode</div><div><div><div><input type="radio"/> Down ram again</div><div><input type="radio"/> Down rom again</div><div><input type="radio"/> No download, Reset</div><div><input checked="" type="radio"/> Attach to current</div></div></div><div><div>OK</div><div>Cancel</div></div></div></div> | | | | | | | | | | | | | | | |
| 9 | <p>Scope function:</p> <p>Click “View” – “Scope” to open oscilloscope. It can capture needed data, for debugging.</p> | <div><div><div>Scope</div><div>Channel Config Accessibility Help</div><div><div><div><div>Manual-trigger</div><div>Manual-trigger</div></div><div><div>X Scale: 1s</div><div>Display: YT mode</div></div><div><div>Channels: 2</div><div>3D view: Oblique view</div></div><div><div><input type="checkbox"/> Continuous</div><div><input type="checkbox"/> Follow</div><div><input type="checkbox"/> Magnifier</div></div></div><div><div>Channel</div><div>Cursor</div><div>Statistics</div></div><div><table><tr><th>Show</th><th>Index</th><th>Source</th><th>Offset</th><th>Scale</th></tr><tr><td><input checked="" type="checkbox"/></td><td>0</td><td>DPOS</td><td>200</td><td>auto(200)</td></tr><tr><td><input checked="" type="checkbox"/></td><td>1</td><td>DPOS</td><td>0</td><td>auto(0.01)</td></tr></table></div></div><div><div><div>DPOS(0)</div><div>DPOS(1)</div></div><div><div>Min: 0.00Max: 0.00Scale: 200</div><div>Min: 0.00Max: 0.00Scale: 0.01</div></div></div></div></div> | Show | Index | Source | Offset | Scale | <input checked="" type="checkbox"/> | 0 | DPOS | 200 | auto(200) | <input checked="" type="checkbox"/> | 1 | DPOS | 0 | auto(0.01) |
| Show | Index | Source | Offset | Scale | | | | | | | | | | | | | |
| <input checked="" type="checkbox"/> | 0 | DPOS | 200 | auto(200) | | | | | | | | | | | | | |
| <input checked="" type="checkbox"/> | 1 | DPOS | 0 | auto(0.01) | | | | | | | | | | | | | |

Notes:

- When opening an project, choose to open the zpj file of the project. **If only the Bas file is opened, the program cannot be downloaded to the controller.**
- When the project is not created, only the Bas file **cannot be** downloaded to the controller.
- The number 0 in automatic operation represents the task number, and the program runs with task 0, and the task number has no priority.
- If no task number is set for the files in the entire project, when downloading to the controller, the system prompts the following message **WARN: no program set autorun**

5.2. Upgrade Controller Firmware

Firmware upgrade can be achieved by downloading zfm firmware package in RTSys. zfm file is the firmware upgrade package of controller, please select corresponding firmware because different models are with different packages, please contact manufacturer).

How to update:

- a. Open [ZDevelop](#) / [RTSys](#) software, then click "controller – connect", find PCI/LOCAL method, click "connect". If connected, there will be "Connected to Controller: PCIE464 Version: 4.93 – 20231220." In "output" window.
- b. Click "controller – state the controller", find basic info, then current software version can be checked.
- c. Click "controller – update firmware", current controller model and software version can be viewed.
- d. Click "browse", and select saved firmware file, click "update", then one window will pop up, please click "ok".
- e. After that, "connect to controller" window appears again, and please select "PCI/Local" again, and click "connect".
- f. When connection is successful, "firmware update" interface is shown. Now

system enters ZBIOS state, please click "update" again.

- g. When it is loaded, "firmware update" window disappears, now in output window, it shows "Update firmware to Controller Success".
- h. Do step a and step b again, check whether the firmware is updated or not.


5.3. Program in Host-Computer by PC Languages

The controller supports development under various operating systems such as windows, linux, Mac, Android, and wince, and provides dll libraries in various environments such as vc, c#, vb.net, and labview, as shown in the figure below. PC software programming refers to "[Zmotion PC Function Library Programming Manual](#)".







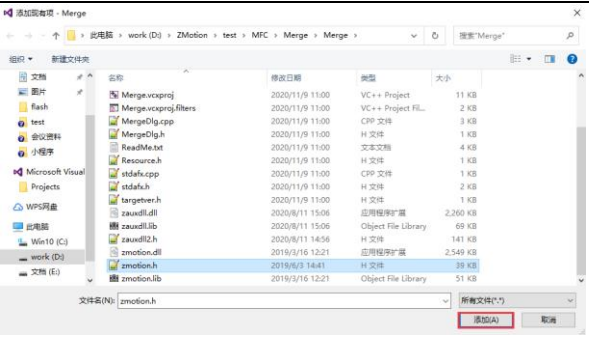
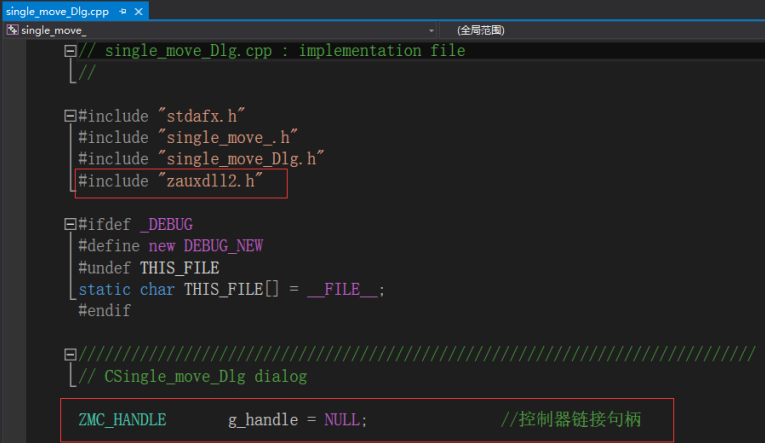
The program developed using the PC software cannot be downloaded to the controller, and it is connected to the controller through the dll dynamic library. The dll library needs to be added to the header file and declared during development.

- Get PC library file, example: https://www.zmotionglobal.com/download_list_17.html

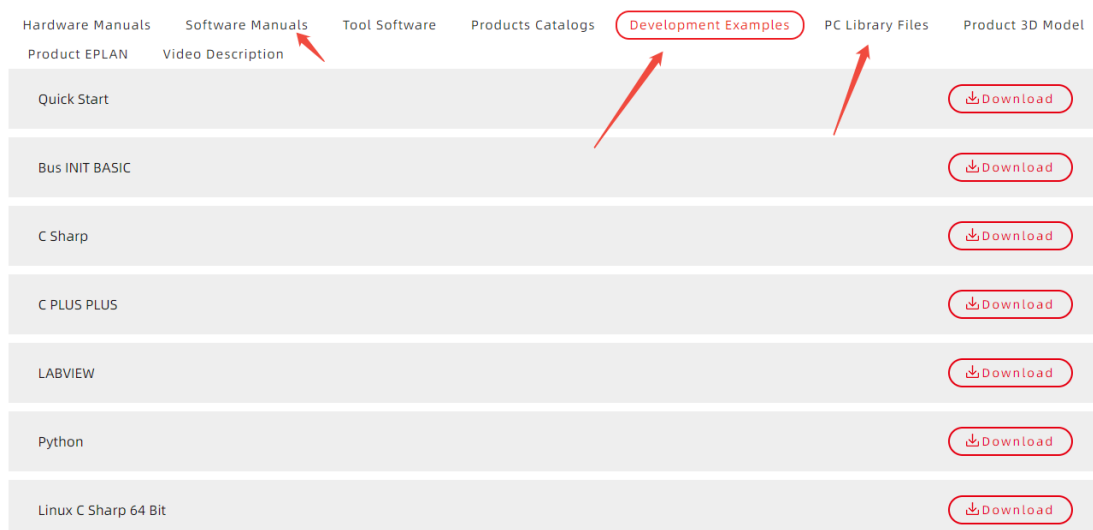

The c++ project development process in VS is as follows:
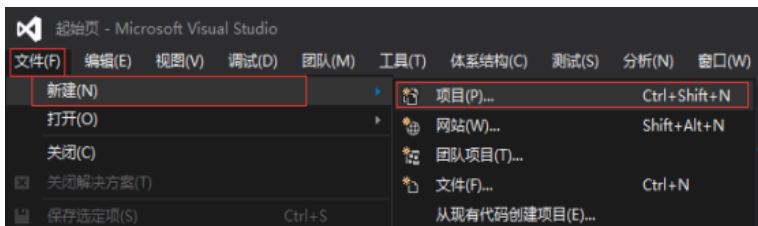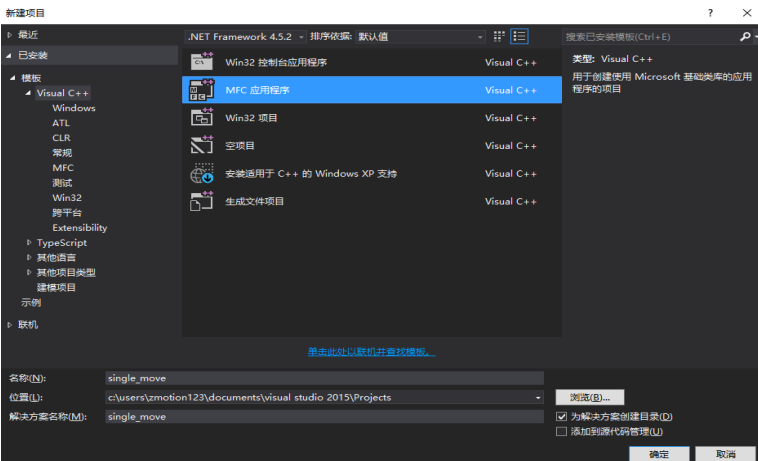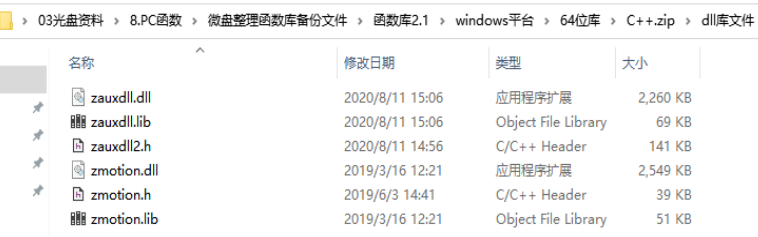
| Step | Operations | Display Interface |
|------|--|--|
| 1 | Open VS, click "File" – "New" – "Project". |  |
| 2 | Select development language as "Visual C++" and the select program type as "MFC application type". |  |
| 3 | Select "Based on basic box", click "next" or "finish". |  |
| 4 | Find C++ function library provided by manufacturer. Routine is below (64-bit library) |  |
| 5 | Copy all DLL related library files under the above path to the newly created project. | |

| | | | |
|---|--|--|---|
| 6 | <p>Add a static library and related header files to the project. Static library: <code>zauxdll.lib</code>, <code>zmotion.lib</code></p> <p>Related header files: <code>zauxdll2.h</code>, <code>zmotion.h</code></p> | <p>1) Right-click the header file first, and then select: "Add" → "Existing Item".</p> <p>2) Add static libraries and related header files in sequence in the pop-up window.</p> |   |
| 7 | <p>Declare the relevant header files and define the controller connection handle, so far the project is newly created.</p> | |  <pre> // single_moveDlg.cpp : implementation file // #include "stdafx.h" #include "single_move.h" #include "single_moveDlg.h" #include "zauxdll2.h" #ifdef _DEBUG #define new DEBUG_NEW #undef THIS_FILE static char THIS_FILE[] = __FILE__; #endif // CSingle_moveDlg dialog ZMC_HANDLE g_handle = NULL; //控制器链接句柄 </pre> |

Chapter VI Operation and Maintain

The correct operation and maintenance of the device can not only guarantee and extend the life cycle of the equipment itself, but also take technical management measures according to the pre-specified plan or the corresponding technical conditions to prevent equipment performance degradation or reduce the probability of equipment failure.

6.1. Regular Inspection and Maintenance

The working environment has an impact on the device. Therefore, it is usually inspected regularly based on the inspection cycle of 6 months to 1 year. The inspection cycle of the device can be appropriately adjusted according to the surrounding environment to make it work within the specified standard environment.

| Check item | Check content | Inspection standards |
|--------------|--|------------------------|
| power supply | Check whether the voltage is rated | DC 24V (-5%~5%) |
| surroundings | Whether the ambient temperature is within the specified range (when installed in the cabinet, the temperature inside the cabinet is the ambient temperature) | -10°C - 55°C |
| | Whether the ambient humidity is within the specified range (when installed in the cabinet, the humidity in the cabinet is the ambient humidity) | 10%-95% non-condensing |
| | Is there direct sunlight | No |
| | With or without droplets of water, oil, chemicals, etc. | No |
| | Whether there is dust, salt, iron filings, dirt | No |
| | Whether there is corrosive gas | No |
| | Whether there are flammable and | No |

| | | |
|--------------------------------|---|--|
| | explosive gases or articles | |
| | Whether the device is subjected to vibration or shock | Should be within the range of vibration resistance and impact resistance |
| | Is the heat dissipation good | Keep good ventilation and heat dissipation |
| Installation and Wiring Status | Whether the basic unit and the expansion unit are installed firmly | The mounting screws should be tightened without loosening |
| | Whether the connecting cables of the basic unit and the expansion unit are fully inserted | The connection cable cannot be loosened |
| | Are the screws of the external wiring loose | Screws should be tightened without loosening |
| | Whether the cable is damaged, aged, cracked | The cable must not have any abnormal appearance |

6.2. Common Problems & Solutions

| Problems | Suggestions |
|------------------------|--|
| Motor does not rotate. | <ol style="list-style-type: none"> 1. Check whether the ATYPE of the controller is correct. 2. Check whether hardware position limit, software position limit, alarm signal work, and whether axis states are normal. 3. Check whether motor is enabled successfully. 4. Confirm whether pulse amount UNITS and speed values are suitable. If there is the encoder feedback, check whether MPOS changes. 5. Check whether pulse mode and pulse mode of drive are matched. 6. Check whether alarm is produced on motion controller station or drive station. 7. Check whether the wiring is correct. 8. Confirm whether controller sends pulses normally. |

| | |
|---|---|
| The position limit signal is invalid. | <ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller. |
| No signal comes to the input. | <ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally, and whether the "input" view can watch the signal change of the limit sensor. 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller. |
| The output does not work. | <ol style="list-style-type: none"> 1. Check whether IO power is needed. 2. Check whether the output number matches the ID of the IO board. |
| POWER led is ON, RUN led is OFF. | <ol style="list-style-type: none"> 1. Check whether the power of the power supply is sufficient. At this time, it is best to supply power to the controller alone, and restart the controller after adjustment. 2. Check whether the ALM light flickers regularly (hardware problem). |
| RUN led is ON, ALM led is ON. | <ol style="list-style-type: none"> 1. Program running error, please check RTSys error code, and check application program. |
| Fail to connect controller to PC through serial port. | <ol style="list-style-type: none"> 1. Check whether the serial port parameters are modified by the running program, you can check all the current serial port configurations through ?*SETCOM. 2. Check whether the serial port parameters of the PC match the controller. 3. Open the device manager and check whether the serial driver of the PC is normal. |
| CAN expansion module cannot be connected. | <ol style="list-style-type: none"> 1. Check the CAN wiring and power supply circuit, whether the 120 ohm resistor is installed at both |

| | |
|--|--|
| | <p>ends.</p> <ol style="list-style-type: none"> 2. Check the master-slave configuration, communication speed configuration, etc. 3. Check the DIP switch to see if there are multiple expansion modules with the same ID. 4. Use twisted-pair cables, ground the shielding layer, and use dual power supplies for severe interference (the main power supply of the expansion module and the IO power supply are separately powered) |
| Fail to connect controller to PC through net port. | <ol style="list-style-type: none"> 1. Check IP address of PC, it needs to be at the same segment with controller IP address. 2. Check controller IP address, it can be checked and captured after connection through serial port. 3. When net port led is off, please check wiring. 4. Check whether controller power led POWER and running indicator led RUN are ON normally. 5. Check whether the cable is good quality, change one better cable to try again. 6. Check whether controller IP conflicts with other devices. 7. Check whether controller net port channel ETH are all occupied by other devices, disconnect to other devices, then try again. 8. When there are multiple net cards, don't use other net cards, or change one computer to connect again. 9. Check PC firewall setting. 10. Use "Packet Internet Groper" tool (Ping), check whether controller can be Ping, if it can't, please check physical interface or net cable. 11. Check IP address and MAC address through arp-a. |