



EtherCAT & Pulse Motion Controller


ZMC316BE

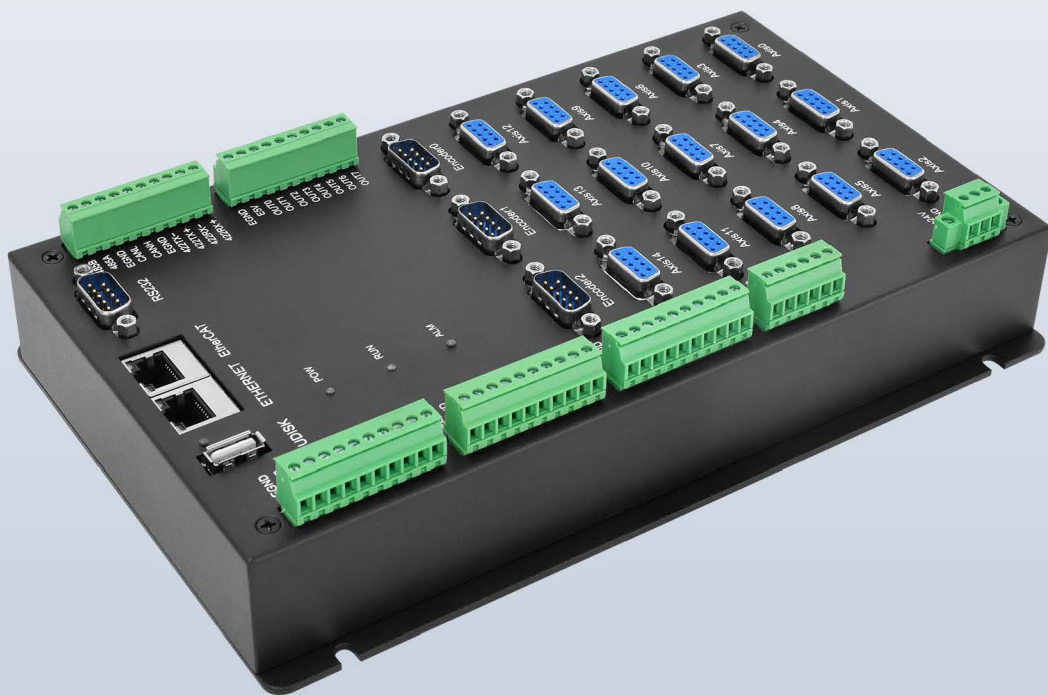


This manual is for ZMC316BE, ZMC316BE-1, ZMC316BE-2, ZMC316BE-6.

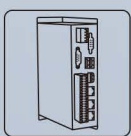


Motion
Controller

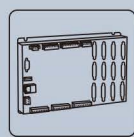


Motion
Control Card

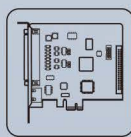

Vision Motion
Controller

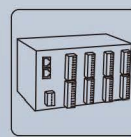

IO Expansion
Module

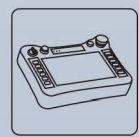

HMI



Foreword

Zmotion[®]

The motion controller provides rich interface, and it has excellent motion control performance, which can meet the expansion requirements of various projects.

This manual is copyrighted by Shenzhen Technology Co., Ltd., without the written permission of the Zmotion Technology, no person shall reproduce, translate and copy any content in this manual. The above-mentioned actions will constitute an infringement of the copyright of the company's manual, and Zmotion will investigate legal responsibility according to law.

For details about the ZMC controller software and the introduction and routine of each command, please refer to the ZBASIC software manual.

Information contained in this manual is only for reference. Due to improvements in design and functions and other aspects, Zmotion Technology reserves the final interpretation! Subject to change without notice!

Pay attention to safety when debugging the machine!

Please be sure to design an effective safety protection device in the machine, and add an error handling program in the software, otherwise Zmotion has no obligation or responsibility for the loss caused.

In order to ensure the safe, normal and effective use of the product, please be sure to read this product manual carefully before installing and using the product.



Safety Statement

- This chapter describes the safety precautions required for the correct use of this product. Before using this product, please read the instructions for use and correctly understand the relevant information on safety precautions.
- This product should be used in an environment that meets the design specifications, otherwise it may cause equipment damage or personal injury, and malfunctions or component damage caused by failure to comply with relevant regulations are not within the scope of product quality assurance.
- Zmotion will not take any legal responsibility for personal safety accidents and property losses caused by failure to comply with the contents of this manual or illegal operation of products.

Safety Level Definition

According to the level, it can be divided into " **Danger** " and " **Caution** ". Failure to operate as required may result in moderate injury, minor injury or equipment damage.

Please keep this guide in a safe place for reading when needed, and be sure to hand this manual to the end user.

Install	
 Danger	<ul style="list-style-type: none">◆ When the controller is disassembled, all external power supplies used by the system should be disconnected before operation, otherwise it may cause misoperation or damage to the equipment.◆ It is forbidden to use in the following places: places with dust, oil fume, conductive dust, corrosive gas and flammable gas; places exposed to high temperature, condensation, wind and rain; places with vibration and shock. Electric shock, fire and misuse can cause product damage and deterioration.
 Notice	<ul style="list-style-type: none">◆ Avoid metal shavings and wire ends falling into the hardware circuit board during installation.◆ After installation, ensure that there are no foreign objects on the hardware circuit board.◆ When installing, make it tightly and firmly with the mounting frame.

	<ul style="list-style-type: none"> ◆ Improper installation of the controller may result in misoperation, failure and fire.
Wiring	
 <p>Danger</p>	<ul style="list-style-type: none"> ◆ The specifications and installation methods of the external wiring of the equipment shall comply with the requirements of local power distribution regulations. ◆ When wiring, all external power supplies used by the system should be disconnected before operation. ◆ When powering on and running after the wiring work is completed, the terminals attached to the product must be installed. ◆ Cable terminals should be well insulated to ensure that the insulation distance between cables will not be reduced after the cables are installed on the terminal block.
 <p>Notice</p>	<ul style="list-style-type: none"> ◆ Avoid metal shavings and wire ends falling into the hardware circuit board during installation. ◆ The cable connection should be carried out correctly on the basis of confirming the type of the connected interface. ◆ It should be confirmed that the cables pressed into the terminals are in good contact. ◆ Do not bundle the control wires and communication cables with the main circuit or power supply wires, etc., and the distance between the wires should be more than 100 mm, otherwise noise may cause malfunction. ◆ If the controller is not installed properly, it may cause electric shock or equipment failure or malfunction.

Content

Chapter I Production Information.....	3
1.1. Product Information.....	3
1.2. Function Features.....	3
1.3. System Frame	4
1.4. Hardware Installment.....	5
Chapter II Product Specification	7
2.1. Basic Specification.....	7
2.2. Order Information	8
2.3. Interface Definition.....	9
2.4. Work Environment	10
Chapter III Wiring, Communication Configuration	12
3.1. Power Input	12
3.1.1. Power Specification.....	12
3.2. RS485, RS422, CAN Communication Interface.....	12
3.2.1. RS485, RS422, CAN Communication Specification & Wiring.....	13
3.2.2. Basic Usage.....	16
3.3. RS232 Serial Port	17
3.3.1. RS232 Communication Interface Specification & Wiring	18
3.3.2. Basic Usage Method	19
3.4. IN Digital Input & High-Speed Latch Port.....	20
3.4.1. Digital Input Specification & Wiring	21
3.4.2. Basic Usage Method	23
3.5. OUT Digital Output, PWM Terminal, Hardware Comparison Output.....	23
3.5.1. Digital Output Specification & Wiring.....	24
3.5.2. Basic Usage.....	26
3.6. AD/DA Analog Input & Output	27

3.6.1.	Analog Input / Output Specification & Wiring	28
3.6.2.	Basic Usage Method	29
3.7.	U Disk	29
3.8.	ETHERNET	30
3.9.	EtherCAT Bus Interface	31
3.10.	ENCODER Interface.....	33
3.10.1.	ENCODER Interface Specification & Wiring.....	34
3.11.	AXIS Differential Pulse Axis Interface	35
3.11.1.	AXIS Interface Signal Specification & Wiring.....	36
3.11.2.	Basic Usage Method	38
Chapter IV	Expansion Module	40
4.1.	CAN Bus Expansion.....	40
4.1.1.	CAN Bus Expansion Wiring.....	40
4.1.2.	CAN Bus Expansion Resource Mapping	42
4.2.	EtherCAT Bus Expansion	46
4.2.1.	EtherCAT Bus Expansion Wiring.....	46
4.2.2.	EtherCAT Bus Expansion Resource Mapping	47
Chapter V	Program and Applications.....	50
5.1.	ZDevelop Software Usage.....	50
5.2.	PC Upper-Computer Program Application	55
Chapter VI	Run and Maintain	58
6.1.	Regular Inspection and Maintenance	58
6.2.	Common Problems.....	59

Chapter I Production Information

1.1. Product Information

ZMC is the abbreviation of the network motion controller model launched by Zmotion Technology.

ZMC316BE high-performance multi-axis motion controller is a stand-alone motion controller compatible with EtherCAT bus and pulse type. The controller itself supports 16 axes at most, but it can be extended to 22 axes for complex continuous trajectory control requirements.


ZMC3 series high-performance multi-axis motion controller can be applied in robots (SCARA, Delta, 6 joints), electronic semiconductor equipment (testing equipment, assembly equipment, locking equipment, soldering machine), dispensing equipment, non-standard equipment, printing and packaging equipment, textile and garment equipment, stage entertainment equipment, medical equipment, assembly line, etc.

1.2. Function Features

- ◆ Motion control of up to 22 axes.
- ◆ Pulse output mode: pulse / direction or dual pulses.
- ◆ Maximum pulse frequency output of each axis: 10MHZ.
- ◆ 4096 isolated inputs and 4096 isolated outputs can be extended at most through CAN bus.
- ◆ Axis position limit signal / origin signal port can be configured as any input at will.
- ◆ The maximum output current of general digital outputs can reach 300mA, which can directly drive some kinds of solenoid valves.


- ◆ Interfaces: EtherCAT, RS232, RS485, RS422, U Disk, Ethernet.
- ◆ Support linear interpolation, any circular interpolation, helical interpolation and spline interpolation of 22 axes at most.
- ◆ Support electronic cam, electronic gear, position latch, synchronous follow, virtual axis, etc.
- ◆ Support pulse closed loop, pitch compensation and other functions.
- ◆ Multi-file and multi-task programming in ZBasic.
- ◆ A variety of program encryption methods to protect the intellectual property rights of customers.
- ◆ Power failure detection and power failure storage.

1.3. System Frame

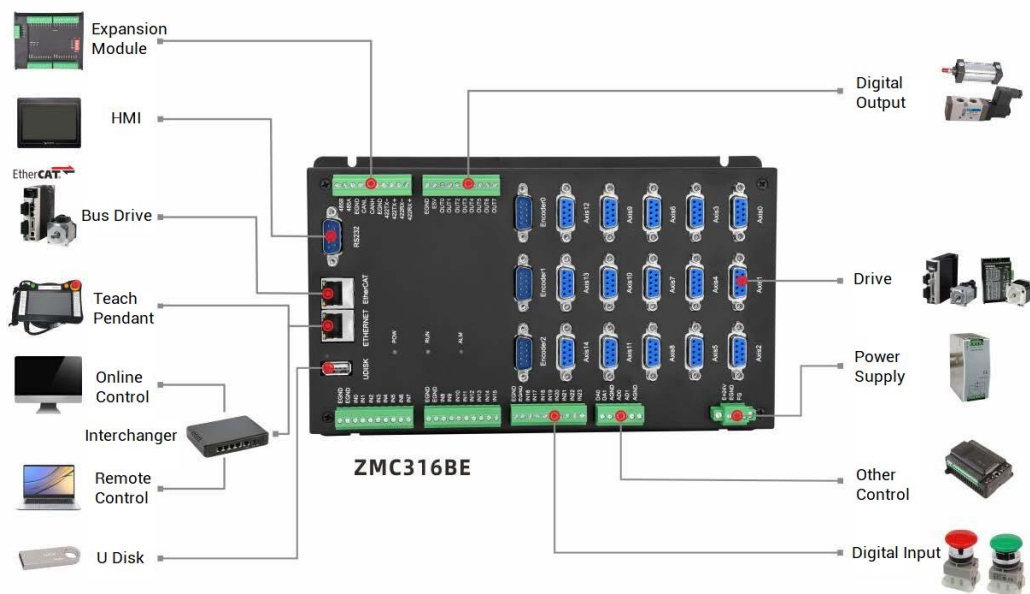

1.4. Hardware Installment

The ZMC316BE motion controller adopts the horizontal installation method of screw fixing, and each controller should be installed with 4 screws for fastening.

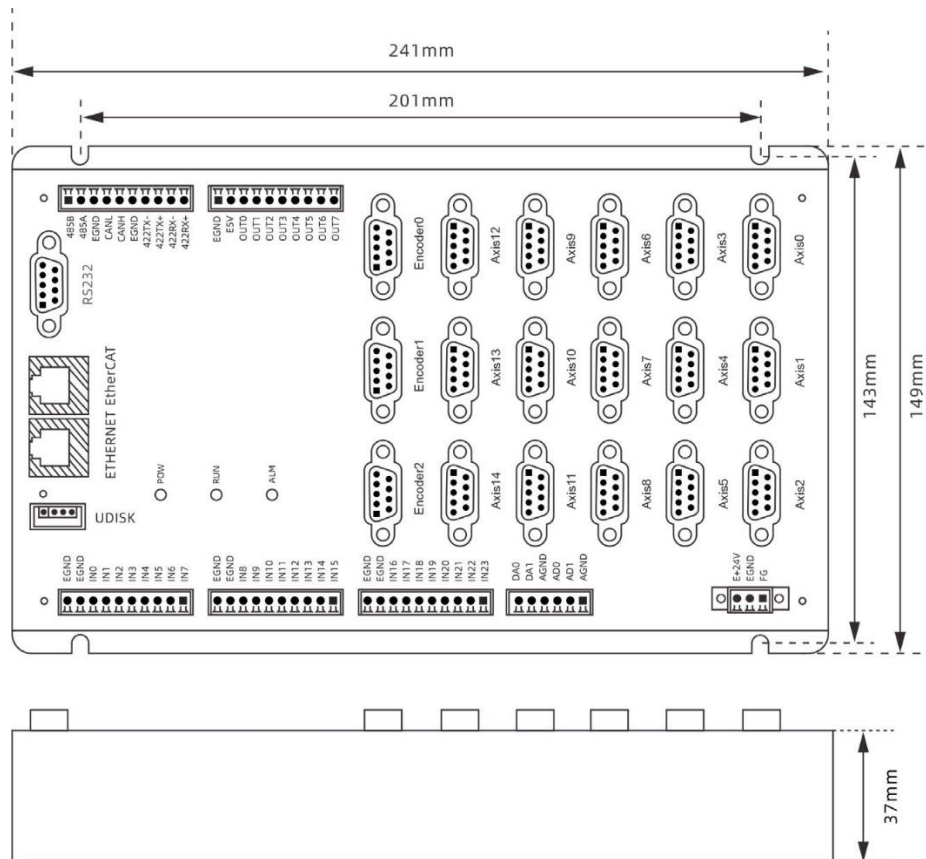

→ Unit: mm → Installment Hole Diameter: 4.5mm



Installation attention

- Non-professionals are strictly prohibited to operate. Specifically, professionals who had been trained related electrical equipment, or who master electrical knowledge.
- Please be sure to read the product instruction manual and safety precautions carefully before installation.
- Before installation, please ensure that the product is powered off.
- Do not disassemble the module, otherwise the machine may be damaged.
- Avoid direct sunlight installation.


- | | |
|--|---|
| | <ul style="list-style-type: none">● In order to facilitate ventilation and controller replacement, 2-3cm should be left between the upper and lower parts of the controller and the installation environment and surrounding components.● Considering the convenient operation and maintenance of the controller, please do not install the controller in the following places:<ul style="list-style-type: none">a) places where the surrounding ambient temperature exceeds the range of -10°C-55°Cb) places where the ambient humidity exceeds the range of 10%-95% (non-condensing)c) places with corrosive gases and flammable gasesd) places with many conductive powders such as dust and iron powder, oil mist, salt, and organic solvents |
|--|---|

Chapter II Product Specification

2.1. Basic Specification


Item	Description
Model	ZMC316BE
Basic Axes	16 (15 specialized pulse axis interfaces + 1 general output that supports pulse output)
Max Extended Axes	22
Basic Axes Type	EtherCAT/local pulse axis/encoder axis
Digital IO	24+15 inputs, 8+15 outputs
Max Extended IO	4096 inputs, 4096 outputs
PWM	2
AD/DA	2 general ADs, 0-10V. 2 general DAs, 0-10V.
Max Extended AD/DA	520 ADs, 520 DAs
Pulse Bit	32
Encoder Bit	32
Speed & Acceleration Bit	32
Pulse Max Frequency	10MHz
Motion Axis Buffer	128
Array Space	320000
Program Space	15MByte
Flash Space	126MByte
Power Supply Input	24V DC input
Communication Interfaces	RS232, RS485, RS422, Ethernet, U disk, CAN, EtherCAT
Dimensions	241mm*149mm*37mm

2.2. Order Information

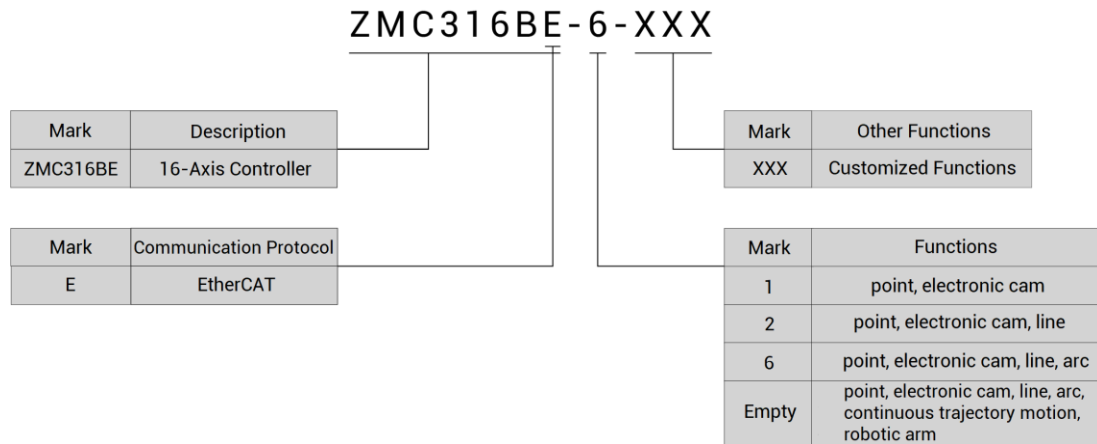

Model	Description
ZMC316BE	16 axes, point to point, linear, circular, electronic cam, continuous trajectory motion, robotic arm instructions.
ZMC316BE-1	16 axes, point to point, electronic cam.
ZMC316BE-2	16 axes, point to point, linear, electronic cam.
ZMC316BE-6	16 axes, point to point, linear, circular, electronic cam.

2.3. Interface Definition

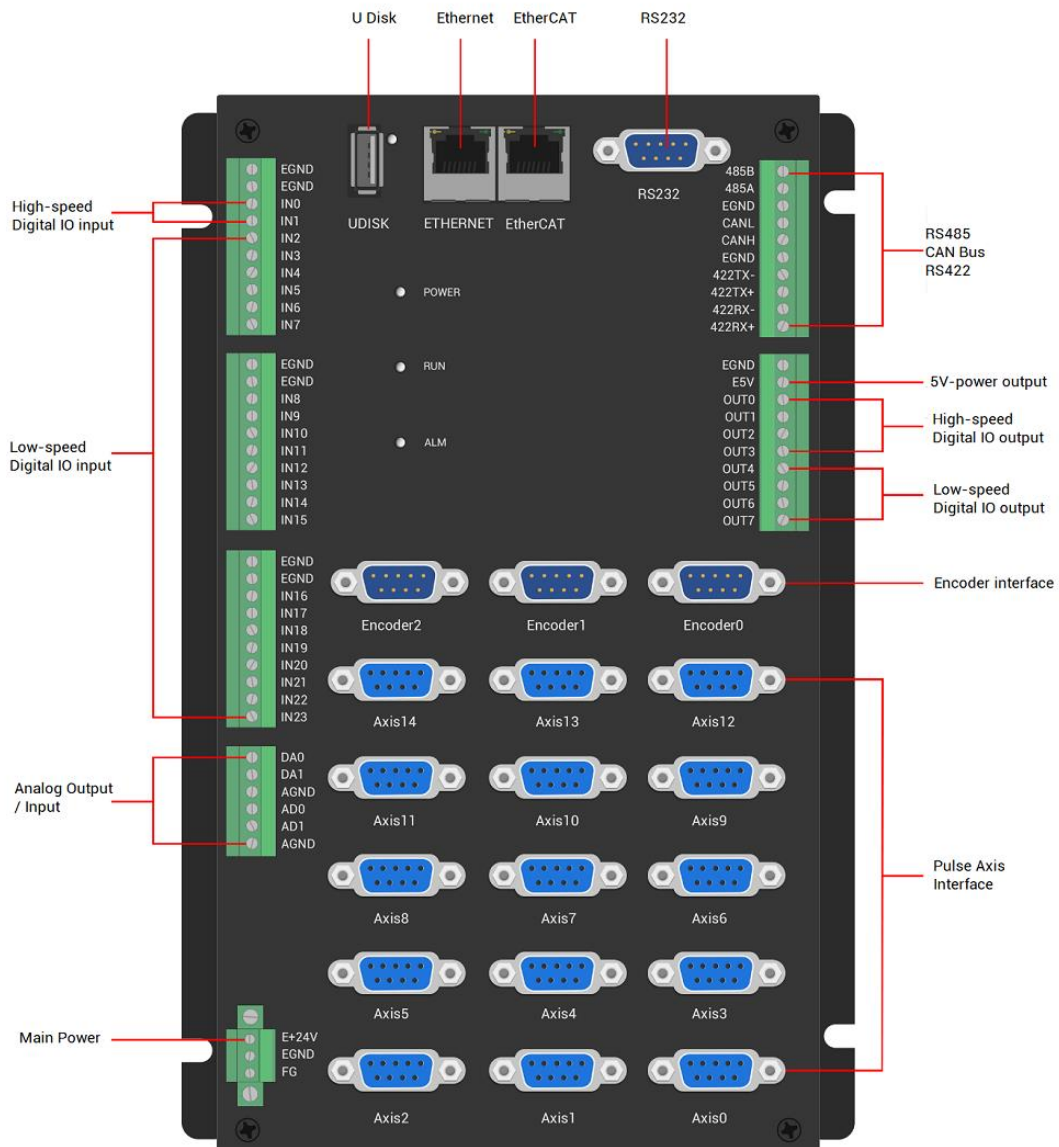

→ Interface Description

Mark	Interface	Number	Description
POW	Status Indication Light	1	Power indicator: it lights when power is conducted.
RUN		1	Run indicator: it lights when runs normally
ALM		1	Error indicator: it lights when runs abnormally
RS232	RS232 serial port (port0)	1	Use MODBUS_RTU protocol
RS485	RS485 serial	1	Use MODBUS_RTU protocol

	port (port1)		
RS422	RS422 serial port (port2)	1	Use MODBUS_RTU protocol
EtherCAT	EtherCAT bus interface	1	EtherCAT bus interface, connect to EtherCAT bus drive and EtherCAT bus expansion module
ETHERNET	Ethernet	1	Use MODBUS_TCP protocol, expand Ethernet through interchanger, the number of net port channels can be checked through "?*port", default IP address id 192.168.0.11
UDISK	U disk interface	1	Insert U disk equipment
E+24V	Main power	1	24V DC power supplies for controller
CAN	CAN bus interface	1	Connect to CAN expansion module or controller.
IN	Digital IO input	24+15	NPN type, internal 24V supply power, 2 high-speed inputs, IN0-1 have latch function, IN0-2 have encoder function.
OUT	Digital IO output	8+15	NPN type, OUT0-1 support PWM function, OUT2-3 support pulse output function.
AD/DA	Analog input / output	2	Resolution: 12 bits, 0-10V
ENCODER	Encoder	3	Include differential encoder input
AXIS	Pulse axis	15	Include differential pulse output

2.4. Work Environment

Item		Parameters
Work Temperature		-10℃-55℃
Work relative Humidity		10%-95% non-condensing
Storage Temperature		-40℃ ~ 80℃ (not frozen)
Storage Humidity		Below 90%RH (no frost)
vibration	Frequency	5-150Hz


	Displacement	3.5mm(directly install)(<9Hz)
	Acceleration	1g(directly install)(>9Hz)
	Direction	3 axial direction
Shock (collide)		15g, 11ms, half sinusoid, 3 axial direction
Degree of Protection		IP20

Chapter III Wiring, Communication Configuration

3.1. Power Input

The power input adopts a screw-type pluggable terminal with a 5Pin pitch of 3.81mm, which is the power supply of the controller.

→ Terminal Definition:

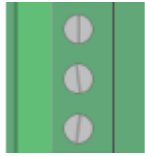Terminal	Name	Type	Function
	E+24V	Input	DC input positive pole
	EGND	Input	DC input negative pole
	FG	Connect to ground	Case Protection Ground

3.1.1. Power Specification



→ Specification

Item	Description
Input Voltage	DC24V(-5%~5%)
Opening Current	≤0.5A
Work Current	≤0.4A
Anti-reverse connection	YES
Overcurrent Protection	YES

3.2. RS485, RS422, CAN Communication Interface

The communication interface adopts a screw-type pluggable wiring terminal with a 10Pin spacing of 3.81mm. And this terminal can be shared with controller RS485, RS422 and CAN communication. It supports MODBUS_RTU protocol and custom communication.

→ Terminal Definition:

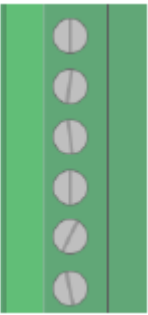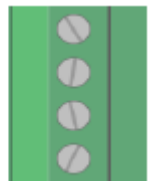Terminal	Name	Function
485B 485A EGND CANL CANH EGND 	485B	485-
	485A	485+
	EGND	Communication Public End
	CANL	CAN differential data -
	CANH	CAN differential data +
	EGND	Communication Public End
422TX- 422TX+ 422RX- 422RX+ 	422TX-	RS422 send -
	422TX+	RS422 send +
	422RX-	RS422 receive -
	422RX+	RS422 receive +

3.2.1. RS485, RS422, CAN Communication Specification & Wiring

The RS485 serial port supports the MODBUS_RTU protocol and custom communication, mainly including 485A, 485B and common port.

The CAN interface of the controller adopts the standard CAN communication protocol, which mainly includes three ports, CANL, CANH and the common port. And it supports connecting CAN expansion modules and other standard CAN devices.

RS422 serial port supports MODBUS_RTU protocol and custom communication, mainly including 422TX-, 422TX+, 422RX-, 422RX+ and common port.


→ Specification

Item	RS485	CAN	RS422
Max Communication Rate (bps)	115200	1M	115200
Terminal Resistor	/	120Ω	/


Topology	Daisy chain connection structure		Point to multi-point
Nodes can be extended	Up to 127	Up to 16	Up to 10
Communication Distance	Longer communication distance, lower communication rate, max 30m is recommended.		

→ **Wiring Reference**


Connect 485A and 485B of RS485 to 485A and 485B of the controller correspondingly, and connect the common terminal EGND of both parties of RS485 communication together.

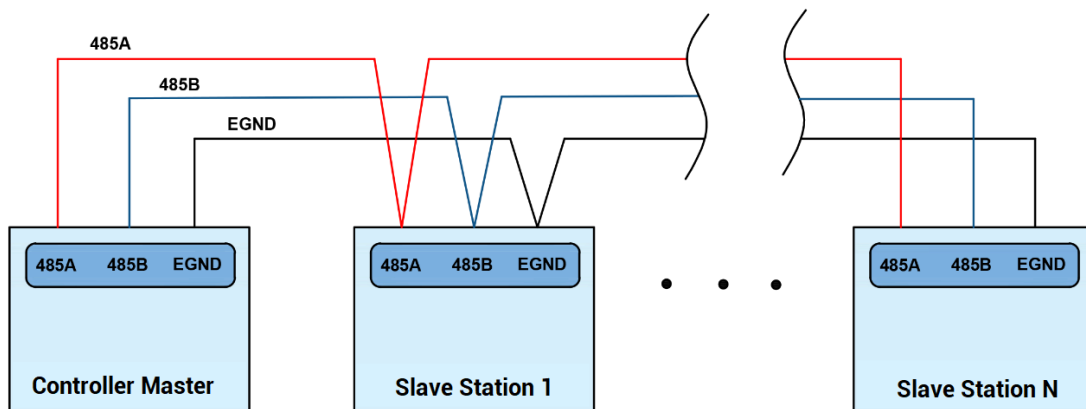

Connect the CANL and CANH of the standard CAN module to the CANL and CANH of the other side correspondingly. And public ends of the CAN bus communication both parties are connected together. In CAN bus left and right sides, connect a 120Ω resistor respectively (please see below graphic).

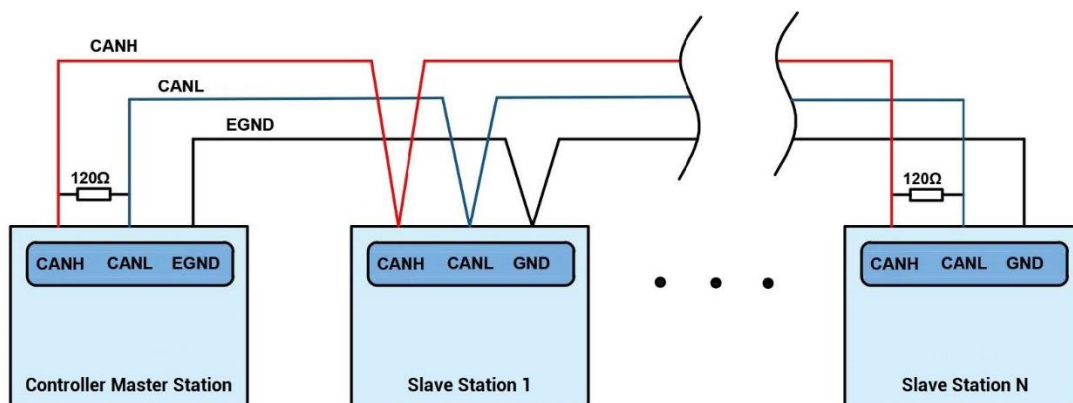

Connect 422TX and 422RX of RS422 to 422TX and 422RX of the corresponding controller, and connect the common terminal EGND of both RS422 communication parties together.

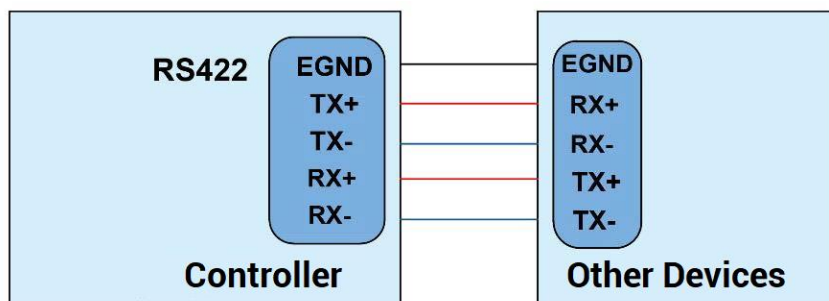


→ Wiring Notes:

- As above, the daisy chain topology is used for wiring, so the star topology cannot be used. When the use environment is ideal and there are few nodes, the branch structure can also be considered.
- Please connect a 120Ω terminal resistor in parallel at the two ends of the CAN bus to match the circuit impedance and ensure communication stability.
- Please be sure to connect the common terminal of each node on the CAN bus to prevent the CAN chip from burning out.
- Please use twisted-pair shielded wires, especially in harsh environments, make sure the shielding layer is fully grounded.
- On-site wiring should also pay attention to the distance between strong current and weak current wiring, it is recommended to be more than 20cm.
- It should be noted that the equipment grounding (chassis) on the entire line must be good, and the grounding of the chassis should be connected to the standard factory ground pile.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

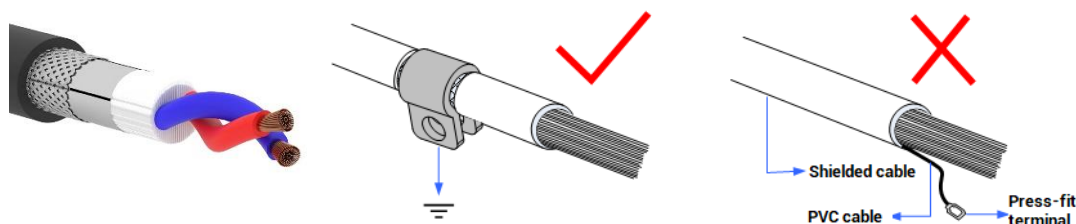

3.2.2. Basic Usage

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use ETHERNET, RS232 or RS485 to connect to ZDevelop.
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station number and configuration parameters, see "ZBasic Programming Manual" for details.
- (4) Please use the "CANIO_ADDRESS" command to set the master's "address" and "speed" according to the needs, and use the "CANIO_ENABLE" command to enable or disable the internal CAN master function, or through "ZDevelop/Controller/State the Controller/Communication Info" to view the CAN status intuitively, and refer to the "ZBasic Programming Manual" for details.

```
CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON

Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address: 1, variable:2 delay:400ms
Baud:38400
DataBits:8
StopBits:1
Parity:0
Port1:(RS485) is ModbusSlave Mode.
Address: 1, variable:2 delay:400ms
Baud:38400
DataBits:8
StopBits:1
Parity:0
```

- (5) Correctly set the relevant parameters of the third-party equipment according to their


respective instructions to match the parameters of each node.

- (6) Correctly set the "address" and "speed" of the slave expansion module according to the manual of the slave.
- (7) After all the settings are completed, restart the power supply of all stations to establish communication.
- (8) Note that the "speed" settings of each node on the CAN bus must be consistent, and the "address" settings cannot cause conflicts, otherwise the "ALM" alarm light will be on, and the communication establishment will fail or the communication will be disordered.

3.3. RS232 Serial Port

RS232 is in a standard DB9 male socket and supports MODBUS_RTU protocol and custom communication.

→ Interface Definition:

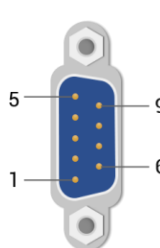
Terminal	PIN	Name	Type	Function
	1, 4, 6, 7, 8	NC	Spare	Reserved
	2	RXD	Input	RS232 signal receive
	3	TXD	Output	RS232 signal send
	5	EGND	Output	5V power supply outputs negative pole and this communication public end
	9	E5V	Output	5V power supply outputs positive pole, max is 300mA

3.3.1. RS232 Communication Interface Specification & Wiring

→ Specification:

Item	RS232
Max Communication Rate (bps)	115200
Terminal Resistor	No
Topology	Connect correspondingly (point to point)
Nodes can be extended	1
Communication Distance	Longer communication distance, lower communication rate, max 5m is recommended.

→ Wiring Reference:

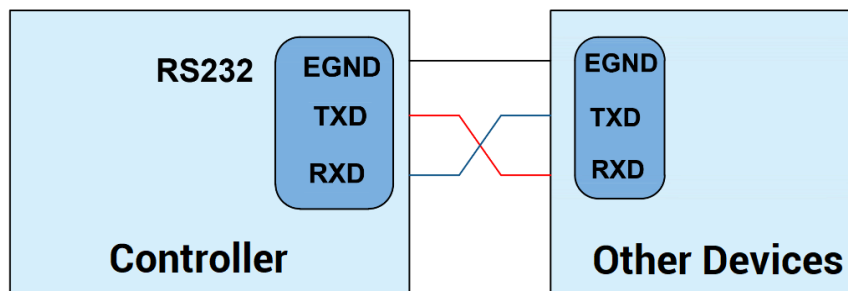


→ Wiring Notes:

- The wiring of RS232 is as above, the sending and receiving signals need to be cross-connected, and it is recommended to use a double-female cross line when connecting to a computer.
- Please be sure to connect the common terminal of each communication node to prevent the communication chip from burning out.
- Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

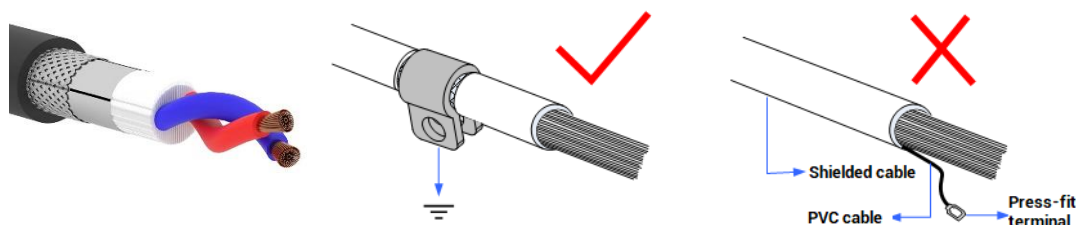

3.3.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use ETHERNET, RS232 (default parameter, it can be connected directly) and RS485 (default parameter can be directly connected, one adapter is needed for hardware) to connect to ZDevelop.
- (3) Please use the "ADDRESS" and "SETCOM" commands to set and view the protocol station number and configuration parameters, see "ZBasic Programming Manual" for details.
- (4) Correctly set the relevant parameters of the third-party equipment according to their respective instructions to match the parameters of each node.
- (5) When all is configured, it can start to do communicating.
- (6) Communication data of RS232 can be directly viewed through "ZDevelop / Controller / State the Controller / CommunicationInfo".

```


CAN communication settings:
CANIO_ADDRESS = 32, CANIO_ENABLE = 1
ZCAN Master
CAN baud: 500KBPS
CAN enable: ON



Serial port configuration:
Port0:(RS232) is ModbusSlave Mode.
Address: 1, variable:2 delay:400ms
Baud:38400
DataBits:8
StopBits: 1
Parity:0
Port1:(RS485) is ModbusSlave Mode.
Address: 1, variable:2 delay:400ms
Baud:38400
DataBits:8
StopBits: 1
Parity:0
    
```

3.4. IN Digital Input & Single-Ended Encoder & High-Speed Latch

The digital input adopts 3 groups of 10Pin screw-type pluggable terminals with a pitch of 3.81mm, and digital signal inputs integrate the high-speed latch and single-ended encoder functions.

→ Wiring Definition

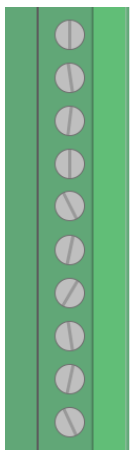Terminal	Name	Type	Function 1	Function 2	Function 3
	EGND	/	IO public end	/	/
	EGND	/		/	/
	IN0	NPN type, high-speed input	Input 0	High Speed Latch	EA3
	IN1		Input 1		EB3
	IN2	NPN type, low-speed input	Input 2	/	EZ3
	IN3		Input 3	/	/
	IN4		Input 4	/	/
	IN5		Input 5	/	/
	IN6		Input 6	/	/
	IN7		Input 7	/	/
	EGND	/	IO public end	/	/
	EGND	/		/	/
	IN8	NPN type,	Input 8	/	/

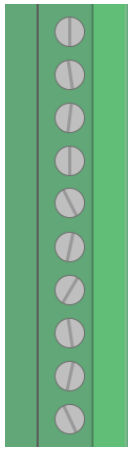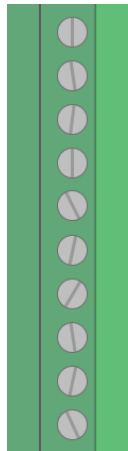	EGND	IN9	low-speed input	Input 9	/	/
	EGND	IN10		Input 10	/	/
	IN8	IN11		Input 11	/	/
	IN9	IN12		Input 12	/	/
	IN10	IN13		Input 13	/	/
	IN11	IN14		Input 14	/	/
	IN12	IN15		Input 15	/	/
	IN13					
IN14						
IN15						
	EGND	EGND	/	IO public end	/	/
	EGND	EGND	/		/	/
	IN16	IN16	NPN type, low-speed input	Input 16	/	/
	IN17	IN17		Input 17	/	/
	IN18	IN18		Input 18	/	/
	IN19	IN19		Input 19	/	/
	IN20	IN20		Input 20	/	/
	IN21	IN21		Input 21	/	/
	IN22	IN22		Input 22	/	/
	IN23	IN23		Input 23	/	/
	Note:					
◇ Input 0 and input 1 both have latch input A and latch input B function at the same time.						
◇ Encoder 3 is reserved for 24V encoder, which supports 24V handwheel. When ATYPE = 0, it is general output.						

3.4.1. Digital Input Specification & Wiring


→ Specification

Item	High-Speed Input (IN0-1)	Low-Speed Input (IN2-23)
Input mode	NPN leakage type, low level input trigger	
Input frequency	< 100kHz	< 5kHz
Input impedance	3.3KΩ	4.7KΩ
Input voltage level	DC24V	DC24V
Input ON voltage	<15V	<14.5V
Input OFF voltage	>15.1V	>14.7V
Min input current	-2.3mA	-1.8mA
Max input current	-7.5mA	-6mA


Isolation mode	Photoelectronic isolation	Photoelectronic isolation
<p>Note: the above parameters are standard values when the controller power supply voltage (E+24V port) is 24V.</p>		

→ **Wiring Reference**

--General IN Wiring--

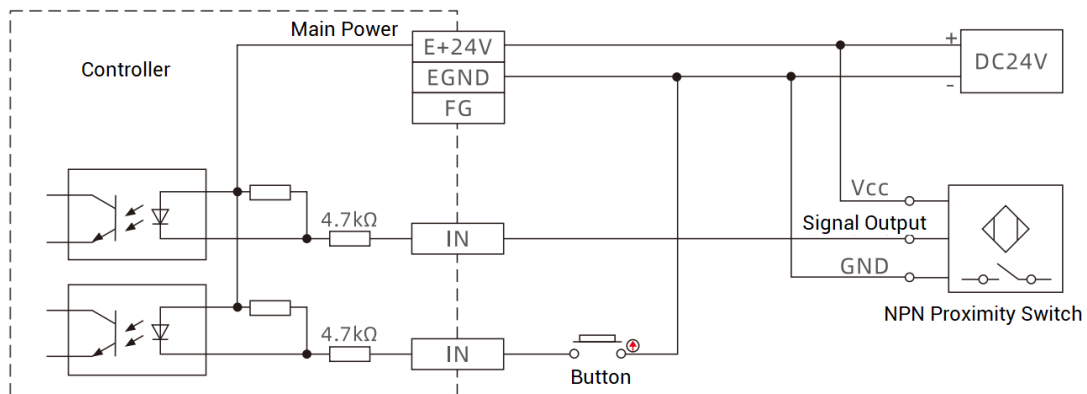

--Single-Ended Encoder IN Wiring--

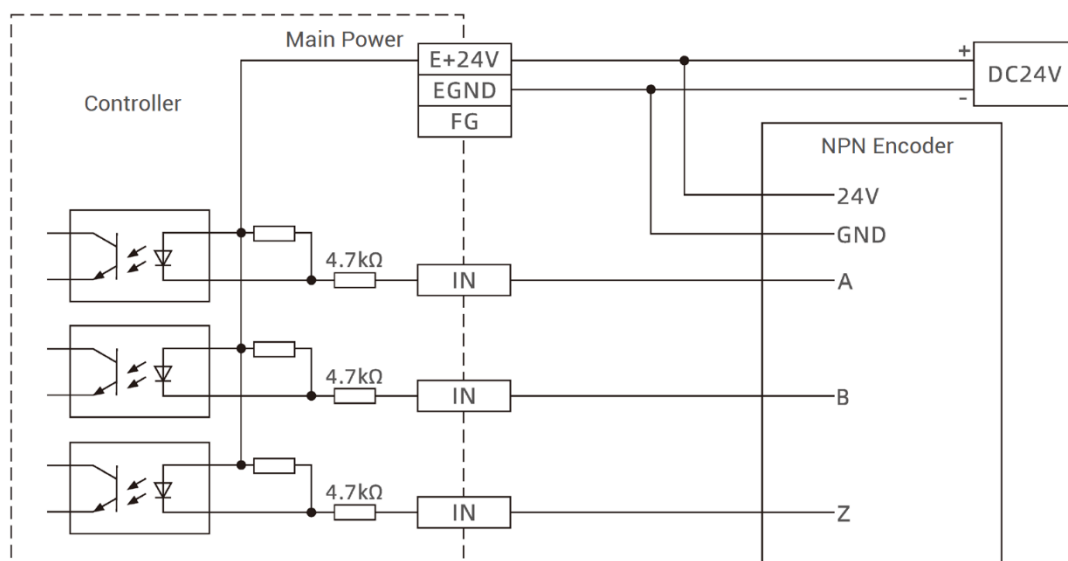

→ **Wiring Note:**

- The wiring principle of high-speed digital input IN (0-1) and low-speed digital input IN (2-23) is shown in the figure above. The external signal source can be an optocoupler or a key switch or sensor, etc., all can be connected as long as the output

level meets the requirements.

- For the common terminal, please select the "EGND" port on the IO terminal to connect to the "COM" terminal of the external input device. If the power supply of the signal area of the external device and the power supply of the controller are in the same power supply system, this connection can also be omitted.

3.4.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to ZDevelop.
- (3) State values of relative inputs can be read directly through "IN" command, also, it can be read through "ZDevelop/View/In". Please refer to "ZBasic" for details.


0	●	●	rev_in(0)
1	●	●	rev_in(1)
2	●	●	rev_in(2)
3	●	●	fwd_in(0)
4	●	●	fwd_in(1)
5	●	●	fwd_in(2)
6	●	●	alm_in(0)
7	●	●	alm_in(1)
8	●	●	alm_in(2)

- (4) Latch function can be set and opened through "REGIST" instruction, in software, use REG_INPUTS to configure. Please refer to "ZBasic" for details.

3.5. OUT Digital Output, PWM Terminal, Single-Ended Pulse

The digital output adopts a set of screw-type pluggable terminals with a spacing of 3.81mm, and the digital output signal is integrated with PWM and single-ended pulse function.

→ **Wiring Definition**

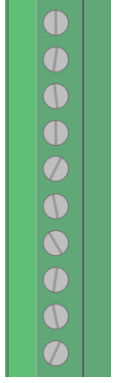Terminal	Name	Type	Function 1	Function 2	Function 3
EGND E5V OUT0 OUT1 OUT2 OUT3 OUT4 OUT5 OUT6 OUT7 	EGND	/	E5V power ground / IO public end	/	/
	E5V	/	5V power output, max 300mA	/	/
	OUT0	NPN type, high-speed output	Output 0	PWM Output 0	/
	OUT1		Output 1	PWM Output 1	/
	OUT2		Output 2	/	PUL15
	OUT3		Output 3	/	DIR15
	OUT4	NPN type, low-speed output	Output 4	/	/
	OUT5		Output 5	/	/
	OUT6		Output 6	/	/
	OUT7		Output 7	/	/

Note:

- ◇ The E5V power output port is used for PWM or single-ended axis common anode wiring. It is not recommended for other purposes due to lower power.
- ◇ OUT0-1 have the PWM function, when PWM is off, it is general output.
- ◇ In ZMC316BE, OUT2/3 have the function of axis 15. When ATYPE = 0, it is general output.

3.5.1. Digital Output Specification & Wiring


→ Specification

Item	High Speed (OUT0-3)	Low Speed (OUT4-7)
Output mode	NPN leakage type, 0V when outputs	
Output frequency	< 400kHz	< 8kHz
Output voltage level	DC24V	DC24V
Max output current	+300mA	+300mA
Max leakage current when OFF	25μA	25μA
Conduction respond time	1μs (resistive load typical value)	12μs
Respond time when OFF	3μs	80μs
Overcurrent	Support	Support


protection		
Isolation method	Optical isolation	Optical isolation
<p>Note:</p> <ul style="list-style-type: none"> ◇ The times in the table are typical based on the resistive load, and may change when the load circuit changes. ◇ Due to the leak-type output, the shutdown of the output will be more obviously affected by the external load circuit, and the output frequency should not be set too high in the application. 		

→ **Wiring Reference**

--General OUT Wiring--

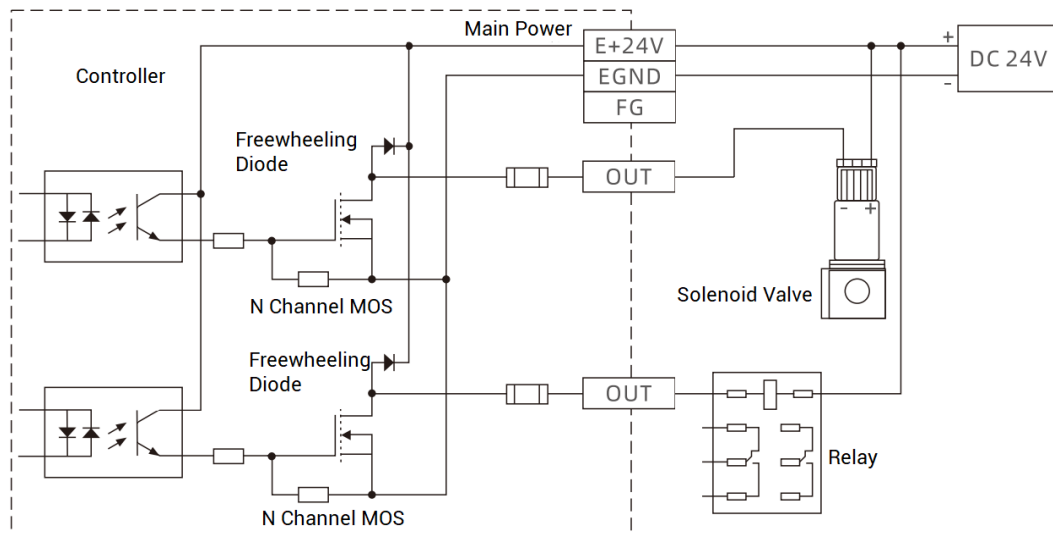

--Pulse Axis Wiring--

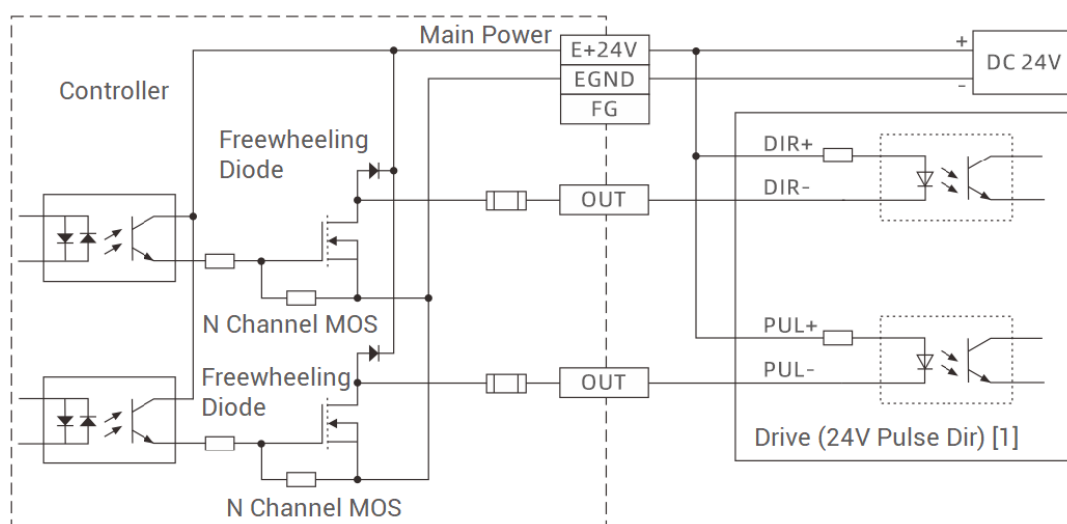


Note [1]: for 5V pulse directional interface, please connect PUL+ and DIR+ to E5V.

→ Wiring Note:

- The wiring principle of high-speed digital output OUT (0-3) and low-speed digital output OUT (4-7) is shown in the figure above. The external signal receiving end can be an optocoupler or a relay or solenoid valve, all can be connected as long as the input current does not exceed 300mA.
- For the connection of the common terminal, please select the "EGND" port on the power terminal to connect to the negative pole of the DC power supply of the external input device. If the DC power supply of the external device and the controller power supply are in the same power supply system, this connection can also be omitted.
- The E5V port is a 5V power output port, which can be used when some loads need to provide an external 5V power input, the maximum current is 300mA.

3.5.2. Basic Usage

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to ZDevelop.
- (3) Terminal can be operated to ON or OFF directly through "OP" command, also, it can be opened or closed through "ZDevelop/View/Op". Please refer to "ZBasic" for details.

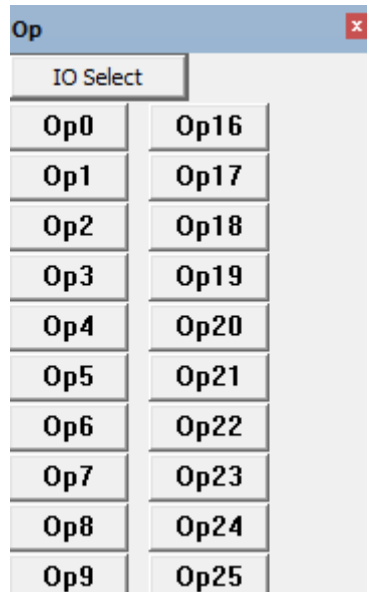


- (4) PWM function can be used to set frequency and duty cycle through "PWM_FREQ" and "PWM_DUTY". Please refer to ZBasic for details.

3.6. AD/DA Analog Input & Output

The analog port adopts a set of 6Pin screw-type pluggable terminals with a pitch of 3.81mm.

→ **Wiring Definition**

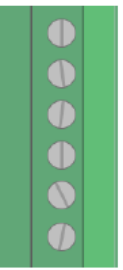
Terminal	Name	Type	Function
	DA0	Output	Analog output terminal AOUT(0)
	DA1	Output	Analog output terminal AOUT(1)
	AGND	Public End	Analog public end
	AD0	Input	Analog input terminal AIN(0)
	AD1	Input	Analog input terminal AIN(1)
	AGND	Public End	Analog public end

3.6.1. Analog Input / Output Specification & Wiring

→ Specification

Item	AD (0-1)	DA (0-1)
Resolution	12-bit	12-bit
Data range	0-4095	0-4095
Signal range	0-10V input	0-10V output
Data refresh ratio	1KHz	1KHz
Voltage input impedance / output load	44K Ω (voltage input impedance)	>10K Ω (voltage output load)

→ Wiring Reference

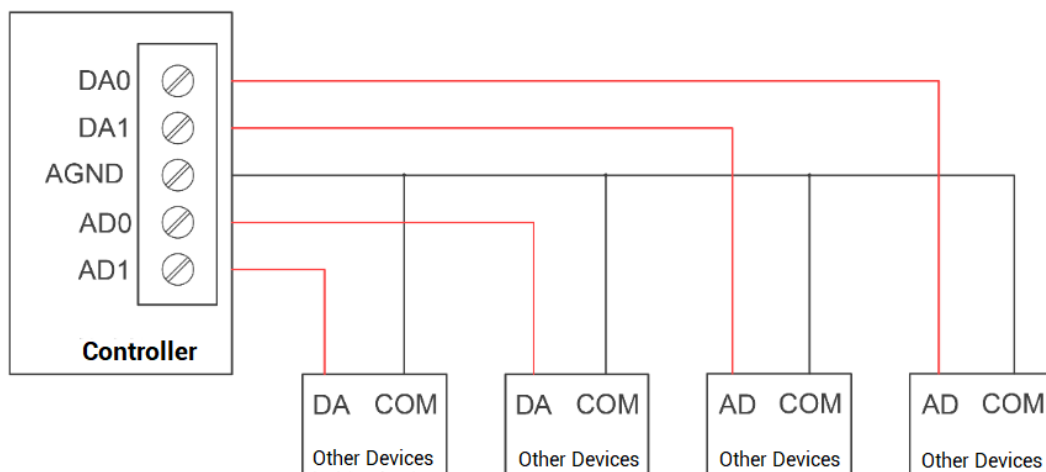


→ Wiring Note:

- The analog input/output wiring method is as shown in the figure above, and the external load signal range must match it.
- Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

→ Cable Requirements:

Twisted pair shielded wire, and shielded cable grounded.

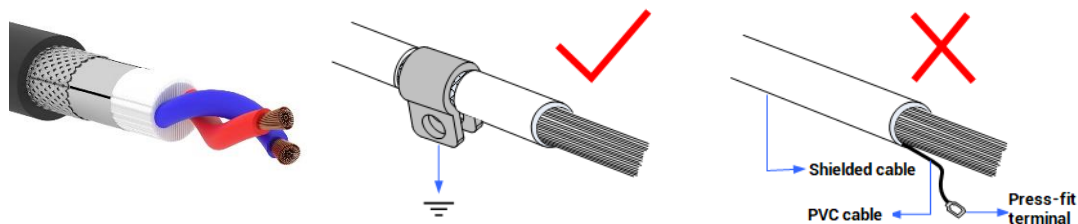


3.6.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 and RS485 to connect to ZDevelop.
- (3) Analog input voltage can be read through "AIN" command and corresponding analog voltage can be output through "AOUT" command, also, data of each channel can be checked through "ZDevelop/View/AD/DA". Please refer to "ZBasic" for details.

AD/DA						
控制器类型: ZMC316BE						重新读取
AD:						
通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围	
0	0%	14	0.034	4095	0~10V	
1	0%	9	0.022	4095	0~10V	
DA:						
通道号	大小	刻度值	电压或电流值	最大刻度值	电压或电流范围	
0	0%	0	0.000	4095	0~10V	
1	0%	0	0.000	4095	0~10V	

3.7. U Disk

The ZMC316BE motion controller provides a USB communication interface to insert a U disk device, which is used for ZAR program upgrade, controller data import and export, and 3 file executions. Its schematic diagram is shown in the figure below:

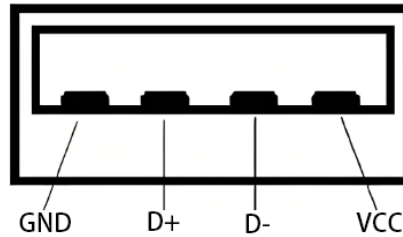


→ **Specification**


Item	USB2.0
Max Communication Ratio	12Mbps
Max Output Current of 5V	500mA
Whether Isolates	No

3.8. ETHERNET


ZMC316BE motion controller has a 100M Ethernet port, supports MODBUS_TCP protocol and custom communication, and the default IP address is 192.168.0.11. The pin definition diagram is as follows:

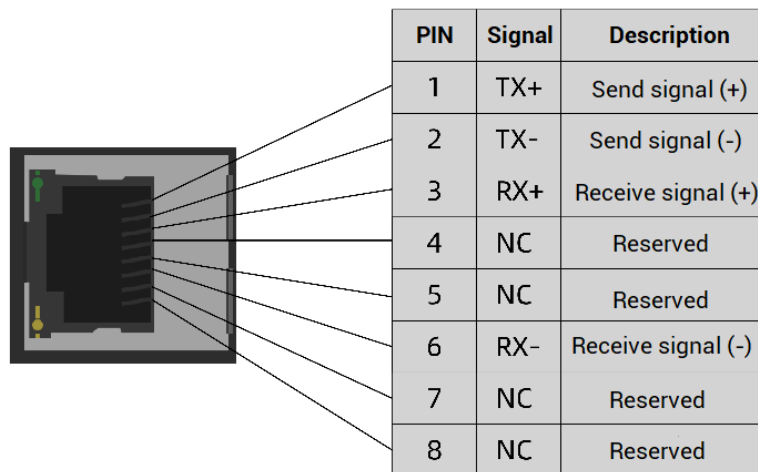

The Ethernet port of the controller can be connected point-to-point with a computer, HMI, etc. through an Ethernet cable. The schematic diagram is as follows:

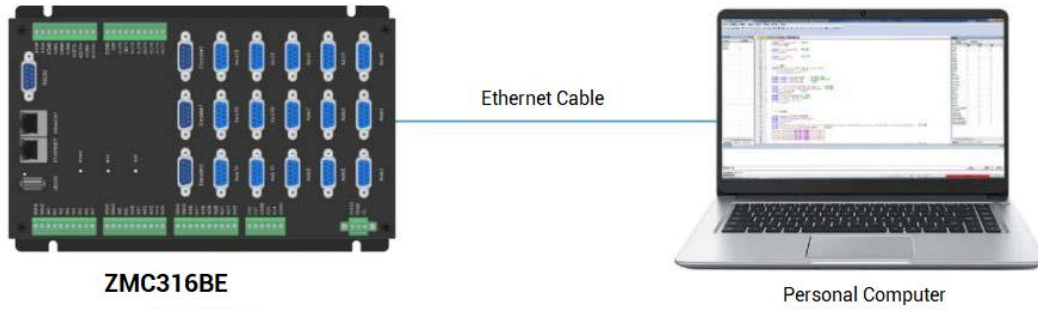


The controller can also be connected to the interchanger through an Ethernet cable, and connected to other devices through the interchanger to realize multi-point connection. The schematic diagram is as follows:

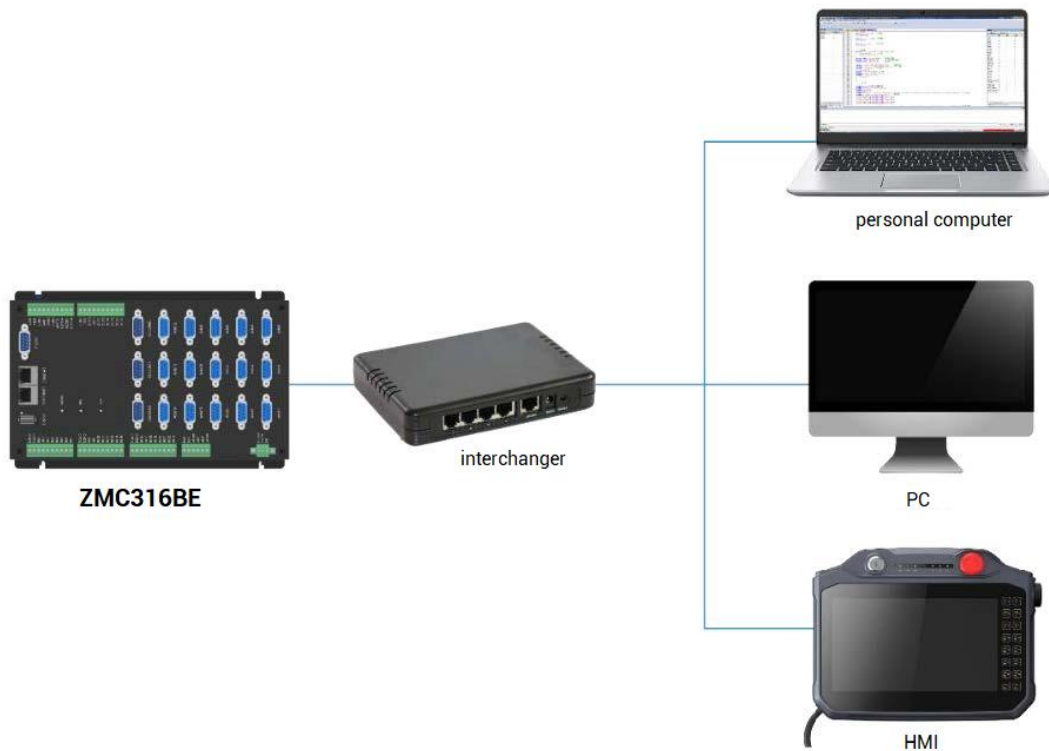

3.9. EtherCAT Bus Interface

ZMC316BE motion controller has a 100M EtherCAT communication interface, supports EtherCAT protocol, and connects to EtherCAT driver or EtherCAT expansion module. The pin definition diagram is as follows:

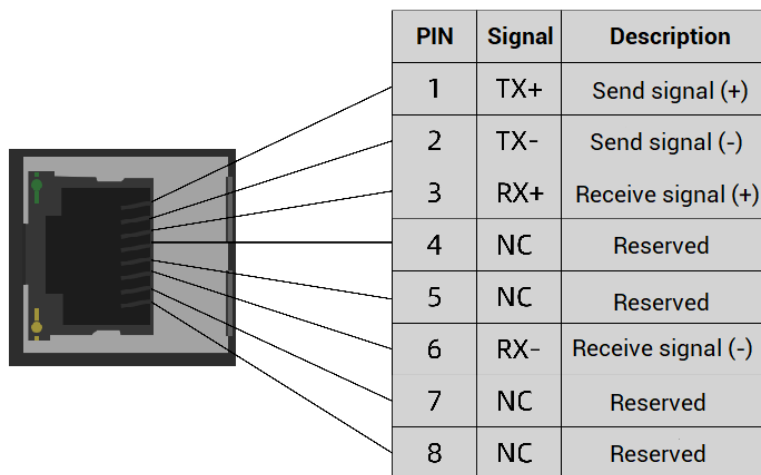


→ **Specification**

Item	Specification
Communication protocol	EtherCAT protocol
Valid service	CoE (PDO、SDO)、FoE
Synchronization method	IO adopts input and output synchronization / DC-distributed clock
Physical level	100BASE-TX
Duplex mode	full duplex
Topology	linear topology
Transfer media	Cable
Transfer distance	It is less than 100M between 2 nodes
Process data	Max 1486 bytes of single frame
Synchronization shaking of two slave stations	<1us
Refresh	1000 digital input and output about 30us

→ **Communication Cable Requirements**

Both ETHERNET communication interface and EtherCAT communication interface adopt standard Ethernet RJ45 interface.

The network cable adopts Category 5e shielded twisted pair, and the crystal head has a metal shell to reduce interference and prevent information from being eavesdropped. As shown below:

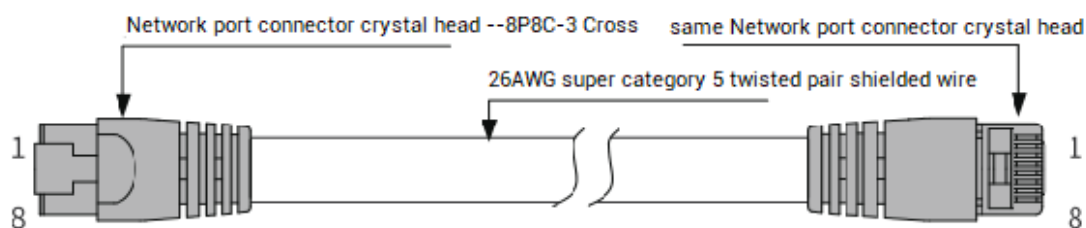

Item	Specification
Cable type	Flexible crossover cable, Cat 5e
Cable type	twisted pair
Cable pair	4
Isolation	cross skeleton
Connector	Crystal head with iron shell
Cable material	PVC
Cable length	Less than 100m

Use RJ45 network cable connection method:

- When installing, hold the crystal head with the cable and insert it into the RJ45 interface until it makes a "click" sound (kada).
- In order to ensure the stability of communication, please fix the cables with cable ties.
- When disassembling, press the tail mechanism of the crystal head and pull out the connector and the module in a horizontal direction.


Please use tube-type pre-insulated terminals and cables with appropriate wire diameters to connect the user terminals.

3.10. ENCODER Interface

ZMC316BE provides 3 encoder interfaces, and each interface is standard DB9 male socket.

→ Interface Definition

Interface	Pin	Signal	Description
	1	EA+	Encoder differential input signal A+
	2	EA-	Encoder differential input signal A-

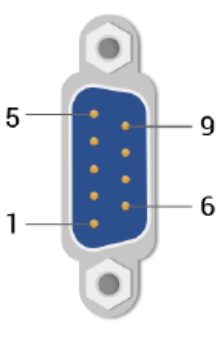	3	EB+	Encoder differential input signal B+
	4	EB-	Encoder differential input signal B-
	5	GND	Encoder signal 5V -
	6	EZ+	Encoder differential input signal Z+
	7	EZ-	Encoder differential input signal Z-
	8	+5V	Encoder signal 5V +
	9	Reserved	Reserved
<p>Note: encoder can be accessed through axis 16-18.</p>			


3.10.1. ENCODER Interface Specification & Wiring

→ Interface Definition


Interface	Item	Description
EA/EB/EZ	Signal type	Differential input signal
	Signal voltage range	0-5V
	Signal max frequency	5MHz
+5V, GND	5V power max output current	50mA

→ Wiring Reference:

-- Reference example of wiring with Panasonic A5/A6 servo driver --

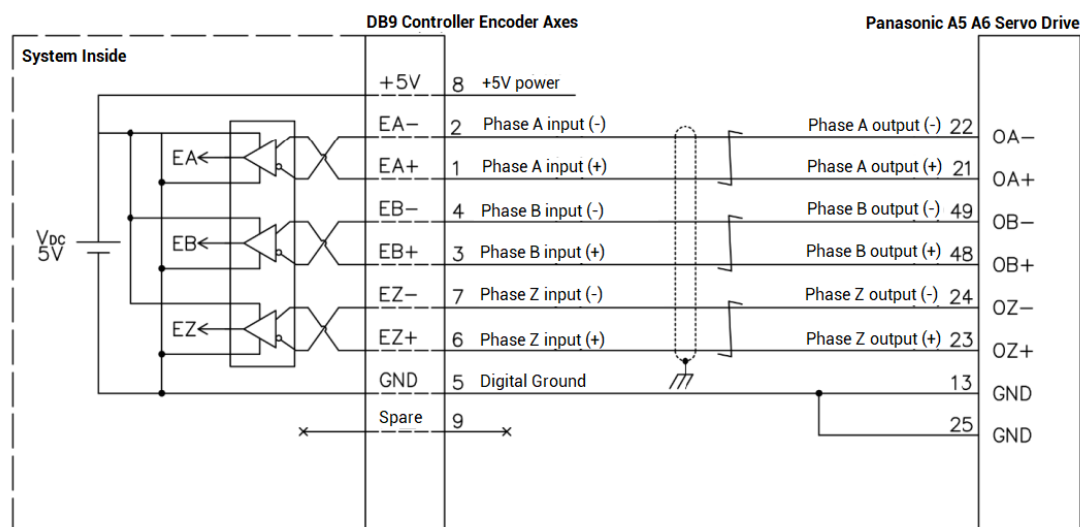


-- Single-Ended Encoder Axis Wiring --

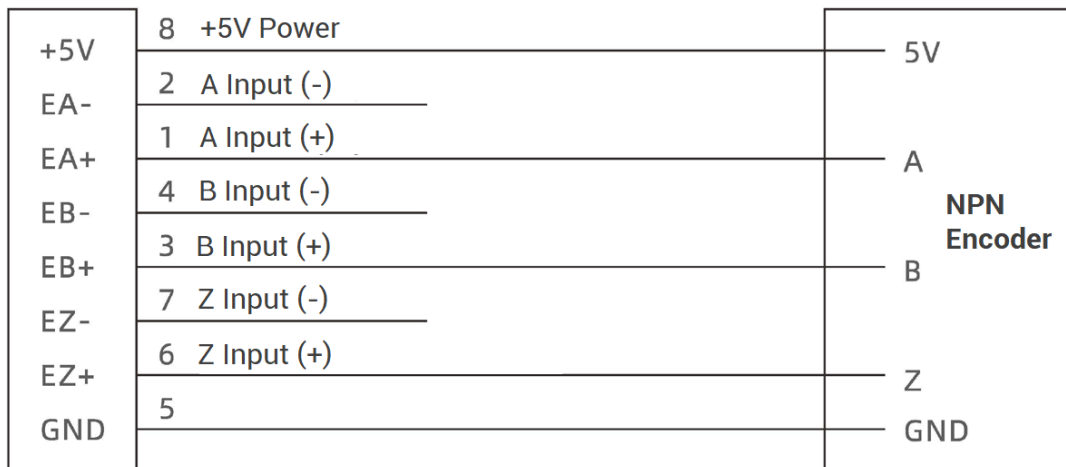

3.11. AXIS Differential Pulse Axis Interface

This product provides 15 local differential pulse axis interfaces, each interface is a standard DB9 female socket.

→ **Interface Definition**

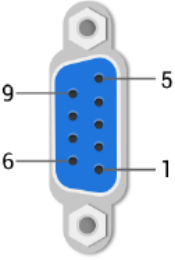Interface	Pin	Signal	Description
	1	PUL+	Servo/step pulse output differential signal +
	2	PUL-	Servo/step pulse output differential signal -
	3	DIR+	Servo/step directional output differential signal +
	4	DIR-	Servo/step directional output differential signal -
	5	GND	Pulse signal 5V -
	6	IN24-28/ALM	Digital input, it is recommended to do drive alarm
	7	OUT8-22/ENA	Digital output, it is recommended to do drive enable
	8	+5V	Pulse signal 5V +
	9	EGND	Digital IO power 24V negative pole

Note:

❖ ALM and ENA are recommended to be used as axis IO due to their small drive

capacity.

- ◇ +5V is only used for communication between the controller and the servo driver, please do not use it as power supply for other places.

Pulse Axis No.	Corresponding IN (PIN 6)	Corresponding OUT (PIN 7)
AXIS0	IN24	OUT8
AXIS1	IN25	OUT9
AXIS2	IN26	OUT10
AXIS3	IN27	OUT11
AXIS4	IN28	OUT12
AXIS5	IN29	OUT13
AXIS6	IN30	OUT14
AXIS7	IN31	OUT15
AXIS8	IN32	OUT16
AXIS9	IN33	OUT17
AXIS10	IN34	OUT18
AXIS11	IN35	OUT19
AXIS12	IN36	OUT20
AXIS13	IN37	OUT21
AXIS14	IN37	OUT22

3.11.1. AXIS Interface Signal Specification & Wiring


→ **Specification:**


Signal	Item	Description
PUL/DIR	Signal type	Differential output signal
	Signal voltage range	0-5V
	Signal max frequency	10MHz
IN24-38	Input method	NPN type, low electric level input trigger
	Input frequency	< 5kHz
	Input impedance	6.8KΩ
	Input voltage level	DC24V

	Input opening voltage	<10.5V
	Input closing voltage	>10.7V
	Min input current	-1.8mA
	Max input current	-4mA
	Isolation	Optical isolation
OUT8-22	Output method	NPN type, 0V when outputs
	Output frequency	< 8kHz
	Output voltage level	DC24V
	Max output current	+50mA
	Overcurrent protection	No
	Isolation	Optical isolation
+5V, GND	5V power max output current	50mA
EGND	24V power max output current	50mA

→ **Wiring Reference:**

-- Reference example of wiring with Panasonic A5/A6 servo drive --

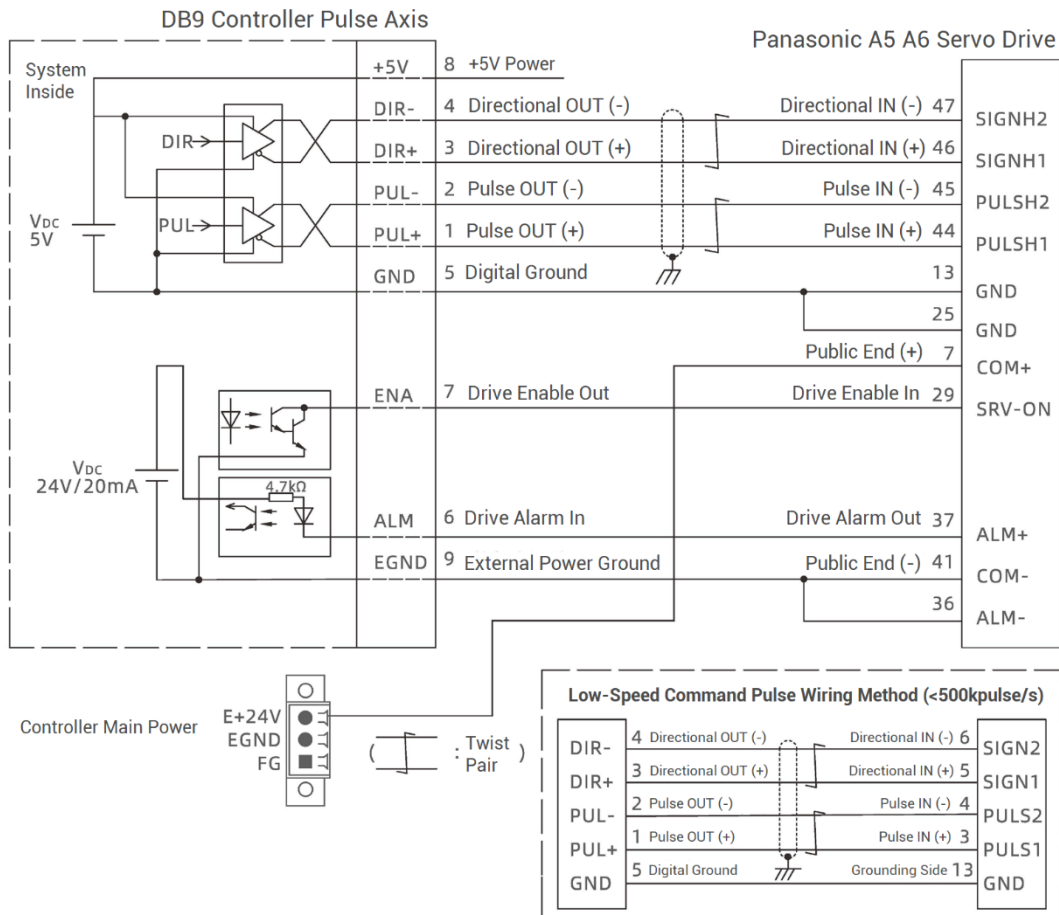

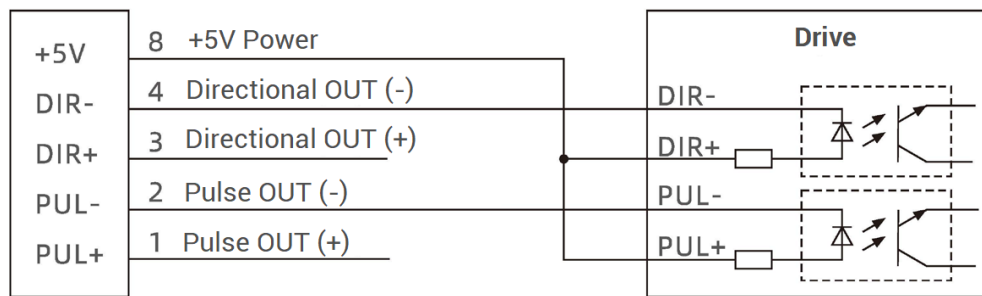-- Single-Ended Pulse Axis Wiring --**→ Wiring Note:**

- ✧ The wiring principle of the differential pulse axis interface is shown in the figure above, and the wiring methods of different types of drivers are different, please connect carefully.
- ✧ Please use twisted-pair shielded cables, especially in harsh environments, and make sure the shielding layer is fully grounded.

3.11.2. Basic Usage Method

- (1) Please follow the above wiring instructions for correct wiring.
- (2) After power on, please use any of the three interfaces ETHERNET, RS232 (default parameter, it can be connected directly) and RS485 (default parameter can be connected directly, one adapter is needed for hardware) to connect to ZDevelop.
- (3) Set axis parameters, such as, ATYPE, UNITS, SPEED, ACCEL, FWD_IN, REV_IN, etc.
- (4) There are many parameters related to pulse axis, they can be set and checked through relative instructions, please see "axis parameter and axis status" of "ZBasic", or see "ZDevelop/View/Axis parameter".

Axis Parameters				
Axis select	Parameter select			
	Axis0	Axis1	Axis2	Axis3
COMMENT				
ATYPE	0	0	0	0
UNITS	1	1	1	1
ACCEL	10000	10000	10000	10000
DECEL	0	0	0	0
SPEED	1000	1000	1000	1000
CREEP	100	100	100	100
LSPEED	0	0	0	0
MERGE	0	0	0	0
SRAMP	0	0	0	0
DPOS	0	0	0	0
MPOS	0	0	0	0
ENDMOVE	0	0	0	0
FS_LIMIT	200000000	200000000	200000000	200000000
RS_LIMIT	-200000000	-200000000	-200000000	-200000000
DATUM_IN	-1	-1	-1	-1
FWD_IN	-1	-1	-1	-1

(5) Control corresponding motion through "View – Manual".

Axis	ATYPE	UNITS	ACCEL	DECEL	SPEED	DPOS	Left/Move	Right/Move	Distance	Absolute	MPOS	IDLE	AXISSTATUS		
0	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop
1	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop
2	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop
3	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop
4	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop
5	0	1.000	10000.0	0.000	1000.00	0.000	Left	Right		<input type="checkbox"/>	Move	0.000	-1	0h	Stop

Refer to BASIC Routine:

- BASE(0,1) 'select axis 0 and axis 1
- ATYPE = 1,1 'set axis 0 and axis as pulse axes
- UNITS = 1000,1000 'set pulse amount as 1000 pulses
- SPEED = 10,10 'set axis speed as 10*1000 pulse/s
- ACCEL = 1000,1000 'set axis acceleration as 1000*1000 pulse/s/s
- FWD_IN = -1,-1 'prohibit using axis positive hardware position limit
- REV_IN = -1,-1 'prohibit using axis negative hardware position limit
- MOVE(10) AXIS(0) 'axis 0 moves distance of 10*1000 pulses in positive
- MOVE(-20) AXIS(0) 'axis 0 moves distance of 20*1000 pulses in negative

Chapter IV Expansion Module

The controller can expand digital IO, analog IO, pulse axis and other resources through CAN bus or EtherCAT bus. That is, it can use together with ZIO series CAN expansion modules, EIO series EtherCAT expansion modules, or ZMIO310 series vertical expansion modules. For details, please refer to corresponding user manual.

4.1. CAN Bus Expansion

ZIO series expansion modules or ZMIO310-CAN coupler with sub modules can be used.

Connect control card to CAN bus expansion modules, when the eighth bit of the DIP switch of the expansion module is turned to ON, which indicates that a 120 ohm resistor has been connected, but needs to connect one 120 ohm resistor externally. When connecting multiple CAN expansion modules, you only need to dial ON for the eighth digit of the last expansion module, which means please do not dial bit-8 of other modules.


4.1.1. CAN Bus Expansion Wiring

The ZIO expansion module is powered by the dual power supply. Except the main power supply, an additional IO power supply is required to supply independent power for IO. Both the main power supply and the IO power supply use 24V DC power supply. For ZAIO, it only needs to connect to the main power supply.

To prevent interference, separate the IO power supply from the main power supply.

Please select the expansion module according to the requirements, and select IO mapping or axis mapping according to the resources of the expansion module.

Wiring reference of connection between ZIO expansion module and control card and standard wiring of CAN bus are shown as below:

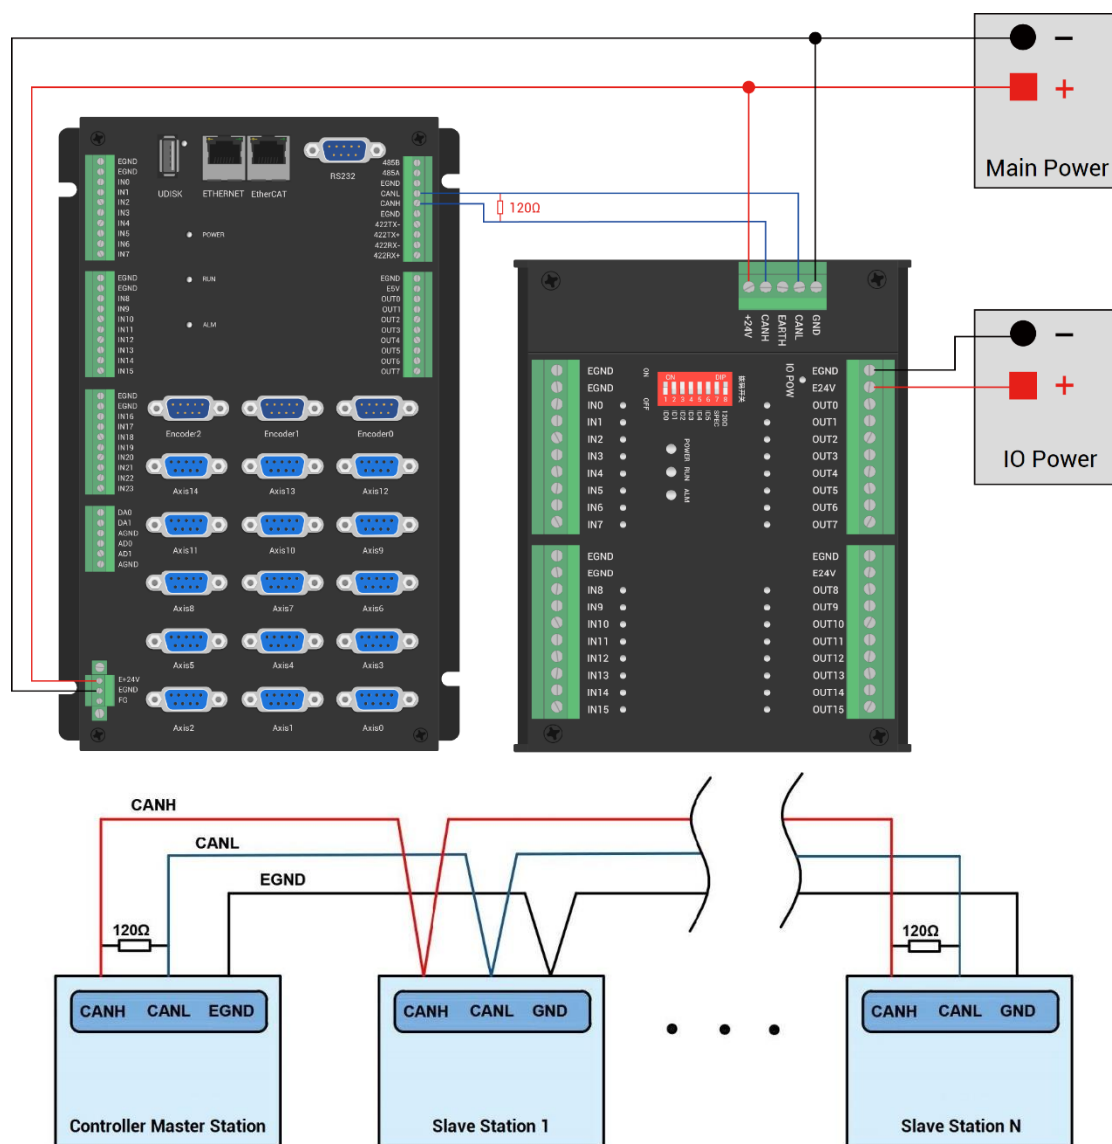

→ **Wiring Note:**

- ✧ ZMC316BE controller uses the single power, and ZIO expansion module uses dual-power. When using, main power supply of expansion module and main power supply of controller can share one power. When they use different power supplies, controller power EGND needs to connect to expansion module power GND, otherwise CAN may be burnt out.
- ✧ When connecting multiple ZIO expansion modules on the CAN bus, a 120-ohm resistor needs to be connected in parallel between the CANL and CANH terminals, for the ZIO expansion module that is with 8-digit dialing codes, the terminal resistor can be realized by dialing the code (DIP).

4.1.2. CAN Bus Expansion Resource Mapping



The ZCAN expansion module generally has an 8-bit DIP switch, dial ON to take effect, and the meaning of the DIP is as follows:

1-4: they are used for ZCAN expansion module IO address mapping, the corresponding value is 0-15.

5-6: CAN communication speed, corresponding value is 0-3, four different speeds are optional.

7: reserved.

8: 120 ohm resistor, dial ON means a 120 ohm resistor is connected between CANL and CANH.

The IO numbers of the entire control system cannot be repeated, and existed numbers must be avoided when mapping resources. And the DIP switch must be dialed before power-on, if re-dial after power-on, it is invalid. It needs to be powered on again to take effect.

Dial 1-4 to select the CAN address, and the controller sets the IO number range of the corresponding expansion module according to the CAN DIP address. When each is dialed as OFF, the corresponding value is 0, when it is ON, it corresponds to a value of 1, and the address combination value = dial 4 \times 8 + dial code 3 \times 4 + dial code 2 \times 2 + dial code 1.

Dial code 5-6 to select CAN bus communication speed, speed combination value=dial code 6 \times 2 + dial code 5 \times 1, the combined value range is 0-3.

The corresponding speeds are as follows:

DIP 5-6 combination value	CANIO_ADDRESS high 8-bit value	CAN communication speed
0	0 (corresponds to decimal 128)	500KBPS (default value)
1	1 (corresponds to decimal 256)	250KBPS
2	2 (corresponding to decimal 512)	125KBPS
3	3 (corresponding to decimal 768)	1MBPS

The controller side sets the CAN communication speed through the CANIO_ADDRESS

command. There are also four speed parameters that can be selected. The communication speed must be consistent with the communication speed of the expansion module that corresponds to the combination value, then they can communicate with each other.

The factory default communication speed is 500 KBPS on both sides, there is no need to set this, unless you need to change the speed.

The CANIO_ADDRESS command is a system parameter, and it can set the master-slave end of CAN communication. The default value of the controller is 32, that is, CANIO_ADDRESS=32 is the master end, and the slave end is set between 0-31.

The CAN communication configuration can be viewed in the "State the Controller" window.

→ IO Mapping:

the CAN expansion module uses bit1-4 of the DIP switch. According to the number of currently included IO points(the largest number in IN and OP must include IO point in the axis interface), use the bit 1-4 to set the ID, so as to determine the number range of IO to be expanded.

If the controller itself contains 28 INs and 16 OPs, then the starting address set by the first extended board should exceed the maximum value of 28. According to below rule, the dial code should be set to the combination value 1 (binary combination value 0001, from right to left, dial code 1-4, at this time dial 1 is set to ON, and the others are set to OFF), the IO number on the expansion board = the expansion board number value + the initial IO number value, among them, the IOs that are vacant from 29-31 Numbers are not used. Subsequent extended boards continue to confirm the dial settings according to the IO points in turn.

The initial digital IO mapping number starts from 16 and increases in multiples of 16. The distribution of digital IO numbers corresponding to different dial IDs is as follows:

DIP 1-4 combination value	Starting IO number	Ending IO number
0	16	31
1	32	47
2	48	63
3	64	79
4	80	95
5	96	111
6	112	127

7	128	143
8	144	159
9	160	175
10	176	191
11	192	207
12	208	223
13	224	239
14	240	255
15	256	271

The initial IO mapping number of the analog AD starts from 8 and increases in multiples of 8. The initial IO mapping number of the analog DA starts from 4 and increases in multiples of 4. The allocation of digital IO numbers corresponding to different dial code IDs is as follows:

DIP 1-4 combination value	Starting AD number	End AD number	Starting DA number	End DA number
0	8	15	4	7
1	16	23	8	11
2	24	31	12	15
3	32	39	16	19
4	40	47	20	23
5	48	55	24	27
6	56	63	28	31
7	64	71	32	35
8	72	79	36	39
9	80	87	40	43
10	88	95	44	47
11	96	103	48	51
12	104	111	52	55
13	112	119	56	59
14	120	127	60	63
15	128	135	64	67

→ Axis Mapping:

When the CAN bus expansion mode is used to expand the pulse axis, ZIO16082M

can be selected to expand two pulse axes. These two pulse axes need to be mapped and bound with the axis No., then access.

Extended axes need to perform axis mapping operations, using the AXIS_ADDRESS command to map, and the mapping rules are as follows:

AXIS_ADDRESS(axis No.)=(32*0)+ID

'the local axis interface of the expansion module AXIS 0

AXIS_ADDRESS(axis No.)=(32*1)+ID

'the local axis interface of the expansion module AXIS 1

The ID is the combined value of the DIP bit1-4 of the expansion module. After the mapping is completed and the axis parameters such as ATYPE are set, the expansion axis can be used.

Example:

ATYPE(6)=0 'set as virtual axis

AXIS_ADDRESS(6)=1+(32*0)

'ZCAN expansion module ID 1 axis 0 is mapped to axis 6

ATYPE(6)=8 'ZCAN extended axis type, pulse direction stepping or servo

UNITS(6)=1000 'pulse equivalent 1000

SPEED(6)=100 'speed 100units/s

ACCEL(6)=1000 'acceleration 1000units/s^2

MOVE(100) AXIS(6) 'extended axis movement 100units

Extended resource viewing:

According to the CAN connection, after the power is turned on, and the wiring resistance dial code is set correctly, the power indication led (POWER) and the running indication led (RUN), the IO power indication led (IO POWER) are on, and the alarm indication led (ALM) is off. At the same time, the "Controller" - "State the controller" - "ZCanNodes" in the ZDevelop software displays the expansion module information and the extended IO number range.

The dial ID and the corresponding resource number when connecting multiple expansion modules are as follows:

Local	432-0(ZMC432)	32	30(0-29)	18(0-17)	0	2(0-1)	
1	48(ZIO1632)	0	16(32-47)	32(32-63)	0	0	
3	26(ZIO16082)	2	16(64-79)	8(64-71)	0	0	
4	10(ZAIO0802)	0	0	0	8(40-47)	2(20-21)	

ALMRM indicator light is on, please check whether the wiring, resistor and dial setting are correct, and whether the CANIO_ADDRESS command of the controller is set as the master end (32), and whether the CAN communication speed is consistent.

4.2. EtherCAT Bus Expansion

The EIO expansion modules and ZMIO310-ECAT are expansion modules used by the EtherCAT bus controller. For example, EIO series can expand the resources of digital IO and pulse axis. When the resources of the controller are insufficient, the EtherCAT bus controller can be connected to multiple EIO expansion modules for expansion, you can view the maximum number of IO expansion points and the maximum number of expansion axes of the controller, and in this way, it supports IO remote expansion.


4.2.1. EtherCAT Bus Expansion Wiring

After the expansion wiring is completed, each EIO expansion module does not need to develop again. It only needs to manually configure the unique IO address and axis address in the EtherCAT master controller, and it can be accessed after the configuration is completed.

The IO address number is set through the bus command NODE_IO, and the program on the controller can access the resources on the expansion module only through the IO number. The configuration of the axis address uses the AXIS_ADDRESS command to map axis number, and when the binding is completed, specify the axis number through the BASE or AXIS command.

When wiring, pay attention that EtherCAT IN is connected to the upper-level module, and EtherCAT OUT is connected to the lower-level module. The IN and OUT ports cannot be mixed.

EIO expansion module wiring reference example:

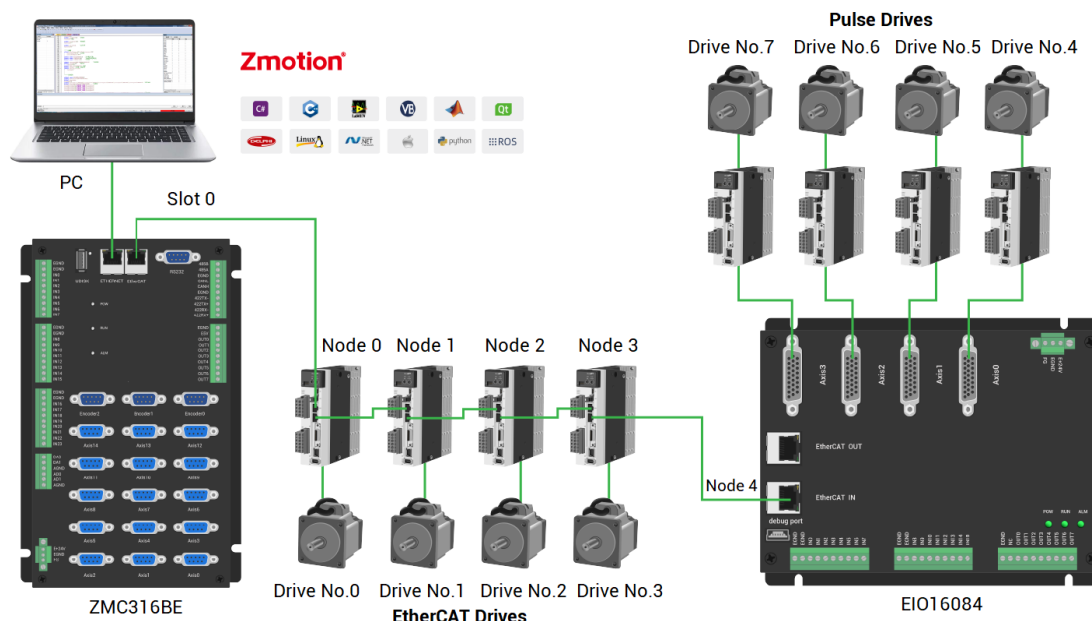

Involved number concepts in above figure are as follows: the bus-related command parameters will use the following numbers:

Slot number (slot):

The slot number refers to the number of the bus interface on the controller, and the slot number of the EtherCAT bus is 0.

Device number (node):

The device number refers to the number of all devices connected to a slot. It starts from 0 and is automatically numbered according to the connection sequence of the devices on the bus. You can view the total number of devices connected to the bus through the `NODE_COUNT(slot)` command.

Drive number:

The controller will automatically identify the drive on the slot, and the number starts from 0, and the number is automatically numbered according to the connection sequence of the drive on the bus.

The drive number is different from the device number. Only the drive device number on the slot is assigned, and other devices are ignored. The drive number will be used when mapping the axis number.

4.2.2. EtherCAT Bus Expansion Resource Mapping

→ **IO Mapping:**

The program on the controller can access the resources on the expansion module only through the IO number. The IO number of the EtherCAT bus expansion module is set through the bus command NODE_IO, and the input and output are configured at the same time.

When IO mapping, first check the maximum IO number of the controller itself (including the external IO interface and the interface in the pulse axis), and then use the command to set.

If the extended IO coincides with the IO number of the controller itself, the two will work at the same time, so the mapped number of the IO mapping must not be repeated in the entire control system.

IO mapping syntax:

NODE_IO(slot, node) = iobase

slot: slot number, 0-default

node: device number, starting from 0

iobase : mapping the IO start number, the setting result will only be a multiple of 8

Example:

NODE_IO(0,0)=32 'set the IO start number of slot 0 interface device 0 to 32

If device 0 is EIO16084, after configuration according to the above syntax, the IO numbers corresponding to input IN0-15 are 32-47 in turn, the general input port numbers in the axis interface are 48-55, and the drive alarm inputs of axes AXIS 0-3 are 48-51 respectively. The IO numbers corresponding to the output OUT0-7 are 32-39 in sequence, the general output port numbers in the axis interface are 40-47, and the drive enable outputs of the axes AXIS 0-3 are 40-43 respectively.

0	41bh	1918h	0	4	24(32-55)	16(32-47)	0

→ **AXIS Mapping:**

Before using the axis of the expansion module, you need to use the AXIS_ADDRESS command to map the axis number, and the axis mapping also needs to pay attention to the axis number of the entire system cannot be repeated. The mapping syntax of the EIO series extended axis is the same as that of the bus driver.

Axis mapping syntax:

$AXIS_ADDRESS(\text{axis number}) = (\text{slot number} \ll 16) + \text{driver number} + 1$

Example:

$AXIS_ADDRESS(0) = (0 \ll 16) + 0 + 1$

'the first drive on the EtherCAT bus, drive number 0, bound as axis 0

$AXIS_ADDRESS(1) = (0 \ll 16) + 1 + 1$

'the second drive on the EtherCAT bus, drive number 1, bound as axis 1


If the first node is EIO16084, and EIO16084 is connected to drive, then driver 0 here is the first pulse driver connected to EIO16084, otherwise it is the EtherCAT driver.



Chapter V Program and Applications




5.1. ZDevelop Software Usage


ZDevelop is a PC-side program development, debugging and diagnostic software for the ZMoiton series motion controllers of Zmotion Technology. Through it, users can easily edit and configure the controller program, quickly develop applications, diagnose system operating parameters in real time, and watch the motion controller. The running program is debugged in real time and supports Chinese and English bilingual environments.


ZBasic, ZPLC and ZHMI can run multi-tasks, and ZBasic can run multi-tasks, and can be mixed with ZPLC and ZHMI.

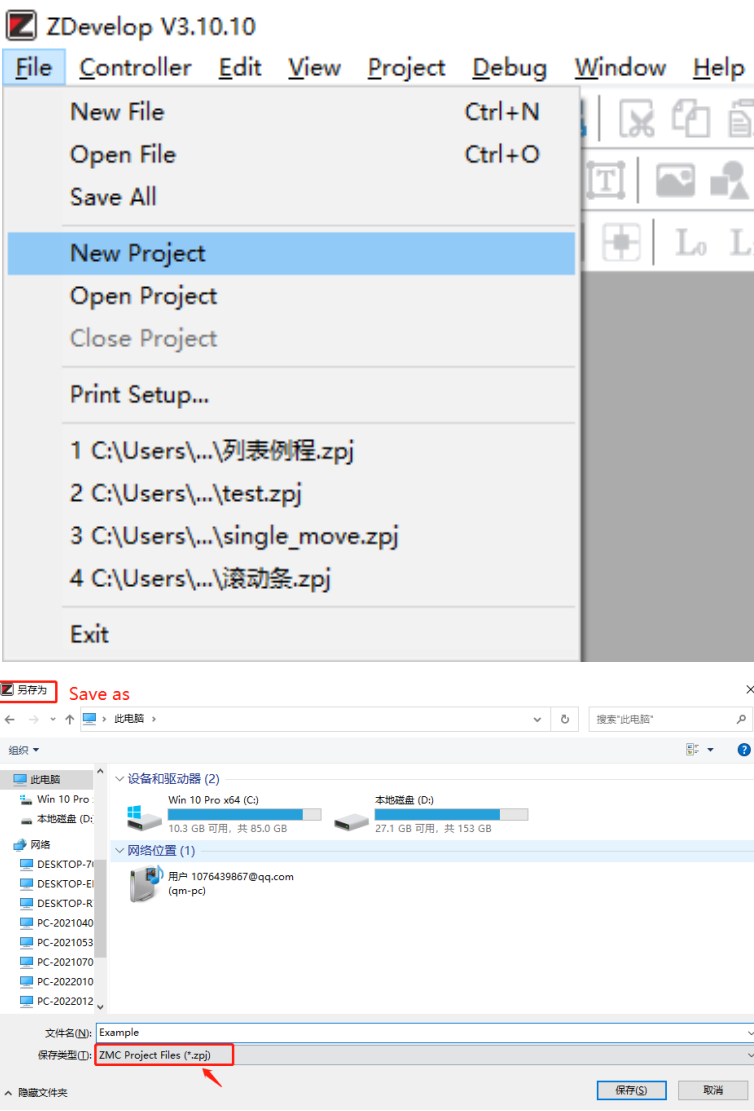
Step	Operations	Display Interface
1	Open ZDevelop, click "File" – "New Project", Save as window will pop up, then enter file name, save the project file with suffix "zpj".	 <p>The screenshot shows the ZDevelop V3.10.10 application window. The 'File' menu is open, and 'New Project' is highlighted. Below the menu, a list of existing project files is visible, including '列表例程.zpj', 'test.zpj', 'single_move.zpj', and '滚动条.zpj'. A 'Save as' dialog box is also open, showing the file name 'Example' and the file type 'ZMC Project Files (*.zpj)' selected. The dialog box also shows the file explorer view with '本地磁盘 (D:)' selected.</p>
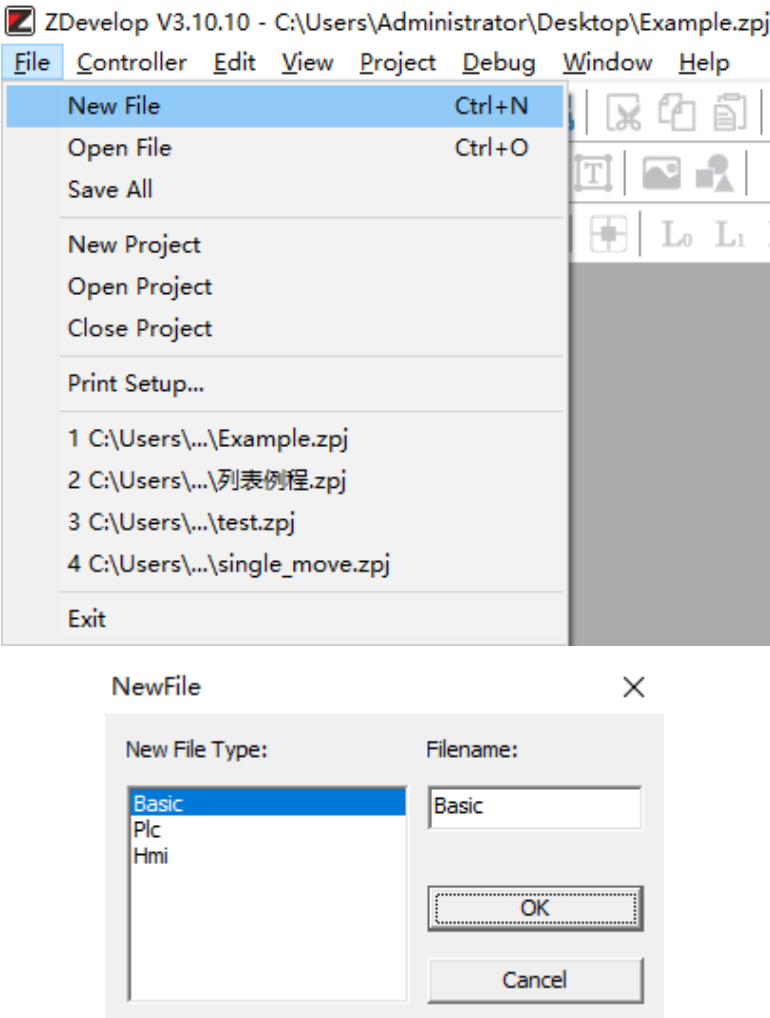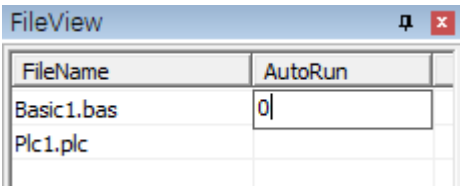
<p>2</p>	<p>Click "File" – "New File", select file type to build, here select Basic, click "OK".</p>	 <p>The screenshot shows the ZDevelop V3.10.10 application window. The 'File' menu is open, showing options: New File (Ctrl+N), Open File (Ctrl+O), Save All, New Project, Open Project, Close Project, Print Setup..., and a list of recent files: 1 C:\Users\...\Example.zpj, 2 C:\Users\...\列表例程.zpj, 3 C:\Users\...\test.zpj, 4 C:\Users\...\single_move.zpj, and Exit. Below the menu, the 'NewFile' dialog box is open. It has two sections: 'New File Type:' with a list containing 'Basic', 'Plc', and 'Hmi'; and 'Filename:' with a text box containing 'Basic'. There are 'OK' and 'Cancel' buttons at the bottom right of the dialog.</p>						
<p>3</p>	<p>Double click "AutoRun", enter task number 0.</p>	 <p>The screenshot shows a 'FileView' window with a table. The table has two columns: 'FileName' and 'AutoRun'. The first row contains 'Basic1.bas' and '0'. The second row contains 'Plc1.plc' and an empty cell.</p> <table border="1" data-bbox="716 1285 1177 1424"> <thead> <tr> <th>FileName</th> <th>AutoRun</th> </tr> </thead> <tbody> <tr> <td>Basic1.bas</td> <td>0</td> </tr> <tr> <td>Plc1.plc</td> <td></td> </tr> </tbody> </table>	FileName	AutoRun	Basic1.bas	0	Plc1.plc	
FileName	AutoRun							
Basic1.bas	0							
Plc1.plc								
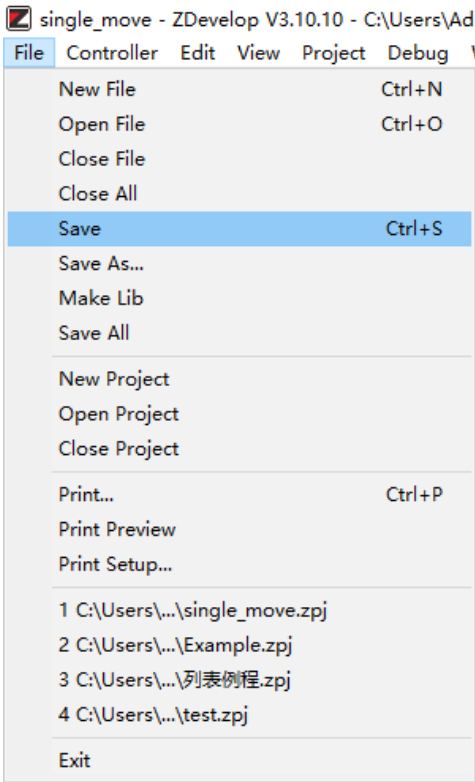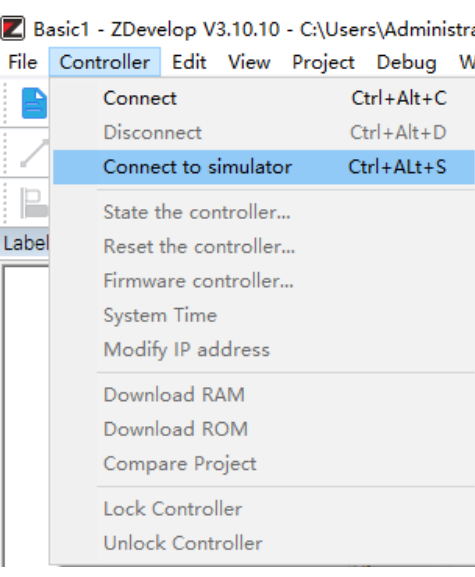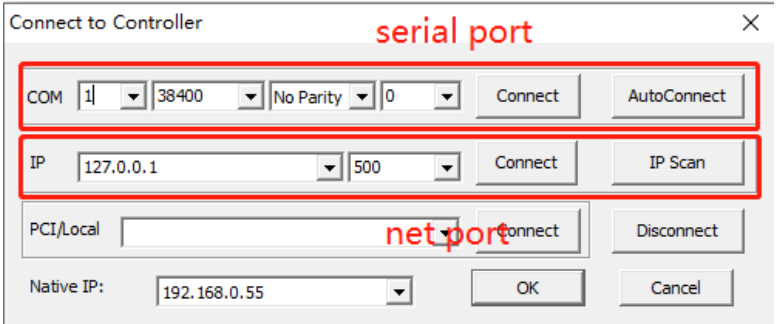
<p>4</p>	<p>Edit the program in program editing window, click "save", new built basic file will be saved under "zpj." project automatically. "Save all" means all files under this project will be saved.</p>	
<p>5</p>	<p>Click "controller – connect", if no controller, select connect to simulator.</p>	
<p>Then, "connect to controller" window will pop up, you can select serial port or net port to connect, select matched serial port</p>	<p></p>	

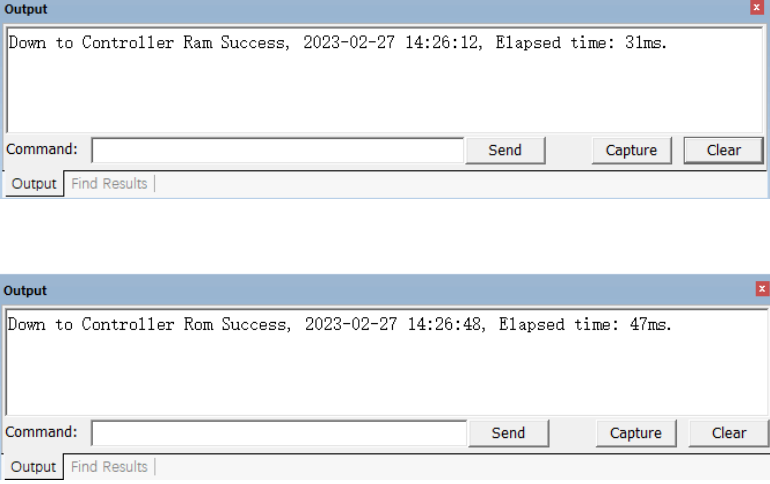	<p>parameters or net port IP address, then click "connect".</p>	
<p>6</p>	<p>Click "Ram/Rom" – "download RAM / download ROM", if it is successful, there is print indication, at the same time, program is downloaded into controller and runs automatically. RAM: it will not save when power off. ROM: it will save data when power off, and when the program is connected to controller again, running according to task number.</p>	 <p>The image shows two screenshots of a software interface's 'Output' window. The top screenshot displays the message: 'Down to Controller Ram Success, 2023-02-27 14:26:12, Elapsed time: 31ms.' Below the message is a 'Command:' input field, and buttons for 'Send', 'Capture', and 'Clear'. The bottom screenshot displays the message: 'Down to Controller Rom Success, 2023-02-27 14:26:48, Elapsed time: 47ms.' It also features a 'Command:' input field and 'Send', 'Capture', and 'Clear' buttons. Both windows have a 'Find Results' button at the bottom left.</p>
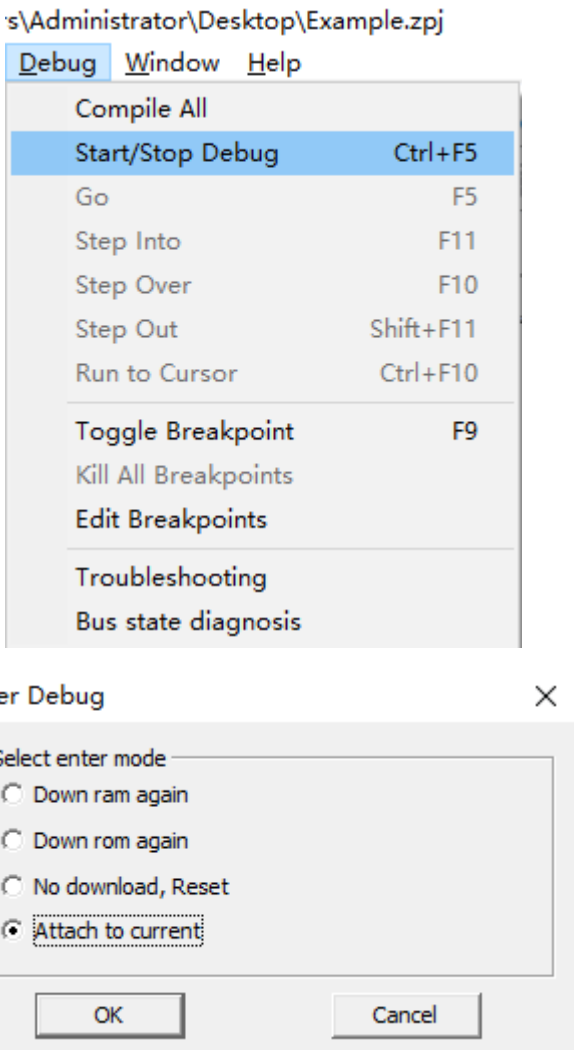
<p>7</p>	<p>Click “Debug” – “Start/Stop Debug” to call “Task” and “Watch” window, because it was downloaded before, here select “Attach the current”.</p>	
----------	--	---
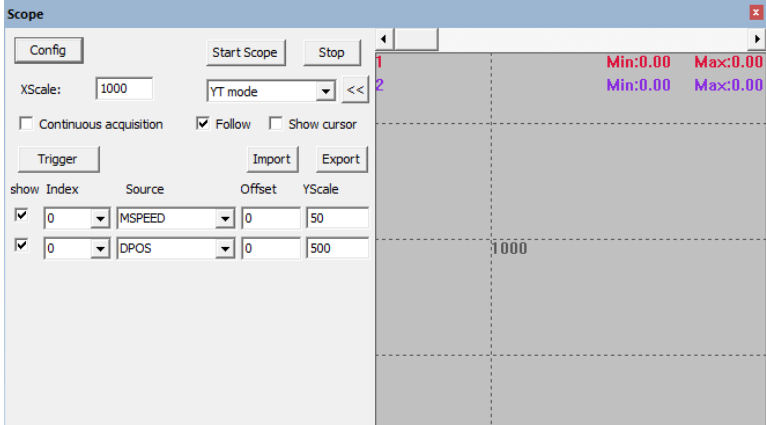
<p>8</p>	<p>Click “View” – “Scope” to open oscilloscope.</p>	
----------	---	--

Note:

- When opening an project, choose to open the zpj file of the project. If only the Bas file is opened, the program cannot be downloaded to the controller.
- When the project is not created, only the Bas file cannot be downloaded to the controller.
- The number 0 in automatic operation represents the task number, and the program

runs with task 0, and the task number has no priority.

- If no task number is set for the files in the entire project, when downloading to the controller, the system prompts the following message WARN: no program set autorun

5.2. PC Upper-Computer Program Application


The controller supports development under various operating systems such as windows, linux, Mac, Android, and wince, and provides dll libraries in various environments such as vc, c#, vb.net, and labview, as shown in the figure below. PC software programming refers to "ZMotion PC Function Library Programming Manual".





The program developed using the PC software cannot be downloaded to the controller, and it is connected to the controller through the dll dynamic library. The dll library needs to be added to the header file and declared during development.

The c++ project development process in VS is as follows:

Step	Operations	Display Interface
1	Open VS, click "File" – "New" – "Project".	<p>The screenshot shows the Microsoft Visual Studio interface with the 'File' menu open. The 'New' option is highlighted with a red box, and the 'Project...' option is also highlighted with a red box. The keyboard shortcut 'Ctrl+Shift+N' is visible next to 'Project...'.</p>

<p>2</p>	<p>Select development language as "Visual C++" and the select program type as "MFC application type".</p>	
<p>3</p>	<p>Select "Based on basic box", click "next" or "finish"</p>	
<p>4</p>	<p>Find C++ function library provided by manufacturer. Routine is below (64-bit library)</p>	
<p>5</p>	<p>Copy all DLL related library files under the above path to the newly created project.</p>	
<p>6</p>	<p>Add a static library and related header files to the project. Static library: zauxdll.lib,</p>	<p>1) Right-click the header file first, and then select: "Add" → "Existing"</p> 

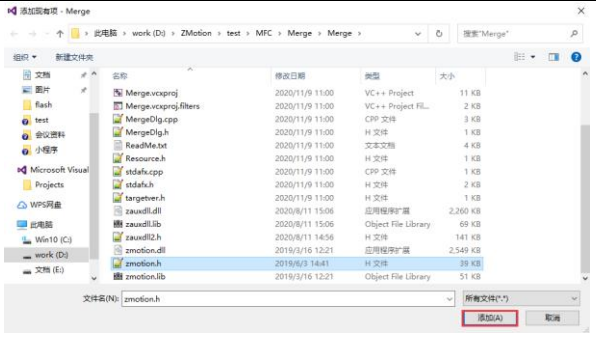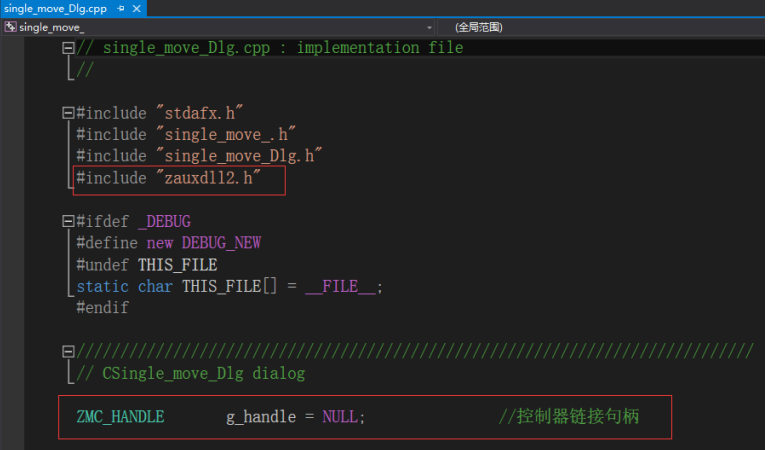	<p>zmotion.lib</p> <p>Related header files: zauxdll2.h, zmotion.h</p>	<p>Item".</p> <p>2) Add static libraries and related header files in sequence in the pop-up window.</p>	
<p>7</p>	<p>Declare the relevant header files and define the controller connection handle, so far the project is newly created.</p>		 <pre> // single_move_Dlg.cpp : implementation file // #include "stdafx.h" #include "single_move_.h" #include "single_move_Dlg.h" #include "zauxdll2.h" #ifdef _DEBUG #define new DEBUG_NEW #undef THIS_FILE static char THIS_FILE[] = __FILE__; #endif // CSingle_move_Dlg dialog ZMC_HANDLE g_handle = NULL; //控制器链接句柄 </pre>

Chapter VI Run and Maintain

The correct operation and maintenance of the device can not only guarantee and extend the life cycle of the equipment itself, but also take technical management measures according to the pre-specified plan or the corresponding technical conditions to prevent equipment performance degradation or reduce the probability of equipment failure.

6.1. Regular Inspection and Maintenance

The working environment has an impact on the device. Therefore, it is usually inspected regularly based on the inspection cycle of 6 months to 1 year. The inspection cycle of the device can be appropriately adjusted according to the surrounding environment to make it work within the specified standard environment.

Check item	Check content	Inspection standards
power supply	Check whether the voltage is rated	DC24V (-5%~5%)
surroundings	Whether the ambient temperature is within the specified range (when installed in the cabinet, the temperature inside the cabinet is the ambient temperature)	-20°C – 60°C
	Whether the ambient humidity is within the specified range (when installed in the cabinet, the humidity in the cabinet is the ambient humidity)	10%- 95% non-condensing
	Is there direct sunlight	No
	With or without droplets of water, oil, chemicals, etc.	No
	Whether there is dust, salt, iron filings, dirt	No
	Whether there is corrosive gas	No
	Whether there are flammable and explosive gases or articles	No

	Whether the device is subjected to vibration or shock	Should be within the range of vibration resistance and impact resistance
	Is the heat dissipation good	Keep good ventilation and heat dissipation
Installation and Wiring Status	Whether the basic unit and the expansion unit are installed firmly	The mounting screws should be tightened without loosening
	Whether the connecting cables of the basic unit and the expansion unit are fully inserted	The connection cable cannot be loosened
	Are the screws of the external wiring loose	Screws should be tightened without loosening
	Whether the cable is damaged, aged, cracked	The cable must not have any abnormal appearance

6.2. Common Problems

Problems	Suggestions
Motor does not rotate.	<ol style="list-style-type: none"> 1. Check whether the ATYPE of the controller is correct. 2. Check whether hardware position limit, software position limit, alarm signal work, and whether axis states are normal. 3. Check whether motor is enabled successfully. 4. Confirm whether pulse amount UNITS and speed values are suitable. If there is the encoder feedback, check whether MPOS changes. 5. Check whether pulse mode and pulse mode of drive are matched. 6. Check whether alarm is produced on motion controller station or drive station. 7. Check whether the wiring is correct. 8. Confirm whether controller sends pulses normally.
The position limit signal is	<ol style="list-style-type: none"> 1. Check whether the limit sensor is working normally,

invalid.	<p>and whether the "input" view can watch the signal change of the limit sensor.</p> <ol style="list-style-type: none"> 2. Check whether the mapping of the limit switch is correct. 3. Check whether the limit sensor is connected to the common terminal of the controller.
No signal comes to the input.	<ol style="list-style-type: none"> 1. Check whether IO power is needed. 2. Check whether the signal electric level matches with IN, and check whether the public ends are connected. 3. Check whether the output No. matches the ID of the IO board.
The output does not work.	<ol style="list-style-type: none"> 1. Check whether IO power is needed. 2. Check whether the output number matches the ID of the IO board.
POWER led is ON, RUN led is OFF.	<ol style="list-style-type: none"> 1. Check whether the power of the power supply is sufficient. At this time, it is best to supply power to the controller alone, and restart the controller after adjustment. 2. Check whether the ALM light flickers regularly (hardware problem).
RUN led is ON, ALM led is ON.	<ol style="list-style-type: none"> 1. Program running error, please check ZDevelop error code, and check application program.
Fail to connect controller to PC through serial port.	<ol style="list-style-type: none"> 1. Check whether the serial port parameters are modified by the running program, you can check all the current serial port configurations through ?*SETCOM. 2. Check whether the serial port parameters of the PC match the controller. 3. Open the device manager and check whether the serial driver of the PC is normal.
CAN expansion module cannot be connected.	<ol style="list-style-type: none"> 1. Check the CAN wiring and power supply circuit, whether the 120 ohm resistor is installed at both ends. 2. Check the master-slave configuration, communication speed configuration, etc.

	<ol style="list-style-type: none"> 3. Check the DIP switch to see if there are multiple expansion modules with the same ID. 4. Use twisted-pair cables, ground the shielding layer, and use dual power supplies for severe interference (the main power supply of the expansion module and the IO power supply are separately powered)
<p>Fail to connect controller to PC through net port.</p>	<ol style="list-style-type: none"> 1. Check IP address of PC, it needs to be at the same segment with controller IP address. 2. Check controller IP address, it can be checked and captured after connection through serial port. 3. When net port led is off, please check wiring. 4. Check whether controller power led POWER and running indicator led RUN are ON normally. 5. Check whether the cable is good quality, change one better cable to try again. 6. Check whether controller IP conflicts with other devices. 7. Check whether controller net port channel ETH are all occupied by other devices, disconnect to other devices, then try again. 8. When there are multiple net cards, don't use other net cards, or change one computer to connect again. 9. Check PC firewall setting. 10. Use "Packet Internet Groper" tool (Ping), check whether controller can be Ping, if it can't, please check physical interface or net cable. 11. Check IP address and MAC address through arp-a.